


High End Smart Phone

Quick Start Guide

Keys Explained

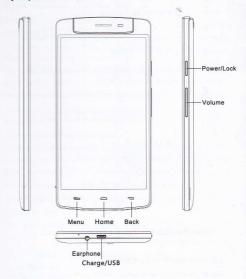

Key	Function	
Power Key	Hold to switch audio profiles, or to turn on or off Airplane mode, or to power off.	
	Press to switch your phone to Sleep mode.	
	Press to wake up your phone.	
Home Key	Press to return to the Home Screen from any application or screen.	
	Hold to see recently used applications.	
Menu Key	Menu Key Press to get the options for the current screen	

Key	Function
Back Key	Press to go to the previous screen.
Volume Keys	Press or hold to turn the volume up or down.

Open the rear cover




Open the back cover as per the arrows direction. (Hint: be careful not to injure your fingers!)

Installing the SIM/SD Card and Battery


Switch off your phone before installing or replacing the battery, SIM, or memory card

- 1. Remove the back cover.
- 2. Hold the SIM card with the cut corner oriented as shown and slip it into the card holder.
- 3. Insert the memory card into the card slot with the metal contacts facing down until it inserts to the right position.
- 4. Insert the battery by aligning the gold contacts on the battery with the gold contacts in the battery compartment. Gently push down on the battery until it clicks into place.
- 5. Press the cover gently back into place until you hear a click.


Inserting Sim card & SD card:

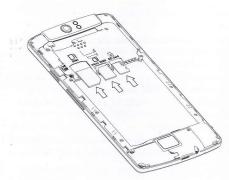

Inserting the Battery:

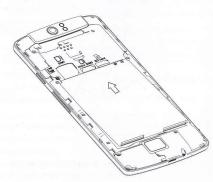


Rotatable camera

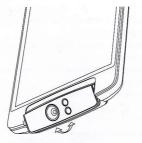

Rear touch

No all models have this function, please check if the model you got is supporting this function! (Tap **System settings > Rear touch** to open this function.)

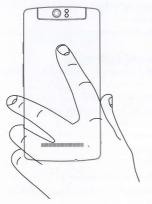

Setting Up Your Phone for the First Time

When you first power on your phone after you purchase it or reset it to factory settings (see chapter Sorting out Your Phone Settings – Privacy: Reset to Factory Settings), you need to do some settings before using it.

Tap Menu Key in the standby mode, then select System settings > Language & input > Language to change the language you want to use, if needed.

Getting Around Your Phone

Touch Control

You can use finger gestures to control your phone. The controls on your touch-screen change dynamically depending on the tasks you're performing.

- Tap the buttons, icons, or applications to select items or to open applications.
- 2. Flick the screen to scroll up, down, left or right.
- 3. Point, drag and drop to move particular items across the screen.
- 4. Double-tap the screen to zoom in/out an image.

NOTE: You can view the phone screen in portrait or landscape orientation simply by holding it upright or turning it on its side. Not all screens are viewable in landscape.

Home Screen

In the Home screen, besides the shortcut icon is displayed, you can also set your own wallpaper, add the widgets or application shortcuts you need, or remove them as you like.

Status and Notification Icons

Your phone will tell you exactly what's going on by showing you simple icons. Here's what they mean.

4	USB connected	Missed call
+	Airplane mode	Signal strength
[2]	Battery charge	New message
10	Meeting mode	Wi-Fi network

(0)	Alarm set	\odot	Earphone insert
*	Silent mode	ih ih	Signal searching
0	Bluetooth icon	a	USB debugging connected
	Data Conn off	9	New Wi-Fi network detected

Open an Application

Tap , then select an application icon to open.

Open Recently-Used Applications

Hold Home Key from any screen. The phone will display the applications you used recently, tap the application you want to open.

Phone Calls

Making Calls

There are many ways to make a call with your phone. And they're all easy to do.

Calling from the Phone

- 1. Press Home key > tap -> Phone or tap on the Home Screen.
- 2. Enter the phone number using the on-screen keypad.

Tap
to delete wrong digits.

3. Tap the dial icon.

TIPS: To make international calls, hold to enter the "+".

Calling from Your Contacts

- 1. Press Home key > tap -> People.
- Slide your finger to scroll the contacts list and tap the contact name you want to call, when the contact details appear, click on the number, choose the SIM card to dial.

You can search for a contact by tapping on the screen.



SHENZHEN CHUANGXINQI COMMUNICATION CO., LTD.

Add: Room 1907, Block A, Electronic Technology Building, No. 2070, ShenNan(M)Road. Futian District. Shenzhen

Tel: 86-755-8377 8271

Fax: 86-755-8377 9580 / 86-755-8377 9389

Calling from Your Call Log

- If you have opened the dialer, touch the call log tab to open the call records, respectively touch all, dialed, received, missed call button to display a list of the corresponding call records.
- 2. Tap dial icon on the right side of the current record.

Calling from a Text Message

If a text message contains a phone number that you want to call, you can make the call while viewing the text message.

- 1. Press Home key > tap -> Messaging.
- Tap the conversation and then find the message that contains the phone number you need.
- 3. Tap the message, the phone will list the options.

Receiving Calls

Answering a Call

Tap the icon, drag to right to answer the call.

Rejecting a Call

Tap the icon, drag to left to reject the call.

Ending a Call

Tap to finish a call.

Contacts

You can add contacts on your phone and synchronize them with the contacts in your Google account or other accounts that support contact syncing.

To see your contacts, Press Home key > tap People

Creating a Contact

- 1. Tap from the Contacts Screen.
- 2. Choose the storage location to save the contact
- 3. Enter the contact name, phone numbers, and other information, and then save it.

Searching for a Contact

- 1. Tap on the Contacts Screen.
- 2. Input the contact name you want to search for.

The contacts matched will be listed.

Messaging

Getting Connected to the Internet

Your phone's impressive networking capabilities allow you to access the Internet or your corporate network with ease.

You can use default connection settings to connect to the Internet via your mobile network, or Wi-Fi.

The network connection can be enabled /disabled manually. Just press

Home kev > tap :> Settings > SIM management > Data

connection.

Adding a New Network Connection

To get connected via your mobile network you need a data plan with your service provider. Also if the networks settings are not pre-configured on your phone, please contact your provider to get the necessary information.

Turning On Wi-Fi

Wi-Fi provides wireless Internet access over distances of up to about 300 feet.

- 1. Press Home key > tap 3 > Settings.
- Click next to the Wi-Fi menu to turn it on, click you can turn off the Wi-Fi function.

Connecting to a Wi-Fi Network

1. Press Home key > tap 2 > Settings > Wi-Fi.

When the Wi-Fi is on, the Wi-Fi access points, or "hotspots", that your phone has detected are displayed with their names and security settings.

Tap an access point to connect to it.

NOTE: If security features are implemented, you'll need to enter a password.

Checking the Wi-Fi Network Status

You can check the Wi-Fi network by looking at the icon in the status b

Enabling the Wi-Fi Hotspot

You can use the phone as a portable WLAN router, to share your phone's internet connection with one or more PC or other devices.

NOTE:

- · When the portable Wi-Fi hotspot function is enabled, you can't use your phone's applications to access the internet via its Wi-Fi connection.
- · You can configure the Wi-Fi hotspot as follows: 1 Press Home Key > tap Menu Key > System settings > More (WIRELESS)
- & NETWORKS), click next to the Wi-Fi hotspot to turn it on.
- 2. Tap Wi-Fi hotspot to set up & manage portable Wi-Fi hotspot. Now you
- can find the hotspot on other devices and connect to it.

Disabling the Wi-Fi Hotspot

Press Home Key > tap Menu Key > System settings > More (WIRELESS & NETWORKS)> Tethering & portable hotspot and click make next to

the Wi-Fi hotspot to turn it off.

Browsing the Internet

You can use your phone to get on the Internet via a network or Wi-Fi connection

Press Home Key > tap 3 > Browser.

- There are different ways to open web pages: Tap the address bar to enter the website you want to browse. Then tap
- on the touch keyboard. • Tap Menu Key > Bookmarks/History and select a bookmark or history to

Taking Pictures with Your Camera

Your phone has camera function. Open it by pressing Home Key > tap 22 >

Camera

Tap 5 to take a picture. To view it, just tap the picture in the right corner of the screen

Playing Your Music

You can play digital audio files from your phone's memory card in Music. Before playing music, you need to copy music files to memory card location.

- 1. Press Home Key >tap > Music to open the Music Screen.
- 2. Click the Music category label > music files to start playing.
- 3. Adjust the volume with Volume Kevs.

Opening Your Gallery

Press Home Key > tap > Gallery. You can use Gallery to view pictures and play videos. You can also do some basic editing of your pictures - such as setting them as wallpaper or contact photo, and sharing with friends.

Playing Your Videos

Press Home Kev > tap >Video Player. You can use Video Player to play videos on the phone and memory card.

Sorting out Your Phone Settings

Setting Date and Time

- 1. Press Home key > tap > Settings > Date & time.
- 2. Tap Automatic Date & time and select Off if you want to set the time and date by yourself.
- 3. Set date, time and change the other options.

Display Settings

Press Home key > tap Settings > Display, you can adjust the display settings as you like:

- . Brightness: Adjust brightness of the screen.
- · Auto-rotate screen: Rotate the screen display as you rotate the phone.
- · Screen timeout: Set the delay for the screen to automatically turn off.
- . Wallpaper: Set the wallpaper of the phone
- . Theme: Set the theme of the phone.

Audio Profiles Settings

By pressing Home Key > tap 3 > Settings > Audio profiles. When you choose the General mode, you can adjust the sound settings, such as ringtones, volume and vibrate.

Language Settings

You can change the language of your phone system in two simple steps.

- 1 Press Home key > tap > Settings > Language & input > Language.
- 2 Select a language from the list given.

Security Settings

Here's how to protect your phone and SIM card from unauthorized use.

Protecting Your Phone with a Pattern

Creating Your Screen Unlock Pattern Press Home key > tap Settings > Security > Screen lock > Pattern.

- 1. Read the instructions on-screen and watch the example pattern, and select Next.
- 2. Drag your finger to connect at least four dots, draw the pattern.
- 3 Touch Continue.
- 4. Redraw your pattern to confirm.

Unlocking the Screen with Your Pattern

- 1. Press Power Key to wake up the screen. 2. Draw the pattern you set to unlock the screen.
- If you make a mistake, your phone will ask you to try again.

Applications

Press Home Key > tap -> Settings > Apps.

Installing an Application

- You can install a non-Marketing application if you have allowed the installation of it. Make sure that you select an application developed for your device and processor type before installing it. 1. Copy the application file to the SD card and install the card on your phone.
- 2. Press Home key > tap > File Manager, and open the folder where the application file is.
- 3. Tap the file to start installation.
- 4 Read the installation instructions that come with the application and follow it to complete the setup.

NOTE: please take your handset as the standard.

Removing an Application

- 1 Press Home key > tap 3 > Settings > Apps.
- 2 Select the application you want to delete.
- 3. Tap Uninstall and OK to confirm.

Moving an Application

You can move the applications downloaded or installed on your phone to the memory card when the phone memory is full. You can also move applications to your phone if the memory card is getting full.

NOTE: Not all applications can be move to your phone or memory card.

- 1. Press Home key > tap 3 > Settings > Apps.
- 2.Click the application you want to move on the Downloaded tab.