



Quick Start Guide
Start Here

Basic terms

Root: Super Android system is the administrator user account, which has the authority to control the whole system, and only have the privileges to the original system can be refreshed for the revision of the various systems;

APK: Android application types, with the cab and the Windows Mobile platform, like exe files, the user can be installed directly;

Eclari: The name of one of the Android platform, version, and the corresponding version number is 4.4, Smartphone use this version;

WebKit: Core Android platform, browser, and now Apple's Safari, Google's Chrome and FireFox are using this kernel as a web page rendering mechanism;

GPhone: To use Google Android mobile phone operating system developed collectively, smartphone, etc.;

ActiveSync: Push email solution to support Microsoft proprietary technology, pre-primary mailbox servers at Microsoft (Exchange server) to provide support, and now Google's Gmail also provided support

How Introduction

Introduction phone keys

Menu button: Click on the program display the corresponding menu item, the user can choose the corresponding sub-menu functions;

Home button: Click on the background into the current application will, and enter the main interface; Note that using this key will not really exit the application, the application will continue to run in the background;

Back button: Click to fall back to previous step of the operation of the interface;


Introduction widgets

1, long press the space of the idle -choose widgets add widgets to the main screen: in the widgets interface - > Long press a widget

can add to the main screen


2. change the position of widgets: in the main interface, Long press a widget, sliding the widget can change the position of the widget in the main screen

3. Delete widgets: in the main interface, Long press a widget, the top of the main screen will be delete ", sliding the widget to delete , when there is red ", can let go, the widget is deleted

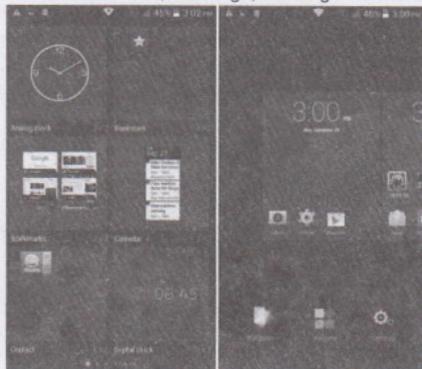

Information Function


To sort the information by contacts, the conversational arrangement, user understanding of the history of the entire communication information, information sorted according to first contacts, including contact name for the first numbers, then letters (A-Z)

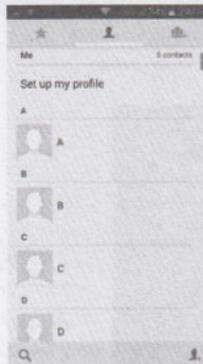

Send MMS


New information -"click  , add "function - " to select the desired additional content;

New information-click the menu button -add theme

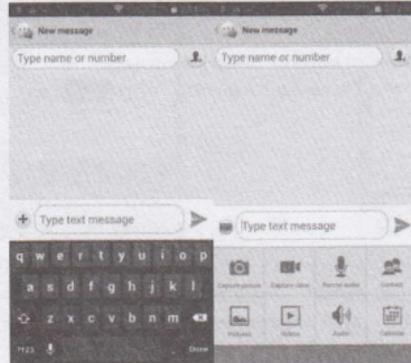

Replacement SMS reminder tone

Access to the information interface - "click the menu button, select "Settings "function ,select "Notifications "function ,Select "Ringtone"function

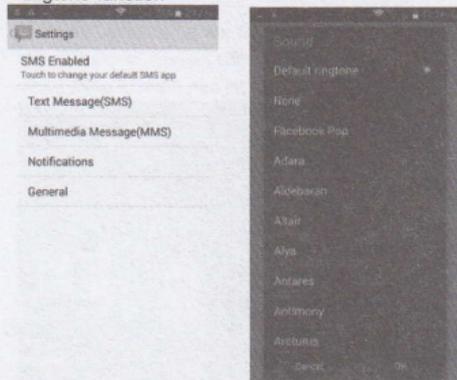


View the sender information

Access to the information screen - "Select the message - " click - "click [info icon] ,can view the sender information"- "click [favorites icon] can addto favorites"



Forwards

Access to the information screen - "Select the message - "short press the message can display the message details" -Long pressthe Information, there shortcut keys - "select Forward "function

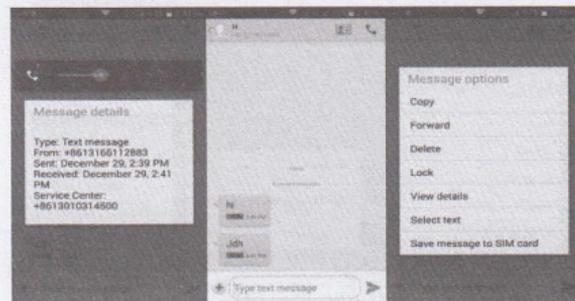


View information details

Access to the information screen- "Select the message-" Long pressthe Information, there shortcut keys -"select View details "function



Delete information session specific information on a particular
 Access to the information screen - "Select the message - " Long
 press and Information, there shortcut keys - "select "Delete
 "function

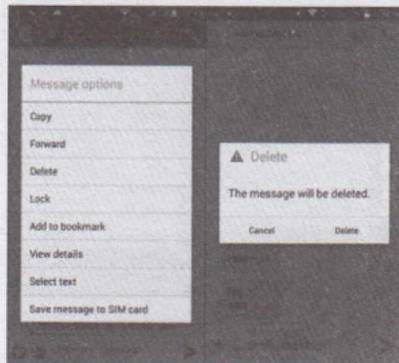

EmojiKeyboard

Support rich interesting Emoji input,make your message more

personal




Contact Features

contacts groups, contacts and favorites feature;


Book description

By the first number, then sort the way English characters (A-Z)

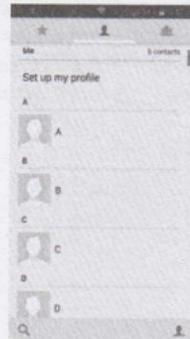

Favorites Introduction


Included collection of contacts, and users often call the recent contact information, part of the overall fabric Top of the contact information for the user collection, lower often call into the system default contact information;

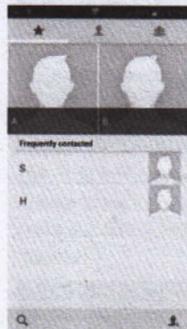

Contact Search

Into the contact interface - "click [magnifying glass] button

Search supported by the first letter and the entire search string

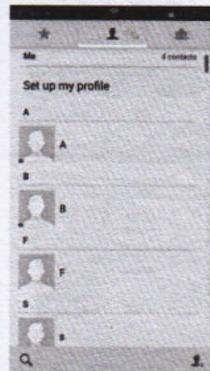

Import contact information methods


using Bluetooth to achieve data synchronization

Andy 5E1 phone and the original binding, using Bluetooth to achieve synchronization of contacts;

Call History Features

One by one to delete call records

Enter the call log interface - "Click the menu button –Select the delete Function- " Choose the delete call records- click ok button-"Click [delete icon] , choose the resources of the SIM card"

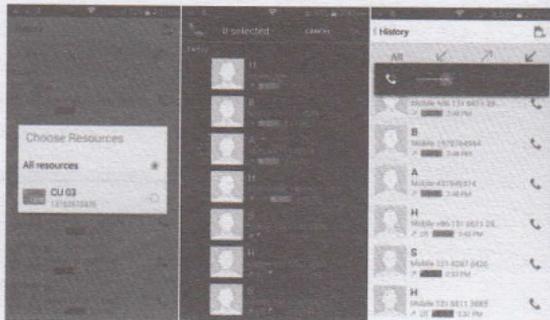

Contact information stored call records

Enter the call log screen - "Select the Save call log - " click- "select "Add to Contacts "feature

Or directly into the call log entry, -click  button -select "Add to Contacts "feature



Dailand caller ID display Features

New dial-up procedures will be according to your habits, automatic intelligent recommend commonly used contact, convenient to speed dial, Some well-known enterprises or service of the number of the caller, using Google's



Paste the text / copy Features

Into the input field - "input string, long press and enter the region, there shortcut keys - "selectAll "" cut All ", "copy All", "pasteAll"



E-mail Features

Configuring mail account

Enter the Program Group screen - "Select"Email"application -"Enter e-mail address and password

If the system automatically recognizes the mailbox information, will automatically configure; if the system does not recognize, will require users to type IMAP mailbox, or POP3, enter the appropriate configuration information.

For example:

E-mail Address: olsaner@163.com

Password:


Configure multiple email accounts

Enter the Program Group screen - "Select"Email"application -" Click on the menu button-select setting function -select "Add Account"feature




Delete email account

Enter the Program Group screen - "Select"Email"application - Click on the menu button-select setting function –select account - " select the "RemoveAccount"function

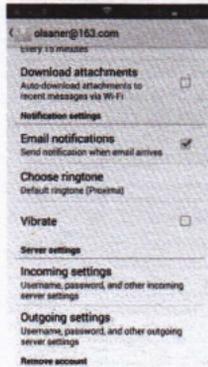

Email check frequency setting

Enter the Program Group screen - "Select"Email"application - Click on the menu button-select setting function –select account - " select I box check frequency "function

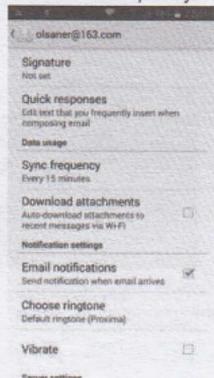

Desktop Features

The common features into the desktop Interface into the program group - "Select the desktop into the application -"long by application, the application will be placed to the desktop;



New lock screen and color schemesFunction

Blue/green color design has changed into white/gray, more simple, the other ICONS style also further flattening,Also joined the translucent interface style, to ensure the status bar and the navigation bar can play better effect in application.



Wallpapers

In the desktop space - the "long Click the desktop, the shortcut keys -"Select"Wallpaper"feature.




Application Packet

In the desktop space – sliding the application to another application – click the application to open New Folder



Change the folder name

Open the folder on the desktop - "click Input box - Rename Folder

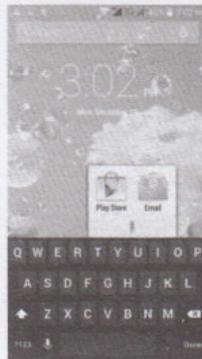

Add contacts to your desktop

In the widgets space -long press thecontact widget -" choose a contact



Add URL to the desktop

In the widgets space -long press theBookmark widget -" choose a bookmark



Add a playlist to your desktop

In the widgets space -long press the Music playlist widget -" Select a playlist


(operation method and procedure as above)

Delete the contents of the desktop

Select the desktop content - then "Long press the icon - " into the remove icon to the lower right corner of the screen

Full ScreenFunction

Whether you are looking at the books, or use any application, you can easily into the full screen mode

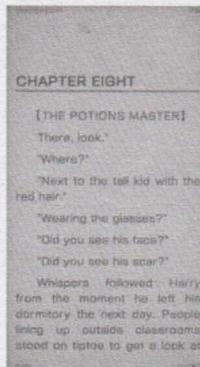


Wireless Printing Function

You can use Google Cloud Print to Print the photos, documents, or web pages-gallery-choose one picture -menu-print-set a google account -choose print /save as PDF"



Bluetooth Function

Select "Settings" -" Select "Bluetooth"function

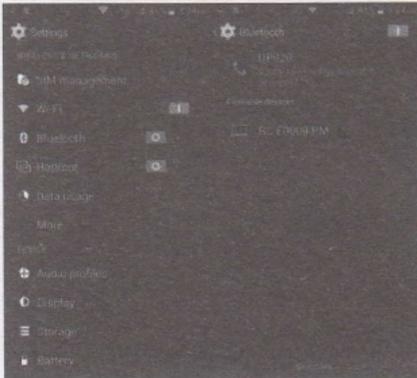


Wifi Features

Select "Settings"- "Select Wi-Fi"- select "Add NETWORK ", select the desired access APN



Flight mode Function

Select "Settings"- "Select More"- choose "AirplaneMode"function

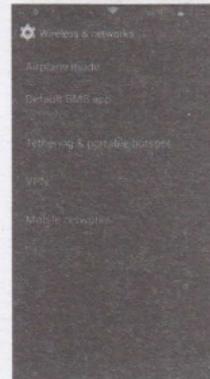

Or select the phone, "Off"button - "select the"Flight Mode "function




Black unlock

Select "Settings"->"Select " security "-> Select the " Screenlock"-Pattern




Restore to factory default

Select "Settings"->"Select"Backup&reset "-> select "Factory data reset"

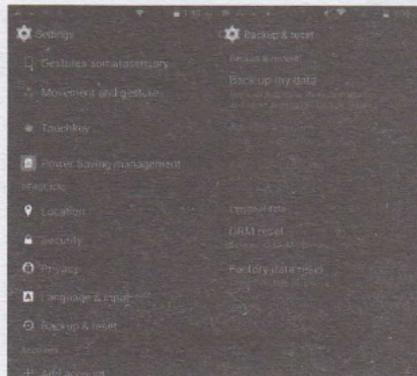


Storage Settings

Select "Settings"->"Select"storage"

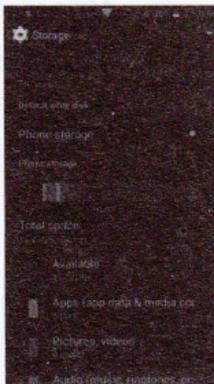

GPS Settings

Select "Settings"- "Select " location"

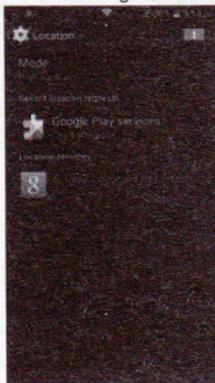


English language switching phone

Select "Settings"- "Language & input "- Select " Language ", select English or other




Input set

Select "Settings"- " Language & input "-click  button

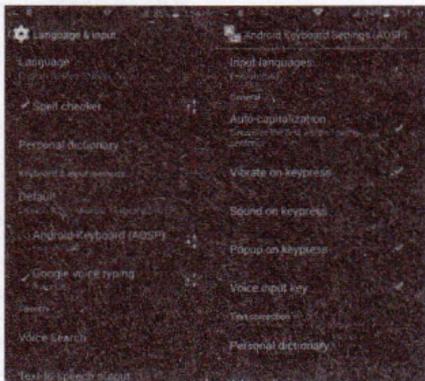

Replacement mobile phone input method


Select "Settings"- " Language & input "-Default

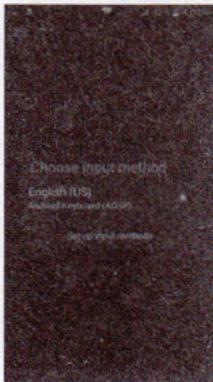

Android phone data cable links


Select "Settings"- "Select"Developer options"- "Check"USB debugging "

Products installed on your computer drive, the link on the USB cable;

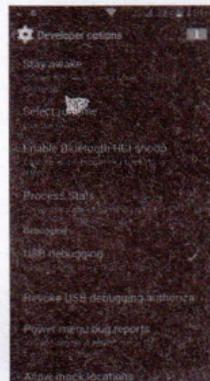

Introduce cross-screen display

Select "Settings"- ""Display "- "Check"Auto- rotatescreen, " according to the phone automatically change the direction of rotation

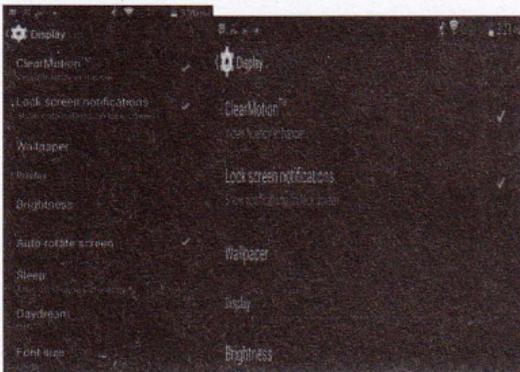

Browser Features

Visit the website

Browser - "Click url input area "-" Enter the URL of web browsing-click  button



Webpage not available

The webpage at <http://www.google.com/fk/m> might be temporarily down or it may have moved permanently to a new web address.

Suggestions:

- Make sure you have a data connection
- Reload this webpage later
- Check the address you entered

Download Web page images or other


objects

Browser - "browse the web, long press on the picture, there shortcut keys, choose "Save Image"function



Browser settings / search page

Browser - "browse the web "-click "menu button",-select settings / find on page

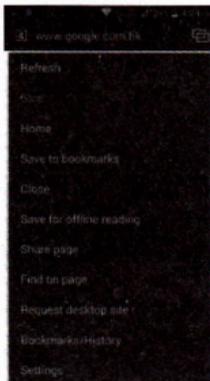

Q/A

1. How to turn off the software running in the background too much

Download Advanced Task Manager Advanced Task Manager and select install, it can help you achieve, automatic end of the program services, to switch between programs, display memory information, exclusion list, an end of all widgets, fast uninstall program and other functions, To free up memory space, reducing the CPU's operation long pressure, increase speed, to extend the purpose of standby time.

2. How to quickly set up Email

In the Android system, can automatically set the POP3 or IMAP e-mail most accounts, the e-mail application, directly enter the e-mail address and password, if not automatically fit in the mailbox,

the mailbox will be required by user Server information. See details in front of the "E-mail Features"section.

3. How do I view the capacity of SD card case

Select the "Settings"-Select Storage -select "SD card and phone memory", will see the current SD card capacity information phone

4. How to save Power.

First, reduce the screen brightness can be used in peacetime by reducing the brightness to reduce battery consumption, in the "Settings " in the "sound and display" found on "brightness", and then sliding scale in respect of the brightness can be set Android phones;

Close GPS global positioning, in the "Settings"and select" location services" -uncheck the following "Enable GPS satellite set" can be; Usually if you do not use the Wi-Fi, Bluetooth headset can be improved by turning off these options to the standby time, turn off the WLAN search can save about 30% to 40% of standby time; Usually close calls and text messages to remind vibration;

5. How smartphone lock screen, to prevent others from using

In the "Settings", select " Security "and then select "screen lock""pattern", to set individual unlock pattern, to prevent strangers use or purpose of ensuring privacy of confidential documents.

6. Why does not the USB data cable links your computer

Confirmed in the phone's "Settings"-""Developer options"- in the "USB debugging"functionality check; also installed the correct USB driver

7. How to install a program on a non-Android Market

Select "Settings"-"" Security ", the"unknownsource "functioncheck

8. In browsing the web or other applications, how to switch to other applications

If you need to open when browsing other applications, you can long press the Home key to achieving long task switch, long press return directly to the desktop (note that the system default task only last 6 months)

9. How to enter the silent mode quickly

Long press the power key, and directly into the pop menu to select the silent mode.

10. How to forward SMS / MMS

Long press and information applications in the information content of an item in the list, until the pop-up shortcut menu, select "Forward" can be realized.

11. how to paste and copy text

Into the input field - "input string, long press and enter the region, there shortcut keys - "selectAll""cutAll ""copy All""paste All"

12. In the phone program group is installed too many applications, how to solve

In the desktop space – sliding the application to another application – click the application to open New Folder

13. Contacts are sorted, can change

Sort of way platform, the first number, then letters, then the Chinese way of sorting; the user can not set their own sort

14. Contacts whether to support the group

In the contacts interface-select group

- **15. contacts and SMS storage capacity limits the number of**
Platform reason, contacts and SMS storage for no clear limit value, depending on the size of the current mobile phone memory space