




Tablet PC User Manual

Tab of Contents

Introducing Device	2
Battery.....	4
SD card	5
Home screen and Application list.....	8
HDMI & Host	10
Language & keyboard	11
Manage Applications	12
Music	13
Photo	14
Video	15
Wi-Fi.....	16
Browser.....	17
Gmail	19
Market.....	21
YouTube.....	22
Camera.....	24

Introducing your Device

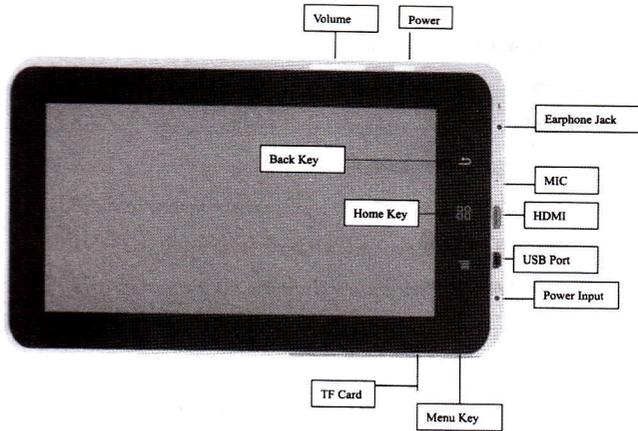

Features:

Power key	<p>Press and hold the power on/off to open/close Device</p> <p>Press to put the Device into sleep mode when it works.</p> <p>Press to put the Device into awaken when it is in sleep mode.</p>
Home key	<p>Press to return to the Home screen from anywhere.</p> <p>Press and hold to be current viewed Applications window</p>
Menu key	<p>Press to open a list of actions available on the current screen.</p> <p>Press and hold to see the menu shortcuts for that screen.</p> <p>The shortcuts will blink in place as you hold down the Menu</p>

	key.
Back key	Press to go back to the previous screen or to dismiss a dialog box or menu.
Power switch	Slide to turn on/off the device power.

Battery

You can charge your Device via charger. Device has an internal charging battery. We suggest to charge up the battery when the battery power is low.

Charge via the charger


1. Plug in the Power adapter to Power adaptor port of device, Battery charge LED will light up as blue color. Charging procedure will be completed once the LED turns green.

2. During battery charging, you can operate MID.

The charging time will be longer when operating and charging at same time.

SD card

Your device comes with a removable microSD memory card where you can store multimedia files, such as video clips, music tracks, sound files, and images.

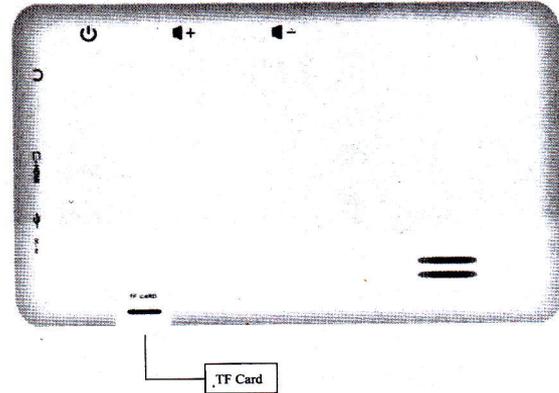


Copy files to the memory card

You can transfer files such as music and pictures between your Device and your computer.

To view files on your MID, just launch the appropriate application and navigate to the file within that application.

1. Connect your MID to your computer using the USB cable.
2. On the home screen, press the **Menu** key.
3. Touch **Notifications**, touch **USB connected**.
4. Touch **Turn on USB storage**.

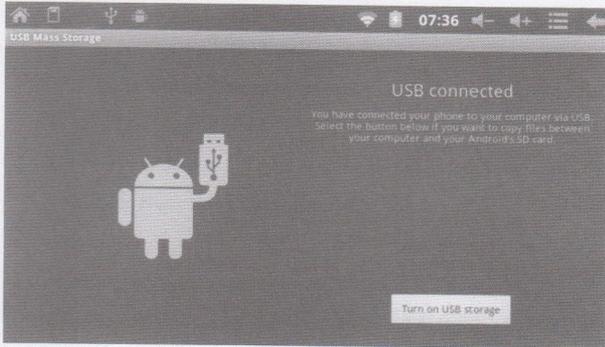

5. On your computer, go to the **Removable Disk** folder.
6. Locate the files on the computer that you want to copy to your MID.
7. Copy and paste files to the desired location in the **Removable Disk** folder.


Delete files on the memory card

1. Locate the file that you want to delete.
2. Touch and hold the file name.
3. Touch **Delete**.



View available memory space

1. Touch **settings**, Touch **storage** to view available memory space for your memory card and Device.

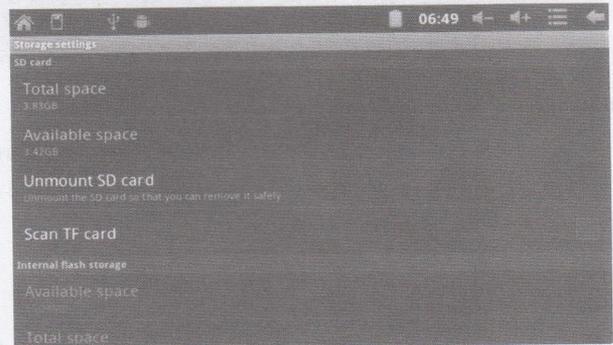

Home screen and Application list

The Home screen is your starting point for using all the applications on your Device .You can customize your Home screen to display applications, shortcuts, and widgets.

To open the application list, tap on the Home screen.



Notification and connection icons


Along the top of your screen is the status bar. On the left side, icons will appear, notify you of new messages, upcoming calendar events, alarms, and more. On the right side of the status bar, you will see the connection status icons.

Read notifications

When you see a notification in the status bar, tap the bar and slide your finger down the screen to open the list of notifications.

To open the notification, tap the item.

To clear notifications, Touch **Clear** at the top of the notification window.

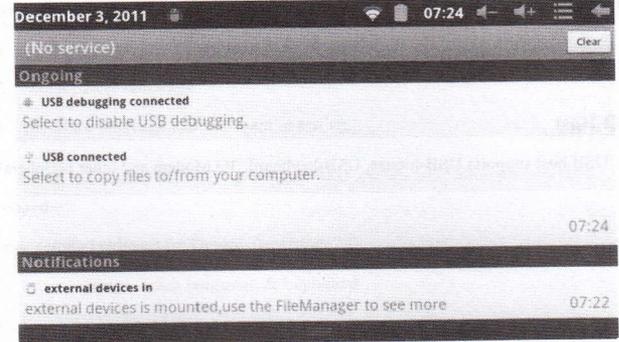

To close the notification window, slide your finger up the screen.

Icons of Status Bar:

	New e-mail message		Downloading
	Upcoming event		Content downloaded
	Song is playing		Alarm is set
	SD card is full		Data is syncing
	Battery change		Wi-Fi service connected
	No SD card		Battery is charging
	USB connected		Wireless services are off
	warning		Silent mode
	Volume reduction		Volume increase

HDMI

Use HDMI Cable to connect Device and LCD Device ,then you can see the information and Operate it on the LCD Device

USB Host

USB host supports USB-mouse, USB-keyboard, 3G Modem and other peripherals.

Language & keyboard

Language


You can setting language for Device To setting

1. Touch **settings**, touch **language & keyboard**.
2. Touch **Select language**.
3. Touch the language that you want to setting.

Keyboard

You can setting keyboard for Device.To setting

1. Touch **settings**, touch **language & keyboard**.
2. Touch the keyboard that you want to use.

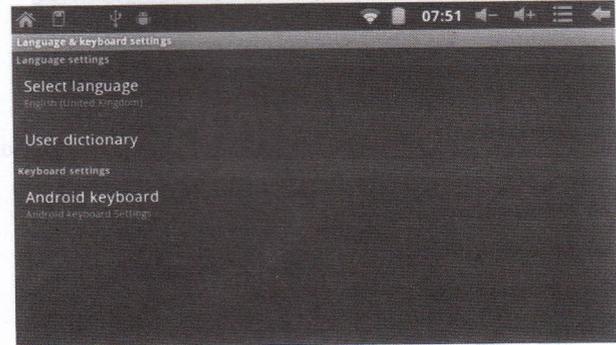

You can install other keyboard for Device.

Manage Applications


Allow install of non-Market applications

1. Touch **settings**.
2. Touch **Applications**.
3. Touch **Unknown sources**.



Uninstall Application

1. Touch **settings**.
2. Touch **Applications**.
3. Touch **Manage applications**.
4. Touch the application that you want to Uninstall.
5. Touch **Uninstall**.
6. Touch **OK**, Touch **OK**.

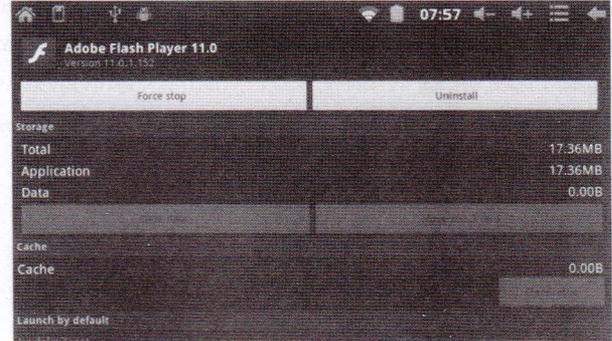

Music

Access and play music

1. On the home screen touch the **Application** button.
2. Touch **Music**, Touch **Songs**.
3. Touch the song to play.

Delete play lists

1. On the home screen, touch the **Application** button.
2. Touch **Music**, touch **Playlist**.
3. Touch and hold the play list you want to delete.
4. Touch **Delete**

Photo

Your Device can play the photo file formats as follows: JPG、BMP、PNG、GIF. You can keep these files in SD card.

Slideshow the photos:

1. Copy the photo to SD card.
2. On the home screen touch the **Application** button.
3. Touch **Gallery**.
4. Touch the folder of photos. Touch the photo.
5. Touch **Slideshow**.



Video

Your MID can play the video file formats as follows: AVI,MKV(XVID/px/H.264),MOV,TS,M2TS,RM/RMVB,FLV,3GP,MPEG,DAT,MP4(support to 2160P:3480x2160). You can save these files on SD card.

Play a video:


1. Copy the video to SD card.
2. On the home screen touch the **Application** button.
3. Touch **Gallery**
4. Touch the video.



Wi-Fi

Your Device can connect to Wi-Fi networks. To connect

1. Touch **settings**, touch **wireless & networks**.
2. Touch **Wi-Fi** to turn it on. Touch **Wi-Fi settings**. Your Device scans for available Wi-Fi networks.
3. Touch the Wi-Fi network that you want to connect to.
4. Touch **Connect**. Some network may need you input the password.

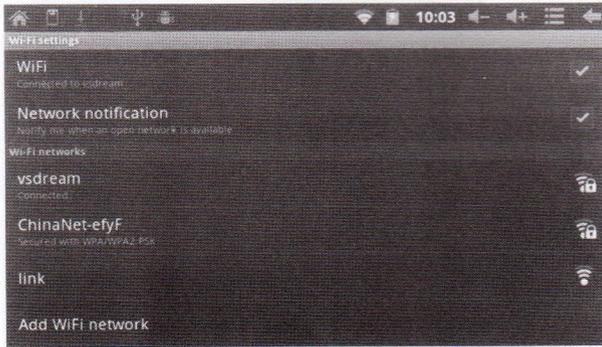

On the Wi-Fi settings screen, press the **Menu** key, touch **Advanced**, you will get more settings for Wi-Fi.

Browser


Go to your home page

The Browser always opens to the last Web page you were viewing.

The first time you enter the Browser after powering on, your home page will display.

Change your home page

1. Touch **Browser**.
2. Press the **Menu** key.
3. Touch **more**, touch **settings**, touch **Set home page**.
4. Type the site address and touch **OK**.

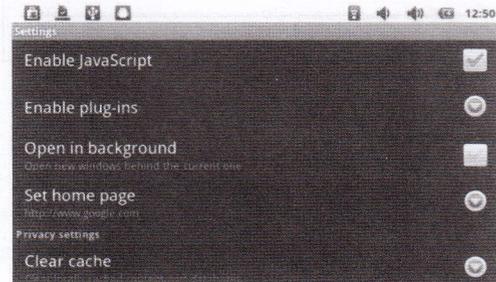

Visit Web pages

1. Touch **Browser**.
2. Press the **Menu** key.
3. Touch **address bar**.
4. Type the Web address, touch **Go**.




Need network connection

Gmail

With Gmail, all your messages on the same subject are threaded together into conversations. To read the messages in a conversation, open the conversation and scroll through the individual messages. The most recent message appears at the bottom.

All the Gmail that you fetch to your Device is delivered to your Inbox and the Inbox is your default Gmail view. The total number of unread messages displays in the title bar and individual unread messages display in bold. If you have labeled a message, its label appears in a colored rectangle to the left of the date.

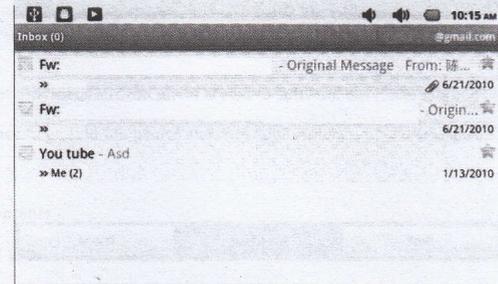

Read new messages

1. On the home screen, touch **Gmail** to display your inbox.
2. Touch a message to read.


Write new messages

1. On the Home screen, touch **Gmail** to display your Inbox.

2. Press the **Menu** key.
3. Touch **Compose**.
4. Type a name or e-mail address in the **To** field. Matching contacts will appear.

Select the contact or continue typing.

5. Type the subject and message.
6. To attach pictures, press the **Menu** key and touch the picture to attach.
7. Touch **Send**.

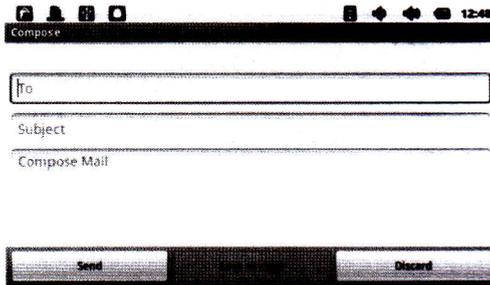

Need network connection

Maps

Find a location

1. On the Home screen, touch the **Application** button.
2. Touch **Maps**.
3. Press the **Menu** key.
4. Touch **Search**.
5. Type an address. Touch **Go**.
6. Touch to see the result on a map.

Market

Market provides you with direct access to software developers throughout the world.

It is the place to go find fun games and cool applications.

Browse contents

When you first enter Market, you will see featured items, a list of item categories, a link to search, and a link to My downloads.


Scroll through the featured items or select a category to browse its contents, then select a subcategory. Within each subcategory you can select to view items sorted by popularity or By date. Note that all items in a subcategory are listed in each tab, those in the By popularity tab are sorted most popular to least popular, and those in the By date tab are sorted newest oldest.

YouTube

YouTube is a free online video streaming service that allows anyone to view and share videos that have been uploaded by the YouTube members. You do not need a YouTube account to browse and view videos.

Watch YouTube videos

1. On the Home screen, touch the **Application** button.
2. Touch **YouTube**. The main YouTube screen appears showing popular video categories.
3. Touch the category and the video in that category.

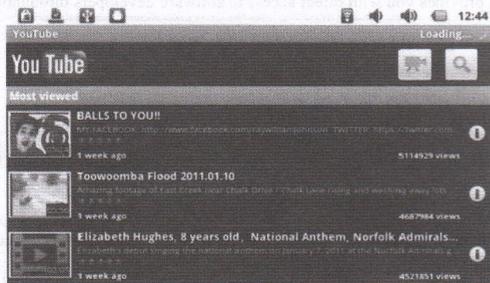

Search for YouTube videos

1. On the Home screen, touch the **Application** button.
2. Touch **YouTube**. The main YouTube screen appears showing popular video categories.
3. Press the **Menu** key.
4. Touch **Search**. Type your search.
5. Touch **Search**.



Camera

Shooting and playback a video:

1. On the Home screen, touch the **Application** button.
2. Touch **Camera**.
3. Drag the button to the **shooting mode**.
4. Touch **Shooting**. When finished recording press the **Stop**.
5. On the Home screen, touch the **Application** button.
6. Touch **Gallery**. And found this video just taken.
7. Touch the video and Select a video player to play.

Photo shoot

1. On the Home screen, touch the **Application** button.
2. Touch **Camera**.
3. Drag the button to the **photo mode**.
4. Touch **shooting**.

