

Directory

- Product Specifications
- Bluetooth stereo charge
- Start the Bluetooth audio
- Bluetooth stereo and the phone connected
- Use of audio
- Note
- Troubleshooting
- Care and maintenance

Product Specifications

- ◆Bluetooth specification: V3.0 +EDR
- ◆Support model : A2DP
- ◆Frequency range : 2.4Ghz
- ◆Rated power : 2W
- ◆Signal to noise ratio : ≥ 60 dB
- ◆Operating voltage: 3.7V
- ◆Charging voltage: Micro USB 5V
- ◆Rated charging time: 2 hours
- ◆Operating range: 10 meters
- ◆Music playback time: about 4 hours
- ◆Talk time: about 6 hours

Bluetooth stereo charge

Bluetooth audio built-in rechargeable battery. , We recommend that the first Bluetooth audio is fully charged before first use. Plug the charger into the DC charging socket, Bluetooth stereo, then the charger is connected to an AC outlet or a personal computer / laptop. Charging, two-color indicator light will turn red and charging is completed, the red light into blue.

* Only use the original packing box, charger / DC charging cable to charge the Bluetooth audio
Start the Bluetooth audio

To operate the Bluetooth audio (hereinafter referred to as "sound") in accordance with the following steps:

Make sure your sound is fully charged

Connect the charged audio to Bluetooth mobile phone

Indicator

audio status	status Indicator
alternate	Flashing blue
being charging (off mode)	Red
Fully charged (off mode)	Blue
Battery is low	Flashing red even short beep every minute
Batteries are dead	Light goes out

Connected with audio and Bluetooth phone

1. Make sure the sound is turned off
2. To activate the pairing mode, press and hold the stereo power button for 8 seconds until the LED alternately flashing blue and red.
3. Activate the Bluetooth function, search for Bluetooth devices, and then select the Bluetooth stereo model BS-100T/BS-110T ..., and enter the password "0000". When mating is complete, the audio status indicator will flash blue, and then you hear a long "beep ...".

Matching mode is activated within three minutes, failed to complete the matching process, the audio status indicator light is flashing blue Bluetooth audio will be transferred to the idle state.

Use of Audio

Function	Button	Beep	Status indicator
Turn on the power	Press and hold the power button for 2 seconds	Short beep	Flashing blue 2 times
Turn off the power	Press and hold the power button for 2 seconds	Short beep	Flashing red and then turns off
Calls	Ringling sound through audio		Flashing blue
Answer / end a call	Press the power button once		
Adjust the sound	Press the volume + Or Volume -	Will issue a short beep when the maximum volume or minimum volume	

The last incoming call redial		In standby mode, briefly press the power button 2 times	
To reject a call	Press and hold the power button for 2 seconds	Short beep	
Stereo music player	Shuffle		Flashing blue
Up and down selections	Press the volume + Or Volume -		
When the music during playback, caller calls beep prompt, press the power button once to answer an incoming call, answer the phone will continue to play music, listen to music calls compatible. Note: Where the T-series models with a call feature, the up and down the tracks and calls redial depending on the model.			

Note :

- When charging, use only the original packing box, charger / DC charging cable to charge the Bluetooth audio.
- Long time without the use of audio or battery has been exhausted, the indicator will be delayed a few seconds to shine.
- The sound is fully charged, the required three hours.
- After the start of the audio will remain in standby mode
- Call hand audio from the mouth to the distance of 5-10 cm

Troubleshooting

Hear the sound of Kaka?

Due to the distance of the Bluetooth protocol is the empty lots, barrier-free case can be up to 10M, of which the human body one of the greatest interference for Bluetooth stereo in terms of obstacles, to the effect of your use, we recommend that you Bluetooth stereo and mobile phone in a barrier-free environment use, in order to achieve the best reception.

Bluetooth stereo no sound?

- Make sure the audio is up and fully charged.
- Make sure the sound and the phone is properly connected with.
- Make sure to properly connected as set out in fails to connect, please refer to the phone's Bluetooth menu or press the power button once (see "Using Bluetooth stereo Bluetooth audio and Bluetooth phone is connected with an audio and mobile phone.

Phone and audio connections failed

- Please ensure that the sound is turned off and the has appropriate charged.
- Make sure the appropriate audio and mobile phone connected
- Make sure the phone's Bluetooth device has been enabled. Detailed instructions please refer to the phone instructions
- Make sure the sound is located within the range of 10 meters in phone, there are no obstructions such as walls or other electronic equipment.

If the above steps do not solve the problem, try the following operations:

- A) Re-charging audio

- B) Phone off, unplug the phone battery and then re-fitted.
- C) Activate the phone Bluetooth functionality and delete all previous pairing history.
- D) Bluetooth stereo re-matching.

Note :

- 1) Do not this speaker in the position of security airbag , because it may cause serious injury when the airbag pops up on the location of the vehicle airbags.
 - 2) Do not let children play with the speaker, small parts choking hazard may result in children.
 - 3) In hospital, the place of the blasting site or potentially explosive environment, may require the user to turn off electronic equipment and radio devices.
- Please note that the instructions enter the area.**
- 4) Before boarding an aircraft to turn off the sound, this sound can not be used in the aircraft.
 - 5) To better protect your hearing, do not turn up the volume too much.
 - 6) Do not attempt to make any changes to the audio.
 - 7) Do not this speaker place washbasins or other wet places.
 - 8) When is charging, do not clean the device. The first audio and charger separately, and then clean up.
 - 9) Do not force open the built-in battery of the audio.

Care and maintenance.

- Before put the speaker in your pocket or handbag, first turn off the sound. If you mistakenly press the multifunction button, your phone might accidentally dial. .
- Because the speaker is not waterproof, do not let the audio contact

with liquid, water, moisture or rain.

- Do not use abrasive cleaning agent to clean.
- Do not put the speaker exposure in the temperature is too high or too low.
- Do not let the speaker prolonged exposure to direct sunlight.
- Do not let the speaker near the open flame, such as cooking stoves.
- Do not dispose of the speaker in a fire, because it will result in an explosion.
- Do not let the speaker contact with any sharp objects as this will cause scratches and damage.
- Do not poke in the speaker within the assassination of any article, as this may damage the internal parts
- Do not attempt to disassemble the speaker, because it does not contain any serviceable components.
- Long period of time does not intend to use the speaker, please save it in a dry place at least monthly charge for the speaker once to extend battery life, avoid extreme temperatures and dust.
- Avoid charging temperature is too high or too low for the audio.
- According to local regulations for disposal of batteries and audio. Do not use it as a general disposal of household waste.

Built-in battery

- Do not attempt to replace the battery, because it is built, and can not be replaced.
- Charging the battery in accordance with this user guide comes with instructions

Charger

- Use the original charger, if using other brands of chargers may damage the speaker, even danger. The resulting Bluetooth audio damage and the danger posed by the operator to bear, the company will not bear the relevant responsibility
- Dismantling the charger may be exposed to the high-temperature current or constitute other hazards. Do not attempt to disassemble the charger. Use of an incorrect assembly of the charger will lead to a risk of electric shock.
- Do not use the charger outdoors or in damp places

Warranty issues:

1. The warranty card is only valid in China (except Taiwan, Macau, Hong Kong).
2. Provisions according to user instructions for use, in normal use and warranty card records is valid. In warranty period, in case of failure, the holders need warranty card, purchase invoice for maintainances. or by purchase receipt to the purchase of shopping centers or dealers request for warranty repair.
3. Products belonging to one of the following conditions, will not be in warranty.
 - 1) Over the warranty period (from purchases as a starting point for a period of one year)
 - 2) Not to use products described requirements, maintenance, custody and cause damage.
 - 3) Unauthorized repair service points, or personnel of the product repaired or altered.
 - 4) without a valid warranty card and a valid invoice or payment receipt (except prove that the Products, within the warranty period).

- 5) product model and serial number on Three Guarantees certificate and real product do not match.
- 6) No name, the site certificate.
- 7) Damage due to force majeure.