



3D WATCH

Hour/Month 时间/月份

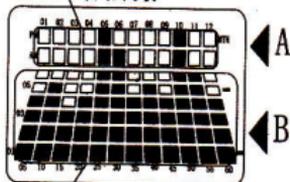


Minutes/Day-of-month the time
 A button Displays the time A 时间表示
 B button to see the time B 时间设定

Press A button to see the Equalizer Moving After that 2 dots remains to show the hour and minutes then, the 2 dots will drop and disappear
 Example 1: pm4:31(time)

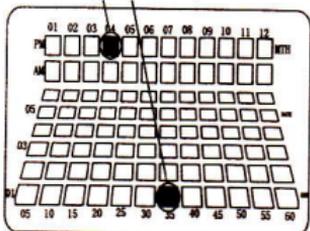


in time mode press A button again to display the date (in Date mode, no Equalizer effect showing)

Example 2: 12th september (date) 9月12日

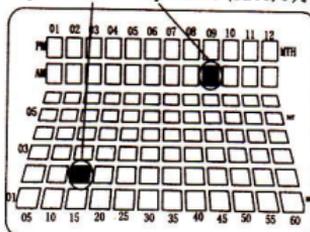

Remarks:

1) To skip the flashing pattern and quickly display the time press A button a second time

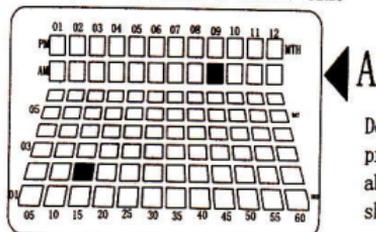

Double press the A button to show the

How to set the time:

- 1) Hold the B button for a few seconds the Hour lights will blink (minute lights not blinking), press A button to increase the Hour
- 2) Press B button to confirm and move to minute lights press A button to increase the lights
- 3) Press B button to confirm

HOW to set the Date:

- 1) when the time on press A button to go into Date mode.
- 2) In date mode hold B button for a few seconds the Month lights will blink (Day-of-month lights are not blinking) press A button to increase the months.
- 3) press B button to confirm and move to Day of month lights press A button to increase the lights.
- 4) press B button to confirm

Battery replacement

- 1) one lithium battery cr2016 provides the power to operate the lights
- 2) if you notice your watch's lights is getting dimmer this is an indication that your battery needs to be replaced
- 3) Do not wait until your watch stops functioning
- 4) weak or dead battery left in your product for an extended time may damage the movement

5) To avoid the possibility of damaging your product we recommend that you send it to watch specialist replaced and the case back properly sealed

Cautions

- 1) Don't press buttons under water nor with excessive moisture on the product surface
- 2) Avoid long-term exposure to extreme temperature direct sunlight This can cause material coloring to fade or discoloration
- 3) please avoid rough use or dropping this product chemicals as this will discolor the case or strap
- 4) To clean your watch use only soft cloth moistened lightly