



Remote Dog Training Collar User Manual





Index

Components1-2
Key Definition3-4
Features5
How iTrainer Dog Training system works6
Operating Guide6-8
Step 1 Check the battery of the transmitter and receiver
Step 2 Charging the transmitter and receiver
Step 3 Connect/Encode the transmitter with the receivers
Step 4 Check the functions of Shock, Vibration, Beep and Lighting8
Step 5 Adjust the intensity/levels of the functions
Step 6 Start to Train
Training Tips9
Safety Guidance
Common Problem & Fixes
Warranty, Terms & Conditions, Compliance
Additional information12













- 1. Antenna
- 2. Led light
- 3. LED Indicator
- 4. 1/2 Dog Mode Button(Channels for 1 or 2 dog)
- 5. Light Button
- 6. 1 dog mode LED indicator
- 7. 2 dog mode LED indicator
- 8. 1-7 levels correction
- 9. Beep Button
- 10. Vibration Button
- 11. Shock Button
- 12. Charging Hole





LED Red Indicator: When the receiver is

dicate the charging status. When the receiver is

turned on, the Red light flash 2 times one second

to indicator it is in low power. While the Red light

After encoding completed, the Red light flash two

LED Blue Indicator: When the receiver is fully

charged, the Blue Indicator shows up. After the

encoding completed, the Blue light flashes

connected to the outlet, charging, the Red

shows up to indicate the encoding status.

Indicator shows up to in

times and turn off.

every 10 seconds.

Key Definition

- 1. Antenna: Transmit the signal to receiver collar
- 2. Led light: This light will be on/off when press LED light button for 3 seconds.
- 3. LED Indicator: When charging, the light will flash and will be on still after fully charged. Press any button, the light will flash to indicate the transmitter is working.
- 4. 1/2Dog Mode button:

Press this button to choose different dog modes.

Press the 1/2 button for the first time, the left blue light is on to indicate that it is in 1st dog mode.

Press the button again, the right blue light is on to indicate that it is in 2rd dog mode. Press the button for the third time, both of the blue lights are on to indicate that it is in working mode for two dogs.

Pressing this button for three seconds can turn off the receiver.

- 5. Light Button: Press this button for 3 seconds to turn on/off the LED light.
- 6.1 dog mode LED indicator: When it is on, it indicates the transmitter is controlling the first receiver collar.
- 7. 2 dog mode LED indicator: When it is on, it indicates the transmitter is controlling the second receiver collar.
- 8. 1-7 levels correction: From 1 to 7 levels, the intensity ranges from the weakest to the strongest.
- 9.Beep Button: Press the button, the receiver will produce B sound.
- 10. Vibration Button: Press the button, the receiver will produce vibration.
- 11.Shock Button: Press the button, the receiver will produce shock.
- 12. Charging Hole: Charge for Remote transmitter.

Notes:

Pressing the Beep button and the Vibration button at the same time can turn off the receiver.

Don't press the shock button for a long time. If press the shock button for more than 10 seconds, the transmitter will produce B warning sound and the transmitter will stop to send the shock signal to the receiver.



LED Red Indicator

Features:

- 1.LED Indicator.
- 2.300m Remote control distance.
- 3. Waterproof receiver collar.
- 4. The system can be expandable to 2 receiver collar.
- 5. Rechargeable remote transmitter and receiver collar.
- $6.1-7\ level s\ adjustable\ shock, vibration\ and\ beep\ by\ rotating\ the\ thumbwheel.$
- 7.Led Light. Turn on/off the light by pressing the light button for 3 seconds.
- 8. Tone Indicator. Press any button of the transmitter, it produces B sound.
- If press the shock button more than 10 seconds, it would produce B sound warning sound.
- 9.Power Saving:Both of the transmitter and receiver can be turned off manually. The Remote Transmitter will go into Standby Mode if no operation for 2 minutes. Press any button will activate the transmitter. In Standby Mode, the receiver will flash blue light every 10 seconds.
- 10. Two pairs of mental prong(short/long) to suit dogs with varied fur thickness.





How the iTrainer Rechargeable and waterproof Remote Dog Training System Works

This dog training system has been proven safe, comfortable, and effective with 300 meters remote range for all dogs over 8 pounds. It includes the remote transmitter and receiver collar. The collar is worn on dog's neck and controlled by the remote transmitter.

Press a button of the remote transmitter, it will send a signal, activating the receiver collar.

The collar can produce adjustable Vibration, discharge shock, B Sound, lighting etc. Using this training system consistently and correctly, many misbehaviors of your dog's can be corrected and any basic obedience commands can be taught.

Note:

This training system has a range up to 300m. Depending on the way you hold the remote transmitter, the range may vary. Hold the remote transmitter in a horizontal position away from your body to achieve optimum range. Terrain, weather, vegetation, transmission from other radio devices, and other factors will affect the range of your remote trainer.

Operating Guide

Step 1 Check the battery of the transmitter and receiver

Transmitter: Turn on the remote transmitter by pressing any button.. If cannot be turned on, it means that it is in low power and need charging.

Receiver Collar: Turn on the receiver collar by pressing the ON/OFF button. If the Red LED light is on , it means it has enough power. If red LED light flashes 2 times a second or cannot be on, it means that it is in low power and need charging.

Step 2 Charging the transmitter and receiver.

Transmitter: Connect the charger to the transmitter. The transmitter will produce B sound when connected to the outlet. The Red LED Light begin to flash when charging. After fully charged, the Red LED light will be on all the time.

Receiver Collar: Connect the charger connector to the charging hole and put the charger into a standard outlet. The Red LED light will be on when it begins charging. Please charge the transmitter and receiver up to 4 hours for the first charging. After fully charged, the BLUE LED light will be on.





Step 3 Connect/Encode the transmitter with the receivers.

- a) Turn on the receiver.
- b) Adjust the thumb knob on the transmitter to any levels Except "0" Level.
- c) Press any button on the transmitter, the connection between the transmitter and the receiver is succeeded.
- D)If it is 1-2 system, please connect the transmitter with the receivers one by one. After the first receiver is encoded, adjust the transmitter into the second dog mode by pressing the press the 1/2 dog button.

Note:

Don't turn on two receivers at the same time to avoid encoding the two receivers at the same channel.





Safety Guidance

To maximize the effectiveness of the iT728 remote training system, and safety of your dog, check the fit of the collar frequently and readjust the position of the electrodes on the animal's neck, checking for signs of irritation or discomfort.

If signs of skin irritation are noticed, immediately discontinue use and apply antibiotic ointment to help heal and sooth the area. If the condition persists beyond 48 hours, please ask for advice of a veterinarian. Such side effects are extremely rare and are generally caused by a more serious condition.

The collar is not intended to be left on a dog for extended period of time without supervision and doing so can lead to health problems. The conservative recommended time limit without supervision is 12 hours.

Wash the dog's neck area and the correction poles as often as needed to keep the area and poles clean. Make sure the straps are clean for best performance. The straps can be removed for cleaning but must be replaced in the same position. From undesirable behavior by administering the stimulus during the actual behavior, using this device as a punishment after the fact is not recommended and may serve to confuse or frustrate the animal.

- -It is forbidden to open the shell in case of breakage of the machine or harm the waterproof feature. Otherwise, it will violate warranty rules.
- -In order to guarantee submersible feature, the waterproof rubber charging lid should be plugged in tightly.
- -Only use the supplied adaptor to charge the receiver, otherwise the receiver will probably be damaged.
- -Users are not suggested to touch the shocking prongs, otherwise the receiver will harm human body in case of shocking operation, for shocking test, please use the supplied test kit.
- -If there has water in the charging hole, please dry it before charge the receiver.

Common Problem & Fixes:

The receiver does not seem to be working properly:

No beep, vibration or shock

- -Make sure the receiver is fully charged.Low charge will cause the receiver to work inconsistently.
- -Follow the instruction match the receiver to the transmitter.
- -Make sure the transmitter battery is good. A low battery will disallow the remote to emit a strong signal every time.
- -Make sure the thumb knob on transmitter is NOT pointing at a ZERO level.
- -Make sure the receiver is turned on. If the receiver is turned off, the transmitter will not be able to send out a signal and the signal icon light will not flash accordingly.

The receiver does not seem to take a charge:

-Make sure the charger had been plug into the main supply tightly, as well as the charging end had plug into the charging hole tightly, in charging the red LED light inside receiver should come on.

My dog does not respond when I issue a correction:

- -Test the receiver according to the instructions above to make sure each stimulus is functioning.
- -Make sure the correction prongs are positioned properly and that both prongs are making contact with the dog's skin and the collar is snug.
- -Increase the intensity level of the correction.

Warranty, Term & Condition, Compliance

We guarantee the original retail purchaser that the iTrainer iT728 Remote Training System will be free from defects in material and workmanship for a period of one year from the date of the original retail purchase. Provided that the damage is not caused by abnormal use or neglect. Warranty does not cover lost parts, cracked screen, physical damage or water damage. Warranty may include repair or exchange. After expiration of the warranty, replacements and repairs are available at an additional repair charge.



Trainer

Additional Information for Terms of Use and Limitation of Liability

Terms of Use:

It is understood that you accept without modification of the terms and conditions, the offering to you of this product.

Proper Design and Use:

This training collar had been designed for the training of dogs. Your pet's temperament may not be suitable for this system. This collar is not recommended for dogs that are aggressive or neglected.

Unlawful and Prohibited Use:

This product is designed for training purposes. It is not intended to punish, injure, provoke or harm. Using this product in a way in which is not intended is strictly prohibited and can result in violation of Federal, State or local laws.

Limitation of Liability:

In no event should we be liable for any damages arising out of or connected with the use or misuse of this product. Buyer assumes all risks and liability associated with the use of this product.

Additional Information

Common size of different dogs					
Size	Neck(cm)	Chest Measurement (cm)	Back Length(cm)	Туре	
Mini	20-22	25-30	19	Chihuahua, Yorkshire Temier	
Small	20-24	29-36	23	Chihuahua, Yorkshire Temier, Poodle, Pomeraniar	
Medium	23-28	35-42	28	Maltese Schnauzer, Pekingese	
Large	27-31	41-47	31	Schnauzer,English Cocker Spaniel	
Large	30-34	46-53	35	Beagle	
Large	33-37	52-59	40	Husky	
Huge	43-48	76-84	60	Labrador Retriever	
	47-52	88-97	65	Golden Retriever,Ole English Sheepdog	
	52-62	92-100	70	9	

Common weight of dogs

Large Dog (Body height above 61 cm, Weight above 40 kg) Medium Dog(Height 40.7-61 cm, Weight 11-30 kg) Mini Dog(height under 25 cm, Weight under 4kg)