



# Android Media Box

The best home media center make your life wonderful.  
Watch 1920x1080 Full HD quality video and various  
image formats on your TV  
The most strongest and powerful CPU make  
online streaming seamless.



Android 4.2



Google Play



DLNA



facebook



WIFI


# Contents

ONE Product introduce.....	2
1.1 Interface.....	2
1.2 Package contents.....	2
1.3 Connection.....	2
1.4 Remote Control.....	3
TWO Main Menu Introduction.....	4
2.1 Main Menu.....	4
2.2 Main Menu Interface Introduction.....	5
THREE Application.....	6
3.1 Applications.....	6
3.2 Setting.....	6
3.3 File browser.....	15
3.4 Web browser.....	16
FOUR Troubleshooting.....	19

# ONE

## Product Introduction

### 1.1 Interface

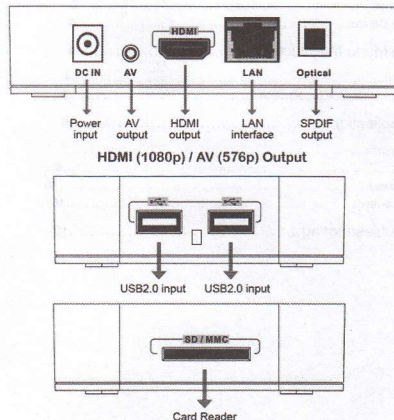


### 1.2 Package contents

- Android TV Box
- Power adapter
- Remote Control
- AV Cable
- User's Manual

### 1.3 Remote Control

#### 1.3.1 Natural Remote Control

##### 1.1 Remote Control

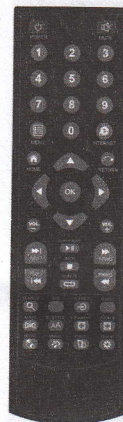

Key	Function	Key	Function
[Power]	Turn on / off the player	[Volume Up]	Choose the volume of the player
[Number 0-9]	To input the number	[Function]	Choose function menu of corresponding application in video/music/photo/website
[Fast Key]	Fast key to Browser page	[Main Menu]	Fast key to go back to the main menu
[Back]	Back to previous menu/page	[Left/Right/Up/Down]	Press to navigate left/right/up/down, Press OK to confirm your choice
[Volume Down]	To decrease the volume	[Volume Up]	To increase the volume
[Next]	In the video/picture/music file playback, use to switch next file	[Next]	In the video/picture/music file playback, use to switch previous file
[Play/Pause]	Press to play/pause	[Stop]	Press to stop playback
[Repeat]	Press to repeat one file	[Fast Forward]	Press to fast forward the current play
[Fast Rewind]	Press to fast rewind the current play	[Web Search]	To access web search page
[Fast Key]	Fast key to Application page	[HDMI/AV]	Fast key to switch to HDMI / AV
[Fast Key]	Fast key to mouse mode to up/down/left/right	[Audio]	To select an audio track on a media file
[Subtitles]	choose subtitles when playing movies	[Zoom]	Press to zoom in/out on web page
[Movie]	Go to movie page	[Music]	Go to music page
[Photo]	Go to photo page	[Settings]	Go to system set up

## TWO

### Main menu introduction

#### 2.1 Main menu

This media player provides two kinds of main menu for user to choose,. After the media player is powered on, below dialog will popup



#### 2.2 Main Menu Interface Introduction


Select the icon, system will list the apps and setting on the screen, you can choose anyone what you want to use. For the detailed function description, please refer to Chapter 3



After connecting network, the time will be updated automatically

## THREE


### Application

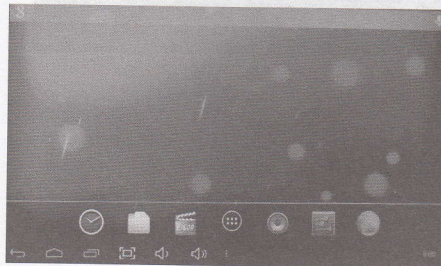



### 3.1 Applications


Choose application, to enjoy apps that you want to use

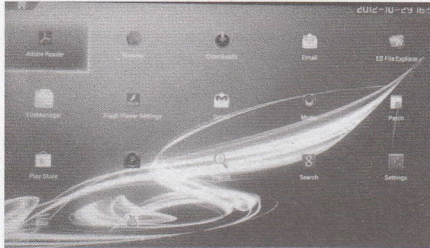

### 3.2 Setting


#### 3.2.1 Wireless Network WIFI

Please turn on wifi, option and choose the access point you need

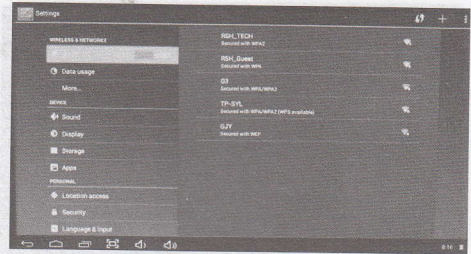


#### Data Usage

Check the network stream status

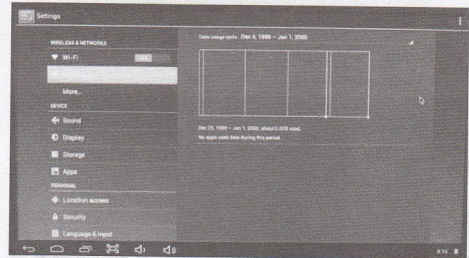

More.....


Setup different network

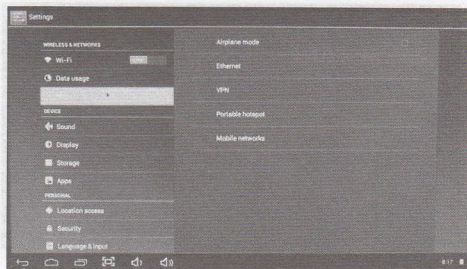

### 3.2.2 Device


#### Sound

Adjust operating sound

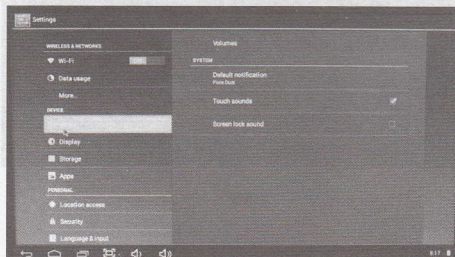


#### Display

Adjust the display level and output setting

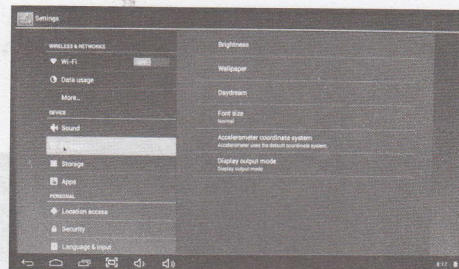

#### Storage


Show the storage level and space

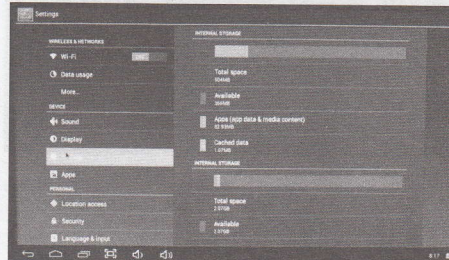




## APPS

List the all apps from download or SD Card

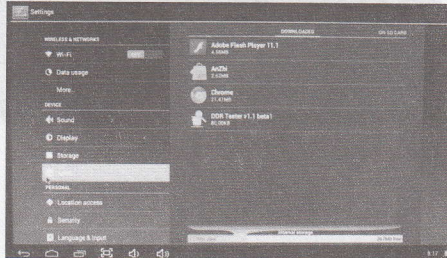


## 3.2.3 Personal

Location services

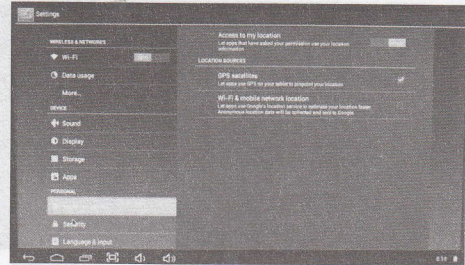


## Security

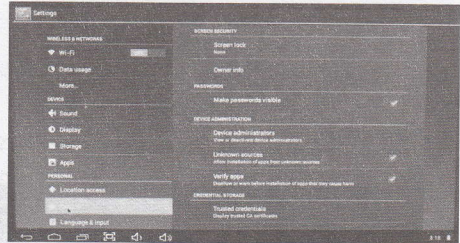



## Language & Input

Set language and input method

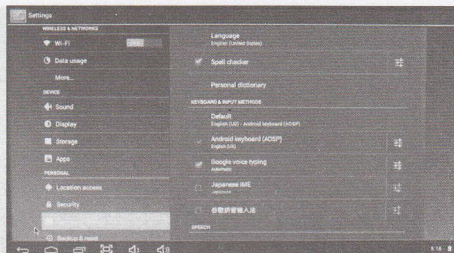

### Backup & Reset

Backup or reset your system back to default setting

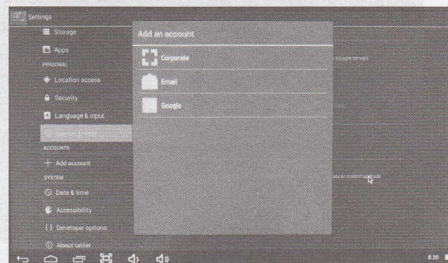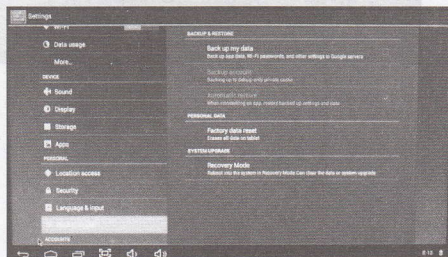


### 3.2.4 System

#### Date & Time


Set the date and time



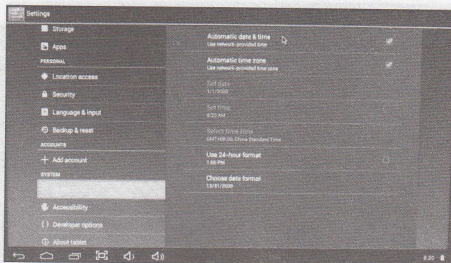


## Accessibility

Setup the accessibility

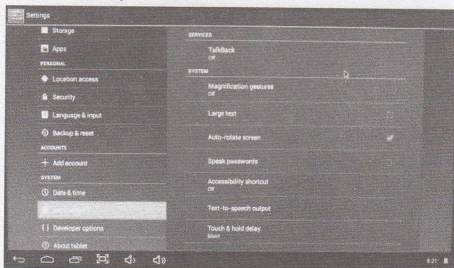


## Developer Options

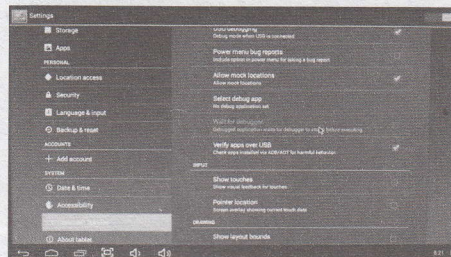


## About Device


List the device information

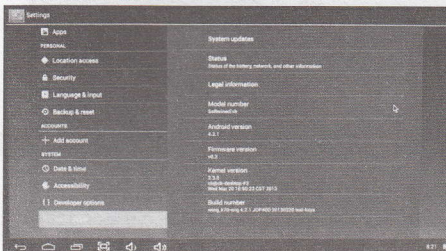


### 3.3 File browser

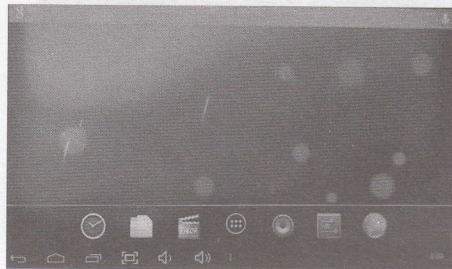

When get into file browser, you can search all equipment from local memory or network device. Then you can play video, music and others.

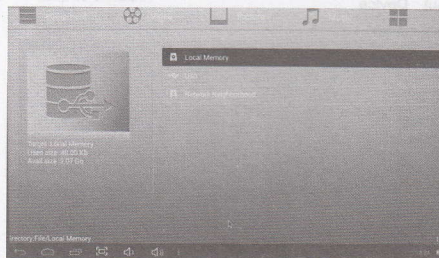

### 3.4 Web browser

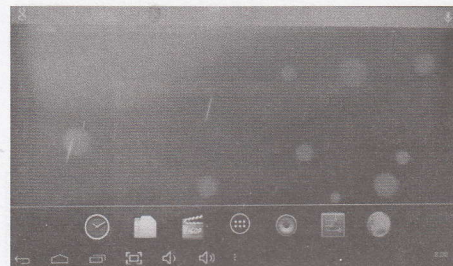



Select the icon, there is a menu bar for you to set

## FOUR

### Troubleshooting

#### Warning

Under no circumstances should you try to repair the box by yourself, as this is will invalidate the warranty. Do not open the box as there is a risk of electric shock. If a fault occurs, first check with points listed below before taking the box for repair. If you are unable to remedy a problem by following hints, consult your dealer for help.

Problem	Solution
No Power	<ul style="list-style-type: none"> <li>a. Check the power adapter is properly connected</li> <li>b. Check if the power adapter damaged or not</li> <li>c. Re-connect HDMI / AV Cable</li> </ul>
No show on monitor	<ul style="list-style-type: none"> <li>a. Re-connect power adapter</li> <li>b. Check if the output mode for TV and media box keep the same</li> <li>c. Check if the TV is switched on</li> </ul>
No sound or distorted sound	<ul style="list-style-type: none"> <li>a. Adjust the volume</li> <li>b. Check if the cable connect to TV and media player well</li> <li>c. Check that the speakers are connected correctly</li> </ul>
No audio or digital output	<ul style="list-style-type: none"> <li>a. Check if the cable connected well</li> <li>b. Check if your amplifier is set correctly</li> <li>c. Re-connect power adapter</li> <li>d. Check if the output mode for TV and media box keep the same</li> </ul>
The remote control does not work	<ul style="list-style-type: none"> <li>a. Reduce the distance to the box</li> <li>b. Replace the batteries in the remote control</li> </ul>
Player does not respond to some operating commands during display	<ul style="list-style-type: none"> <li>a. Operations may not be permitted. Refer to the user manual</li> <li>b. Possibility of system halted, re-connect with power adapter to restart</li> </ul>
No sound during movies display	<ul style="list-style-type: none"> <li>a. The audio codec may not be supported by the box, you can change to the supported audio on playing menu</li> <li>b. Check the volume</li> <li>c. Check if the cable connected well</li> <li>d. Check if the output mode for TV and media box keep the same</li> </ul>
The contents of the USB drive or Memory card cannot be read	<ul style="list-style-type: none"> <li>a. The USB drive formats not compatible with the box</li> <li>b. If one of the USB cannot be read, please turn off the box and restart.</li> </ul>
No sound with HDMI connection	<ul style="list-style-type: none"> <li>a. Check if TV output mode is the same with the media box</li> <li>b. Check your TV system setup</li> <li>c. Check the volume</li> </ul>
The TV screen is black and the player's	<ul style="list-style-type: none"> <li>a. Turn off your player and wait 30s, turn it on again. If under</li> </ul>



LED is blinking	HDMI status, check if HDMI connection is correct or change another HDMI cable. Set the output solution of the box into 720P
-----------------	---

## End-User License Agreement

Please read this agreement carefully before using the product:

Please ensure

- (1) Do not dismantle the device for improper purposes
- (2) Do not read and refresh the firmware of the device by improper means.
- (3) Do not conduct inverse engineering and disassembling for related software and codes of the player
- (4) The device and this license agreement can be transferred to a third party who accepts the terms and conditions of the agreement. When you transfer the full or part of the device to a third party, the license agreement for you to use the device terminates automatically.

## How to use this user Manual

Please read this user manual carefully before using the device. The content of the manual as well as the hardware and software of the device have been processed with intensive care. No responsibility is assumed for any direct or indirect losses arising from hardware damage, program damage, file loss or system breakdown due to improper operations. As you have carefully read this agreement, it is ensured that the terms and conditions have been fully understood and will be strictly followed.

## Precautions

Please carefully read and pay close attention to the following before using the device:

- (1) Do not expose the device to rains or damp environments to prevent fire or electric shock
- (2) Do not expose the device to moisture, dripping or splashing in order to reduce the danger of fire electric shock or device damage.

## Safety Instructions

- (1) Use the original adapter for the product, and do not share an adapter with any other devices.
- (2) Do not place the power cord and plug of the adapter near heat sources.
- (3) Do not dismantle and repair the adapter and its power cord.

- (4) Do not open the enclosure of the device to ensure your safety. Please ask trained professionals to conduct maintenance if necessary.

## Maintenance Tips

- (1) The device is of complicated and sophisticated structure, so only trained professional are allowed to open the device to prevent damage from happening.
- (2) Do not dismantle components of the device on your own. The warranty mark will be invalid automatically if you dismantle and repair the device on your own.
- (3) Please contact our local warranty department to arrange for maintenance if necessary. To replace devices or accessories, please select the original ones designated by the manufacturer.