 


## ◆ Appearance and buttons:

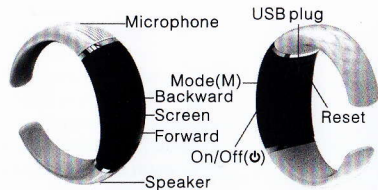

## ◆ Main functions:

- ★1536Kbps PCM high fidelity recording
- ★OLED Display screen
- ★Recordings & Music playback
- ★Voice Activated Recording (VOR/VAR)
- ★Time-setting
- ★Built-in high fidelity speaker & high sensitive microphone
- ★Support 24 languages
- ★Automatic section-break
- ★USB data transmission & charging

## ◆ Operations:

 
### ★Turn on/off

Long press Φ button about two seconds the recorder will turn on.

At the power-on condition, long press Φ button about 2 seconds the recorder will turn off.


### ★Main menu

After turn on the recorder, the main menu will be displayed as below:



### ★Record Mode

 At the main menu, please press the ◀▶ button to choose the Record Mode and then press the "M" button to start recording. Repress the "M" button to stop recording and save the recording files. The display screen will show as below during recording.



### ●One key recording

At the main menu interface, long time press "M" button to enter into the Record Mode and begin recording.

### ●Pause/Save


Press "M" button to start recording, and press Φ button to pause the recording, repress Φ button to continue recording. While recording, press the "M" button again to stop recording and save the recording file.

### ●Automatic section-break

The recorder will automatically save the recording file after two hours continuous recording, and then start to record next file.


### ★Voice Mode

At the main menu, please press the ◀▶ button to



choose the Voice Mode,press "M" button to enter into it,and then press  button to start playing.The display screen will shows as below during playing.





#### ●One key play

Please press  button to play the recording files when the recorder stops recording.


#### ●Play、 pause

Please press  button to pause playing repress  button to continue playing.


#### ●Select、 Fast forward or Rewind

At the playback condition,short press  button to play the previous one or the next song,long time press  button to fast forward or Rewind.


#### ●Playback

At the playback condition,press "M" button to enter into the setting,press  button to choose the menu and set it:



Change volume、 Replay mode(A-B repeat)、 Repeat(mode of cycle)、 Tempo rate(playback speed).

 
At the condition of the pause,press "M" button to enter into the "File set" menu, press  button to choose and set it:

Local folder、 Delete file、 Delete all.

Please press "M" button to enter into the above menus,then press  button to choose and set the parameters then press "M" button to back to the main menu.


#### ★Music Mode

At the main menu,press  button to choose the Music Mode,then press "M" button to enter into it,then press  button to start playing.The display screen will shows as below:





The operations are same to the Voice Mode

#### ★Setting Mode

At the main menu press  button to choose the Setting Mode ,and press "M" button to enter into it,long press "M" button to return to the main menu.

#### ●System time

Please press "M" button to enter into the time setting, then press "M" button again to select the part which need to adjust,then press  button to adjust it.After finish it,press  button to save.

#### ●Recording bit rate

#### ●VOR set

#### ●Backlight

#### ●Language

- Power off
- Contrast
- Memory information
- Format Device
- Firmware version

Please press "M" button to enter into the above menus and then press ◀▶ to select and set, press "M" button to save the settings and back to the main menu.

#### ★Computer connection

The device uses the polymer battery for power supply. When connect it to the PC, it can work as the removable disk and start charging automatically. It will spend about 1-2 hours to charge it, after full of power it will stop charging automatically. When it's charged fully, it can continue recording about 23 hours at the recording bit rate of 32Kbps, about 20 hours at the recording bit rate of 192Kbps, about 18 hours at the recording bit rate of 512Kbps, about 9 hours

at the recording bit rate of 1536Kbps. After finish the charging, please remove the usb device safely by click the usb device icon at the right bottom of the desktop, then disconnect the recorder with the PC.

Size: 75*64*30mm	Weight: about 33g
Power Supply: Polymer battery 3.7V about 120mAh	
Recording Format: WAV, 32Kbps/192Kbps/512Kbps/1536Kbps	
Recording Time: 4GB: 285hours/47hours/18hours/6hours	
Recording Time: 8GB: 570hours/94hours/36hours/12hours	
Recording Time: 16GB: 1140hours/188hours/72hours/24hours	
Support System: Windows 2000/XP/7/8/Android	

#### ◆Precautions:

In order to avoid accidents, please read user's manual carefully before operations.

1. Please don't put the recorder at the place which is in the high temperature, damp or dust situation.
2. Please handle the recorder with the care, avoiding strong collision or fall.
3. Please backup files regularly on the computer to avoid data loss which may be caused by wrong operations or breakdown of the machine.
4. We are not responsible for the recording failures which caused by wrong operations or damage of the recorder.
5. When the device stops working, please use the pin or needle to press the reset hole on the back of the device, then the machine would be restored.
6. Please do not disassemble or replace the inner parts by yourself. Please backup

files before sending for repair. We are not responsible for the information loss which caused by maintenance.

7. We are not responsible for the user's recording without other's approval.
8. We endeavor to ensure the manual's integrity. For technical and other reasons. If the contents do not match, please take recorder as standard.