


Smart Door Bell User Manual

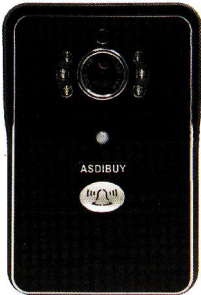

V1.2

Catalog


1) Hardware Introduction.....	3
2) Software Download.....	4
3) Network configure	5
4) Visitor Call.....	6
5) Security	7
6) Other Function.....	8
7) Software Function.....	9
8) Indoor Chime(optional).....	10
9) RFQ.....	11

1) Hardware Introduction

1.1. Front Panel



1.2. Back Panel

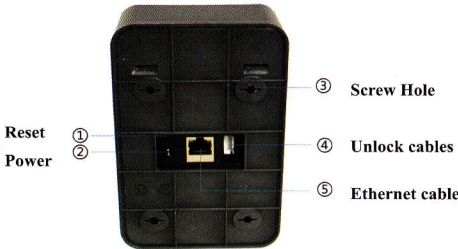

Door lock configure (Unlock cables):

1. 5pin connector,1-2pin connect with N/O lock.Second pin is for GND.
2. 5pin connector,2-3pin connect with N/C lock.Second pin is for GND.
3. 5pin connector,4-5pin connect with indoor unlock button.

2) Software Download

2.1 Please download software Smart Home P2P at google play for android or APP Store for IOS



Android



IOS


2.2 Register and log in



1.Enable APP, select register new account



2.Select register method, and operate according to guidance (recommend to register by email)

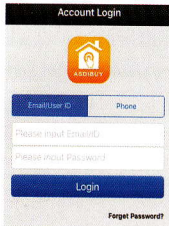


3.Log in

3) Network configure


- 3.1 Power on doorbell, and waiting for its start (after start with sound "di di di...")
- 3.2 Log in APP and select SmartLink to configure WiFi

Notice: Please make sure your mobile phone or tablet has been connected


with WiFi before setting doorbell

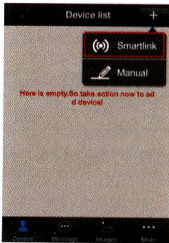


1. Select SmartLink at right corner "+"

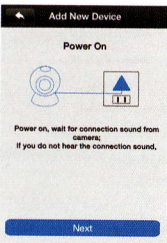


2. Operate according to guidance and click next

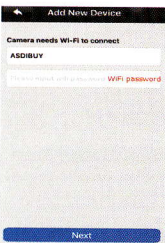

3. Input Wi-Fi password and click next

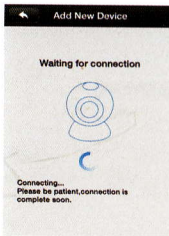

4. Waiting for doorbell connect with WiFi

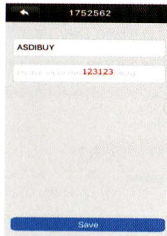

5. Input doorbell default password 123123 and click "save" at right corner




6. At device list, click thumbnail image to view video


Notice: After successfully connected, please immediately change password

Ways: Settings--Security setting--Admin password--change default password

4) Visitor Call

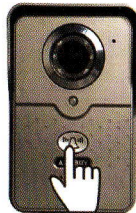


Internet

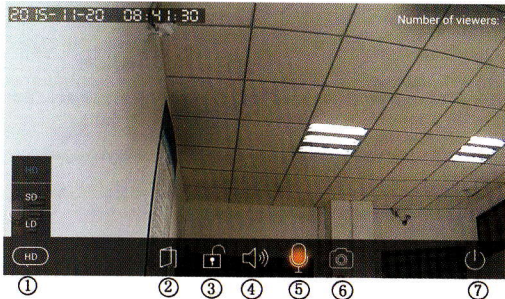

- ① Image quality adjust: 3 option, HD for megapixel, SD for standard and LD for smooth (default is SD)
- ② Remote to open the door
- ③ Alarm arming: On/Off alarm function
- ④ Talk back: built-in microphone (default is on)
- ⑤ Monitoring: enable/mute speaker
- ⑥ Snapshot: take picture and save
- ⑦ Quit: log out

5) Security


5.1 Alarm settings

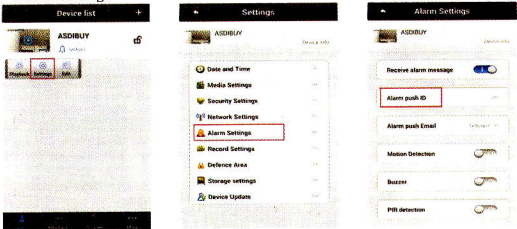

- 1.Click device name to setting page
- 2.Click alarm settings
- 3.Check your APP has enable receive alarm and ID been in list of alarm push ID list


Alarm settings explanation:
Receive alarm information: default is on. Will not able to receive call notice and alarm push if disable
Alarm push ID: support max 5 ID
Alarm push email: after bonding email,when visitor call or alarm,your email will receive picture
Motion detection:default is off. After enable,once movement,doorbell will alarm
Buzzer: default is off. After enable,once there is alarm speaker will buzzer
PIR detection: default is off.

5.2 Arming and disarming

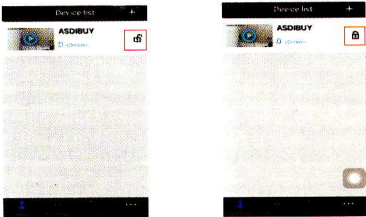


Disarming: default is disarming.Lock icon is open,and mobile phone will not receive alarm information
Arming:enable and lock icon is closed.Your mobile phone will receive alarm information

6) Other Function

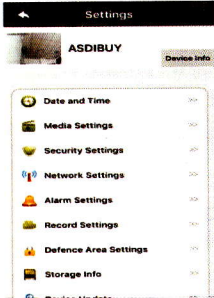

Device info:Firmware information
Date and time: Set device time,default is synchronization network time
Security settings:Modify password
Media settings: Reverse image and adjust volume
Network settings:Switch ethernet and WiFi connection
Alarming settings:Configure doorbell alarm information
Recording settings:Select recording method(works with Micro SD Card)
Defence area settings:Not support
Storage info:Check Micro SD card information
Device update:check firmware update

7) Software Function

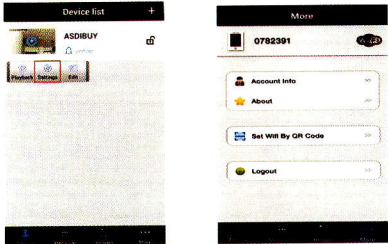

Device: Device list
Message:Visitor and alarm information
Images:Snapshot picture
Account info: Check account related infomation and change APP log in password
System settings: Set alarm and visit call ring tone (for android only)
Set WiFi by QR code:According to guidance to use QR code to set doorbell WiFi
Alarm management:Set alarm interval and mask alarm device(for android only)


8) Indoor Chime(optional)



Function:

1. After press doorbell, mobile phone and indoor chime will ring
2. smart door bell and indoor chime is using 433MHz to be connect, no need wiring. Open distance transmission is 300M
3. Indoor chime is using AC power(EU,US,AU and UK plug optional)
4. smart door bell and indoor chime are using 433MHz to learn code. One smart door bell max can connect with 8 indoor chime. And an indoor chime can connect max 8 smart door bell


* 433MHz learn code guidance:

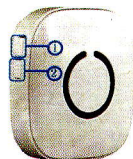

Notice: smart door bell and chime has been paired code before shipping

- ①: Volume adjust and code
- ②: Ring tone switch(built-in 56 ring tone)

Code operation:

1. Connect power of smart door bell and chime, waiting for smart door bell starts
2. Long press chime ① 3-5 seconds, chime "C" will quick flash, and now its status under code (make sure set well in 2 mins)
3. Press smart door bell call button  and chime will stop flash. Means code is successful.

Change ring tone: press chime ② (Every press will change to different ring tone, and act above code operation to change ring tone)

Volume adjust: press ① to adjust volume. Max 4 grade. Please don't long press

9) RFQ

1: Didn't heard "Di,Di,Di..." after power on
Please long press reset button around 10 seconds. And start again

2: When visitor calls, only vibrate, no sound
Refer device list at right bottom click More, select system setting and change calling / alarm sound (for android)

3: Can't receive calls and alarm
Please check alarm settings if your ID been in list

4: How to delete alarm ID
Delete alarm push ID at alarm setting

5: Can't access remotely
Please make sure your smart phone has connect with network, and doorbell is working properly with WAN connection

6: No recording file after installed micro SD card
Please set recording mode at recording settings; recommend to use Kingston brand micro SD card at FAT32 format

7: Chime can't code with smart doorbell
When learn code please keep both closer

Thanks for reading this manual. More detailed functions please contact with ASDIBUY