 


User's manual
SP-2S
Bluetooth stereo speaker

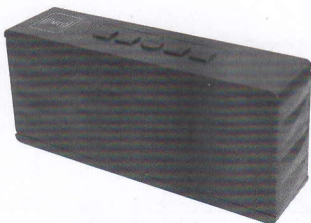

SPECIFICATIONS

Model NO.	SP-2S	Ver.	Bluetooth V3.0+EDR
Bluetooth Profiles	HSP,HFP,A2DP,AVRCP	Effective Range	10Meters
Music Time	8 Hours (MAX VOL)	Talk Time	10Hours
Standby Time	Up to 200 Hours	Input	DC : 5V/500mAh
Charge Time	2-3 Hour	Dimensions	142*35*63CM

About SP-2S

SP-2S is a stereo speaker with Bluetooth technology. It supports the following Bluetooth profiles:

 
 
HSP — Speaker Profile

HFP — Hands-free Profile

A2DP — Advanced Audio Distribution Profile

AVRCP — Audio/Video Remote Control Profile

Overview

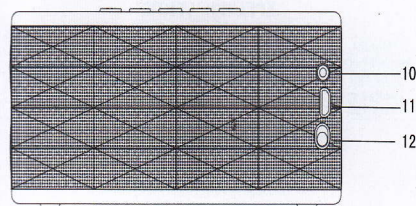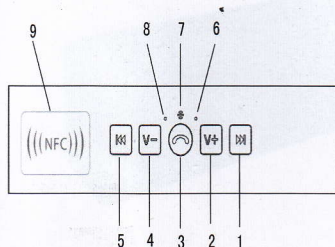

1	Next	2	Volume Up
3	MFB	4	Volume Down
5	Last	6	Blue LED
7	MIC PHONE	8	Red LED
9	NFC connection area	10	Line in
11	USB Charge Port	12	Power Switch

Charging the battery with USB cable

- Step1: Insert USB charging cable into USB port have more than 500ma (PC/NB/Power bank/adapter)
- Step2: Connect charging cable with the charging port of SP-2S.
- When the red light is on, the SP-2S is charging.
- When the blue light is on, the SP-2S is charged fully.
- It takes about 2~3 hours to charge the SP-2S fully.

Warning:

- The battery is rechargeable.
- First time charging : Before you use SP-2S, please charge the battery fully

How to use

A Switching on / off SP-2S

When turn on power switch , the SP-2S will into pairing mode. Wait the device connect with SP-2S.

When turn off power switch , the SP-2S will into power off status.

B Pairing the SP-2S with Bluetooth devices

A) How to enter pairing mode

Be sure SP-2S in "power on" status first. After ten seconds into pairing mode automatically, till Red and blue Led blink alternately, or you hear the "Pairing" come out. The unit will become pairing mode.

B) Pairing the SP-2S with Bluetooth mobile phone

Please make sure your mobile phone has Bluetooth function that can be used.

Specific pairing procedures were not the same with different mobile phone. Please refer to your mobile phone manual for further information. Steps as follows:

- Please keep the SP-2S and mobile phone in the range of 1 meter when pairing.
- Start the Bluetooth function of mobile phone and search the Bluetooth devices.
- Make the SP-2S enter into pairing mode (Please refer to "how to enter into pairing mode").

After searched, select "SP-2S" in the Bluetooth device list.

- According to indication, enter password or PIN No."0000", and press the key of "Yes" or "confirmed".
- After successful pairing, select "SP-2S" in the Bluetooth device list, and press "connect".
- After successful connecting, the blue LED of the speaker quickly blinks twice or three times every 4 seconds.

C Near Field communication (NFC)

If your mobile phone has built-in NFC , it will help your mobile phone connect and disconnect SP-2S easily.

A) Be sure SP-2S in "power on" status

B) Put the phone into the connection area in the left of SP-2S, they will be connected within seconds.

C) If you want to disconnect, just put the mobile phone into the connection area again.

Making calls with the Speaker

Function	Status of headset	Operation
Redial last number	Standby mode	long press MFB Calling The last number
Volume up	Conversation mode	Short press or long press V+ key. When the volume is adjusted to max, you will hear an indication tone.

Volume down	Conversation mode	Short press or long press V- key. When the volume is adjusted to min, you will hear an indication tone.
Answer calling	Ringing	Short press MFB
Reject calling	Ringing	Press and hold MFB for 1s, and release it till hearing indication sound






Warning: Excessive pressure from speaker can cause hearing loss.


Notes:

- For some mobile phones, when you press the key of accepting on the phone, the conversation will be sent to the mobile phone. At this time, you can switch the call to speaker by using the conversation switch button or through operating on the mobile phone. Please refer to the instruction of your mobile phone for further information

Playing music

When the speaker connects with the mobile phone or Bluetooth transmitter which supports A2DP, you can enjoy music through headset wirelessly.

Function	Status of speaker	Operation
Pause	Playing music	Short press 
Play	Pausing	Short press 
Last song	Playing music	Short press 
Next song	Playing music	Short press 
Volume up	Playing music	Short or long press 

Volume down	Playing music	Short or long press 
-------------	---------------	--

Notes:

- Remote control the function of last song/next song/pause, it needs your mobile phone or Bluetooth transmitter supports AVRCP. Please refer to the instruction of your mobile phone or Bluetooth transmitter, for further information.

LED indicator

A) Charging

LED indicator	Status of the headset
Red LED is on	Charging
Blue LED is on	Finish charging

B) In use.

LED Indicator	Status of the headset
Red and blue LEDs blink alternately	Pairing mode
Blue LED quickly blinks once every 2 seconds.	Not connected to a device
Blue LED gradually turns on and off	Conversation mode
Red LED blinks twice every 20 seconds	Low power

G Re-connecting to a Bluetooth device

A) Automatic connecting

Every time the speaker is switched on, it will connect to the nearest, and the last connected device automatically.

B) Manual connecting to last connected device

When the speaker is in standby mode and doesn't connect to any devices, short press MFB button once, it will connect to last connected device automatically.