

Motorcycle MP3 Audio Alarm System

(Instructions)

Thank you for using our wireless remote-control Motorcycle Digital Alarm Audio. In order to get over-all properties of this innovated products, please read the instruction carefully before using.

1. Introduction

This Motorcycle MP3 Audio Alarm System is a new generation digital device which is combination of remote control and burglar alarm function. It supports SD Card and USB Disk to play music and brings you a new experience to listen to music with HI-FI Stereo design, being more easier to use by convenient multi-function key. And its external is made of Aluminium Alloy, giving people a sense of excellence. It can cycle play music, keep last song and voice with memory function when it is power off.

2. Packing List

Including the below components, please check clearly.

Name	Quantity
Host Device	One piece
6P Connecting Line	One set
Remote Control	One piece
Speaker	One pair
Instructions	One piece

3. Operation

A. Installation Instructions

- (1) Put the USB Disk with Mp3 format or the SD Card into the related port.
- (2) Put the 5P Connecting Line of remote control into the left side port of this player.
- (3) Put the 6P Connecting Line of power/Audio into the left side port of this Player and connect the other side of the line to DC 12V. The Red with protective tube is positive pole, the black is negative pole.

B. Wireless Remote Control Function

- (1) Pressing clocking key to enter into security status with a voice "DU" when power off, Pressing clocking key again to enter into unlock position with two voice "DU" when power off. Pressing clocking key to be power off when playing music or receiving radio.
- (2) Pressing " ▶ | " to play music or switching to radio
- (3) Pressing " | ◀◀ " or " ▶▶ | " for previous or next song / FM channel-searching. Long pressing " | ◀◀ " or " ▶▶ | " for volum.

C. Drive-By-Wire function

- (1) Turn on/off: Long pressing red " ① " for two seconds to turn on playing music, meanwhile the red indicator lamp is lighting. Long pressing again for two seconds, it will be turned off meanwhile the red indicator lamp goes out.
- (2) Pause: Pressing " ▶ | " to stop music, and pressing again to re-play.
- (3) Previous / next song: Pressing " | ◀◀ " for previous song and " ▶▶ | " for next song.
- (4) Volume: Long pressing " VOL+ " for up voice, " VOL- " for low voice.

4. Note.

- (1) The voltage is DC 12V. Device will be damaged by higher voltage, it will not work normally with lower voltage.
- (2) While install this device, it needs to waterproof and heat dissipation, and spread receiving antenna.
- (3) This device supports most of USB disk and SD card, but for a very few which is not stable or slow speed.
- (4) The fevering is normal within the working temperature range because the aluminium alloy external is functional heat-dissipation component.

5. Technical specifications

Voltage: DC 12V

Power Rating: 2*10W 8Ω

Output frequency range: 20Hz-20KHz

Remote distance: open areas ≥ 100m

Working temperature range: -30°C ~ +60°C

6. Warranty

The warranty period is half of year. (Except for the special defined)

The following terms is not included for warranty

- (1) Product is beyond warranty period.
- (2) All damage because user fails to according to manual installation to install and maintain the product, such as using wrong power, improper safekeeping, and isn't in a stipulated work environment to use.
- (3) All damage because of disassembling or changing the hardware and software of product
- (4) Water or man-made damage
- (5) All damage due to force majeure factor of natural disasters, such as earthquake, typhoon, etc.

Warranty Card

PRODUCT INFORMATION	CONSUMER INFORMATION
Name:	Name:
Serial No.:	Tel:
Item No.:	Add:
Purchase Date:	
REPAIR INFORMATION	
Repair Date:	
Malfunction:	
Repair Result:	
Repair person:	