 



1. Accessories

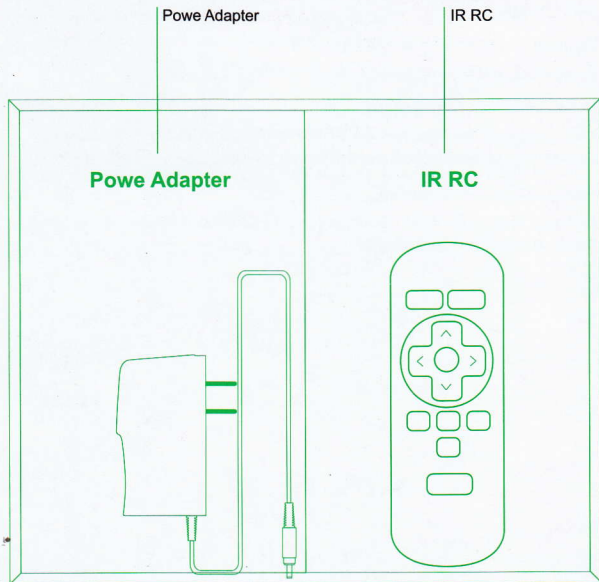


2. Connectors

USB Port supports plug and play of Mouse, Joy Stick, Air Mouse and Keyboard by simply plugging the USB ports into the USB connectors of the device.

- | | | | | |
|-----------|--------------|-----------------|------------------|-----------|
| 1 Lens | 2 Air Outlet | 3 Focus | 4 Power | 5 TF Slot |
| 6 LOGO | 7 OK | 8 Direction Key | 9 Menu | 10 Return |
| 11 ON/OFF | 12 IR/LED | 13 HDMI Output | 14 Earphone Jack | 15 DC IN |
| 16 USB | 17 USB-OTG | 18 Speaker | 19 Air Inlet | |

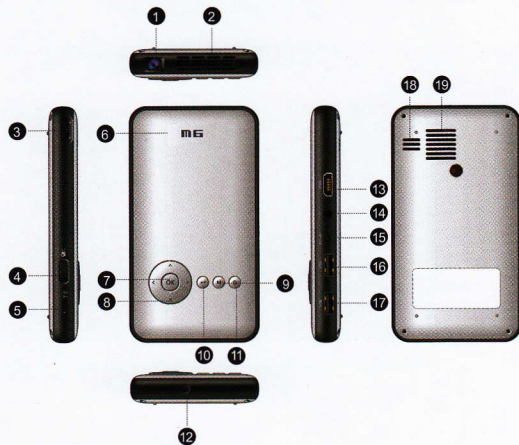 

 3. Key Illustration of IR RC

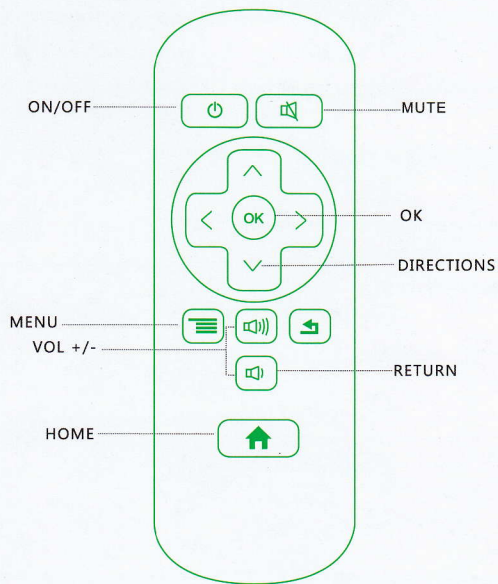

4. Main Features

The device is a smart projector with HDMI Output, supporting 2.4G air mouse and Bluetooth.

 


5. Network Connection

1. Wireless connection: Choose Settings / WIFI / Wifi Password / Get Connected
2. Ethernet connection: Plug the RJ45 and choose Settings / Ethernet / Get Connected


6. Airplay / Wifi Display / DLNA

1. The device supports Airplay /Wifi display / DLNA
2. Without any extra app, iPhone/Ipad will find the device and ipush the pictures/videos/music to TV screen.

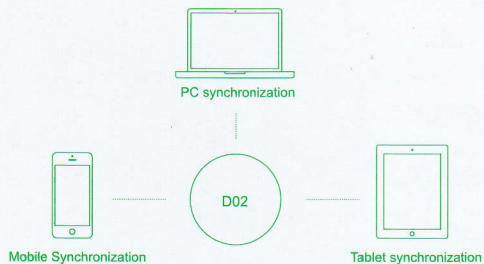

7. Software

 1. Android 4.4 OS, supporting any common third party software.
2. To install the target apk, copy the file to the device, go to filemanager, click the apk and the apk will install automatically.
3. Any shortcut of installed apks can be dragged to the UI interface.
4. Delete APK: go to settings / applications / manager applications, choose the apk and then delete it.

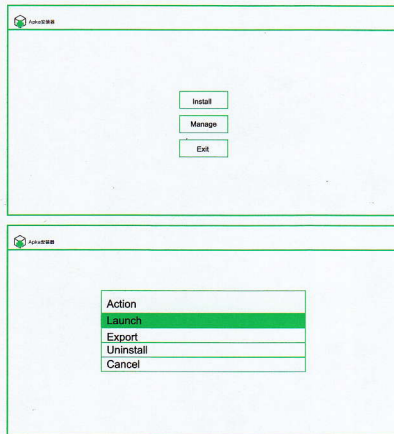

8. Network Requirement

Required Network

Mini: 2mpbs.

Routers

Routers must be auto dialed and with PPPoE function.

Wired Webwork Connection

After plugging the wire, the device will automatically obtain IP address, realizing local connection and /or online access.

Wireless Network Connection

Setting / Network / WIFI / Sourcing WIFI / Choose WIFI /
Enter Passowrd / Connected.

9. Trouble shooting

The device can't boot up normally

1. Check the power adapter to be in good contact.
2. Static phenomenon causes temporary failure. Please press Power key and restart the device.

HDMI Output Networking

1. Check the device default signal to be HDMI
2. Check the HDMI cable in good connection or not. Otherwise replace with a new one.