Voice Recording Photo Album

Thank you for purchasing the Voice Recording Photo Album!

Set Includes 1 of each of the following:


Voice Recording Photo Album - Create your memory with voice recording on each page (20) and auto playing back feature. Total recording time is 600 seconds for the album. Each page will have minimum recording time of 30 seconds.


Instruction Sheet - Detailed step by step directions for use.

Photo Corners - 200 pieces of clear corners with no mess self-adhesive backing.

Directions for Use:

1. Use provided photo corners to mount your pictures onto the pages. You can use a glue stick if you like instead of the corner.

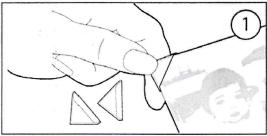

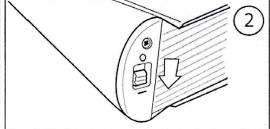

- 2. Slide the on/off switch to the "On" position(at "Off" position during shipment).
 - 3. Turn to the page where you would like torecord, then press and hold the "rec/stop" button until you hear "Begin recording after the tone..." and the button lights up.







- 4. Start to record your voice after you hear the tone.
- 5. Press the "rec/stop" button briefly if youwould like to pause the recording. The button flashes. You can resume the recording by pressing the button again.




6. Once you complete your recording on the page, press and hold the "rec/stop" button until you hear the tone twice. Press the button to listen your recording.

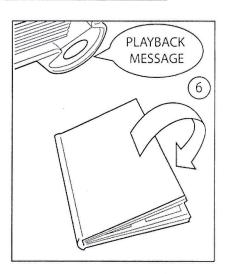



7. Your recorded voice will be played automatically every time you turn to that page. Press the Rec/Stop buttonto pause playing back. Press it again to continue the play back.

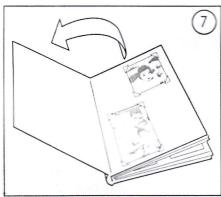

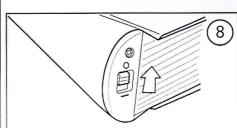

  - 8. If you do not wish to hear the voice when youopen the album, you can manually slide the on/offswitch to the "Off" position.
- 9. To prevent accidental deletion of the recording, slide the locking switch to the "lock" position. Make sure the locking switch is at "unlock" position when recording.





10. The Album uses 3 AAA batteries. To replace batteries, use a screwdriver to open the battery cover. Removing batteries will not erase the recording.

Care Instructions:

Do not store or expose the product to the environment with high humidity and high temperature. Remove batteries for long time storage. Wipe with damp cloth if necessary.

Battery Caution & Disposal Information

- 1. For best results, use alkaline batteries (AAA size).
- 2. Install only new batteries of the same type in your product. Do not mix old and new batteries.
- 3. Failure to insert batteries in the correct polarity, as indicated in the battery compartment, may shorten the life of the batteries or cause batteries to leak.
- 4. Batteries should be disposed of as per state and local guidelines. Do not dispose of batteries in fire.

For Questions or Comments.

Made in China