

POWER BUTTON USAGE


Turn On: Press the power button and hold for 2 seconds.

Turn Off: Press the power button and hold for 2 seconds → tap **Power off** → tap **OK**.

Reboot: Press the power button and hold for 2 seconds → Tap **reboot**.

Quickly Hibernate/wake-up: Press the power button and hold for 2 seconds → tap **Hibernate** enable the device to hibernate.

Airplane mode: Press the power button and hold for 2 seconds → Tap **Airplane mode**.

Silent mode: Press the power button and hold for 2 seconds → Tap 

Vibrate mode: Press the power button and hold for 2 seconds → Tap 

Normal mode: Press the power button and hold for 2 seconds → Tap 

Force Off: If device does not respond, press and hold the power button for 5 seconds.

(Warning: Force off could lead to unpredictable system errors!)

Reset: Press the reset button could be reset the device. It's will clear the all data, Please careful with the function. **(Note:** After the current reset function can't restart, can only be turned off, so you need to press the power button restart the device after reset.)


Charge the device


Plug the power adapter into an electrical wall outlet, and then connect to the device to fully charge the battery before use (A full charge takes about 6 hours in the off status).

DESKTOP



1. Back.
2. Home.
3. Recent Apps.
4. Hide status bar.
5. Menu.
6. Current time.
7. Screen capture.
8. Volume.
9. Wireless network
10. Battery Status.
11. Google search.
12. Voice search.
13. Add Widgets/Apps shortcuts or setting wallpapers and more.
14. Tap to view the applications screen

Through add icon  can make many personalized operation, such as, add widgets, application shortcuts, set wallpaper, add bookmarks, email accounts and set up the shortcut.

- ☆ Tap on any application icon to launch it.
- ☆ Touch, hold and then slide icons to reposition then on the screen.
- ☆ Touch, hold and slide icons onto  to remove them












 
from the **Desktop** screen.





 




SCREEN LOCK


Can be set to automatically lock screen or quickly press the power button to manually lock screen. The system provides four lock screen style for users. You can enter **Settings** → **Security** → **Lock Screen** to switch.

Tap the unlock icon and drop it to the right and out of the circle to unlock.


PRE-LOADED APPLICATIONS

	Weather	Set up the degree of temperature, weather auto-refresh rate, add city and view the city's weather.
	Clock	It can display the time and set the alarm.
	App Market	Downloaded applications quickly & easily.
	Browser	Access internet.
	Calendar	Calendar.
	Camera	Take normal photos, panoramic photos and take video.
	Calculator	Do calculation.
	Email	Send/Receive email using your existing email addresses.
	File Browser	File manager application for viewing and managing files and apps. Use to install Android apps, and to backup files to your SD card.
	My Music	Play and manage audio files.
	My Video	Play and manage video files.
	My Photo	View and manage photo files.

	Gallery	Play, view, and manage video and photo files.
	Picture Capture	Capture image of the screen.
	Task Manager	Application manager for managing processes.
	Voice search	Voice search.
	Flash player settings	Flash player settings.
	Downloads	View the downloads and the download progress.
	Hi 乐逗	Download android games.
	Search	Local search and online search.
	Settings	Multiple settings for personalizing and enhancing your Device.

☆ To move an icon to the Desktop screen, touch & hold the icon, and then release it when it appears on the Desktop screen, or click  icon, Then click on the icon which you want to add to desktop in the App shortcuts below this interface, the icon will automatically move to the desktop.

☆ Touch, hold and then slide icons to reposition then on the screen.

☆ Touch, hold and slide icons onto  to remove them from the Desktop screen.

3G NETWORK

First of all you need to buy 3G wireless network card according to China Telecom, China Mobile or China Unicom. The currently supported on the 3G card type please refer to **3G dongle support list** or **appendix**.

We strongly recommend on buy the 3G Network Cards, in order to ensure normal 3G Internet access. Please come to the prepaid card into the purchase of 3G Network Cards, put the 3G network card insert into the device. At this time it will be bright lights on the 3G network card, which

indicated that it could begin to connect the 3G network.


Tap **Settings** → **3G network**, And tap “**Add 3G network**”, in the pop-up dialog box, Fill the **name**, **Device number**, **APN**, **user** and **password** information.

Name: In the pop-up dialog box, Name field enter the name you want free you can.

Device number and APN: Please fill in the information provided by carriers. (As in China: If you use China Unicom and China Mobile's 3G network card, **device number** field need to fill in “*99#”, **APN** need to fill in the “cmnet”; if China Telecom formats 3G on the card, phone number need to fill in the column “T*777”, **APN** do not need to fill in the name of column.)

User and Password: If you use the standard of China Unicom and China Mobile's 3G network card, user and password fields are free to fill or not fill; if you use the standard of China Telecom's 3G network card, **user** and **password** fields need to fill in (**user**: card, **password**: card).

Note: If enter the above user and password does not work properly. Please make try to fill in (**user**: ctnet@mycdma, **password**: vnet.mobi) or (**user**: ctnet, **password**: vnet.mobi), also you can request to China Telecom.

Fill then click the link, and you will see the bottom of status bar 3G symbol  appears, indicating the completion of 3G is connected, and then you can get online.

GPS

GPS functionality requires the use of a USB interface external GPS receiver. Users need to download the navigation software and map from the internet, through the SD card installation (please refer to the Application Management section of this User Guide). The currently supported on the GPS receiver type please refer to Appendix.


PPPoE SETTINGS

Before using this feature, Insert the USB network card into the device.

1. Tap **Settings** → **PPPoE settings**.
2. Input name and password then click connect to access the broadband network.

ETHERNET

Before using this feature, Insert the USB network card into the device.

When the USB network cable plugged into the USB network card, you will see the bottom of status bar ETH symbol  appears

1. Tap **Settings** → **Ethernet**.
2. The device can automatically obtain IP address to connect to the network. You can also choose to manually set the IP address to get connected.

FREQUENTLY ASKED QUESTIONS

Android

Q: What Android OS version is on my Device?

A: 4.0.3

Basic Device Functionary

Q: Do I have to charge the battery before use?

A: You should charge the battery for at least 6 hours in the off status, but you can use the device while it's charging.

Email

Q: Can I use any of my personal email addresses to send/receive email?

A: The device supports POP3 and SMTP accounts. Some free email accounts are not supported on mobile devices. Check with your email provider to see if you account is supported.

Media Cards

Q: Which media cards are compatible with my Device?

A: SD cards.

Music

Q: What type of music files can I play on my device?

A: MP2, MP3, WAV, AAC, WMA

Q: How do I add music files to my device?

A: Copy the music files from your computer onto a SD card or USB storage device, and then use the File Browser application to copy the files into the device.

Photos

Q: What type of photo files can I view on my device?

A: JPG, JPEG, BMP and PNG.

Q: How do I add photo files to my device?

A: Copy the photo files from your computer onto a SD card or USB storage device, and then use the File Browser application to copy the files into the device.

Video

Q: What type of video files can I play on my device?

A: Video file formats supported: MPEG1/2/4、H263、H264、VC1、RealVideo、MotionJPEG. The largest video format is supported 1080P(1920×1080) resolution.

Q: How do I add video files to my device?

A: Copy the video files from your computer onto a SD card or USB storage device, and then use the File Browser application to copy the files into the device.

Wi-Fi**Q: Do I need a Wi-Fi adapter to connect to the Internet?**

A: No. The Wi-Fi adapter is built-in to the device.

Inconsistent with the physical specifications, please prevail in kind.

BATTERY MANAGEMENT

The battery is not fully charged out of the box, so it is recommended that you charge the battery for at least 6 hours before you start to use the device.


The rechargeable battery is designed and manufactured to be used and recharged frequently. As with all batteries, the capacity of the battery reduces each time it is charged/depleted. However, you can still try to prolong the battery's lifetime by following the suggestions below:

- Use your Tablet at least once a week.
- Charge the battery regularly and fully.
- Never leave the battery fully discharged for a long period of time.
- Always keep the device and the battery away from heat.

Charge battery

Plug the power adapter into an electrical wall outlet, and then connect to the device to fully charge the battery before use (A full charge takes about 6 hours in the off status).

☆ *You cannot charge the battery using the USB cable.*

When fully charged, the battery icon displays as .

A fully discharged battery takes approximately 6 hours to fully charge in the off status, but you can use the device while plugged in when desired.

IMPORTANT SAFETY PRECAUTIONS

Always follow these basic safety precautions when using your Tablet. This reduces the risk of fire, electric shock, and injury.

- Do not expose this product to rain or moisture.

- Keep the device out of direct sunlight and heat sources.
- Protect the power cord. Route power cords so that they are not likely to be walked on or pinched by items placed on or against them. Pay particular attention to the point where the cord attaches to the device.
- Only use the AC adapter included with the device. Using any other power adapter voids your warranty.
- Do not remove the cover. There are no user-serviceable parts inside.

Cleaning your device

Treat the screen gently. To clean fingerprints or dust from the screen, we recommend using a soft, non-abrasive cloth such as a camera lens cloth.

Appendix : The optional parts and models

Parts name	Parts type	
3G Wireless Network Card	TD-CDMA	TD368
	WCDMA	HUAWEI E220
		HUAWEI E230
		HUAWEI E160X
		HUAWEI E169G
		HUAWEI E1750
		HUAWEI E173
		HUAWEI W8
		HUAWEI E153
		HUAWEI E153u6
		VW718/719
		Alcatel AL720
		ZTE MF190
		ZTE MF110
		ZTE MF210
		SEW868
		UW100
	CDMA2000	Bora 9380
		AWIT-U8
		RATE EC186
		ZTE AC2736
		SEV759
GPS Receiver	Central-day technology ND100	
	Central-day technology ND100S	