

---

# **User Manual E-book**

## E-book User manual

Thank you for your purchasing E-book reader. This manual describes the various functions of this E-book. So you can operate the E-book freely and fully understand this product. This product bring value to your enjoyment. Please read this user manual carefully before using this e-book. The manual version number is Ver.

### Note:

 
1. Note that a new battery only in two or three complete charge and discharge cycles before we can achieve optimal performance.
2. New battery in use after the first three full power to extend 3-4 hours. The fourth start can be just filled with power. So that can achieve the best performance.
3. In order to prevent data loss, we recommend the users to backup important data, especially before the firmware update.
4. This product is a high-precision electronic product, please do not disassemble it on their own.
5. Avoid strong beat or collision to the player.
6. Avoid using the player in the following environments: high temperature, low temperature, humidity, dust, strong magnetic fields, and long term exposure to sunlight.
7. Can be used wrung wet cloth gently wipe the shell of the player. It is strictly prohibited to use other chemical cleaning solutions.
8. This player shall not be subjected to water droplets and water splashing. Also it should not be placed near the cup filled with liquid items.
9. When you listening, please adjust the appropriate volume in order to avoid hearing damage.
10. Please do not change any part of this player
11. Please use the batteries, chargers and accessories which allowed by manufacturer
12. The any other type of product used maybe dangerous and would violate the warranty regulation.
13. Follow the relevant local environmental regulations to deal with the obsolete machinery and accessories.
14. If you have any questions during use the player, please contact your local dealer or directly with the company's customer service center.
15. Products subject to any changes, without notice, for any inconvenience Caused, please forgive us.

### Special Note:

In order to facilitate reading, you can always read ebooks are stored in "Book" folder. The you can open the file rapidly and conveniently.

### > Appearance and the Key definition

#### (一) Appearance and the Key definition

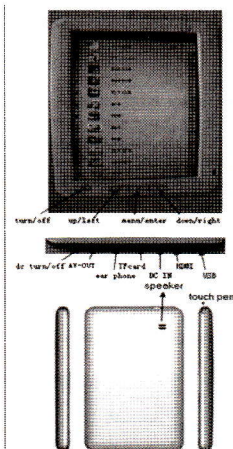

### Key function Description

- 1.: Direction key
  - 1.1. in the main interface and content list interface: short press the direction key to choose the file
  - 1.2. in the music interface, short press the direction key to adjust the volume and choose the song
2. Switch ON/OFF: Push switch "Switch ON/OFF" key to turn on/power off.
3. Esc: short press the button to realize return previous interface. Long press "Esc Key to return to main menu.
4. M: in any interface, short press the key to enter the submenu or play music/video/E-book.
5. Play/pause: in any interface, short press the key to enter the submenu or play music/play music/video/e-book, in the music playing interface, press press the key to realize start/pause.
6. Page up/down:
  - 6.1 in content interface, short press to select the upper and lower directory
  - 6.2
7. Turn on /Power off
  - Turn On: Press key 3 seconds to turn on.
  - Power off: Push key 5 seconds to turn off.

### > Data transfer, Charging Steps

## (二) Data transfer

First, Connect the player to the computer by USB cable, then choose the files which you need in the computer, copy the files from computer to the player

## (三) Charging Steps

### 1. Using the standard USB cable

**Step one:** using the USB cable connect the player and computer's back-end USB port (do not use the computer's front USB port, otherwise it will extend the charging time)

**Step two:** After connected to the computer correctly, the computer screen will appear on-line icons, double-click the bottom right of the computer the "Safely remove hardware" to remove equipment, player do not pull out and continue connect to the computer, this time the player begin to charge.

### 2. Use the charger for charging

**Special Note:** the selected charger specifications must meet the following requirements, otherwise, any accident or failure cause will be as man-made damage

 
**Input:** AC110V~240V 50/60Hz Max:150mA

**Output:** DC5.0~5.5V 1000mA(USB) 1500mA(DC)

### 1. open the E-reader

Press the power on/off button 3-5 sec turning on the player

### 2. Main interface

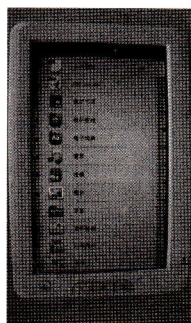

This interface shows all the functions which the model has. If you want to enter the submenu, you can touch the icon which you need.

Battery indication, display the batter capacity, if it is empty, then please charging in time.

Time indication.

Volume Indication

Home, touch the icon return to main menu.

Music: touch the icon enter Music interface

Video: Touch the icon enter Video Interface.

Picture: Touch the icon enter Photo browse interface

Record: Touch the icon enter Record interface

E-book: Touch the icon enter E-book read interface.

Application: Touch the icon enter Application interface. can play 256 bit game in the interface,

Browser: Touch the icon enter Files browser interface. you can find all files include music, video, photo, e-book files and so on.

Setting: about, OTG connect, Video setting, Time set, Display, Bright time, Sleep off, Auto off, Speaker, Language, Lock time setting, Calibrate Touch screen, Channel Setting, Default Set.

Last read: Touch the icon enter the files last read.

My Library: Touch the icon enter the "My library" interface, you can find all E-book files except PDF files.

Library manger: Touch the icon enter the "Library Manager" interface, you can find all E-book files.

## Music playing

In the main menu interface, touch icon enter Music playing interface.

### Playing Operation

In the music playing interface. Touch icon on screen to realize Playing Operation function.

- 1) Play/Pause. connect the earphone to the player, choose the music from the list, short press the start playing, short press the music pause or touch and icon on the screen.
- 2) short press the left/right button to choose the pre/next song or touch the icon and on the screen.
- 3) Fast forward/quick return: long press "previous/next" key of Direction key to realize forward/quick

- 4) Repeat mode: Touch icon to choose Repeat mode: Order, Shuffle; Repeat once; Once

- 5) EQ setting: Touch icon to choose EQ mode: normal, MSEQ, Rock, Pop, classic, Bass, Jazz, user EQ.

- 6) A-B repeat: Touch icon to realized A-B repeat read function

### Playing setting

In the music files content interface, touch "Menu" icon, spring out submenu list: Playing, All song, Folder once, Album, Artist, Title, Music setup.

### Music Setup

- 1) Play mode: all repeat; Order, Shuffle; Repeat once; Once

- 2) 3D audio setting:

Open/ Close 3D

Sound output Setting: General headphones ; HI-FI headphone, General speaker;Larger speaker.

3D processing: Close; weak; medium;strong

Automatic volume Balance: OFF/ON

Bass: Close; weak; medium;strong


 

HF Compensation: Close; weak; medium;strong

3) EQ Setting: Normal;Jazz, Pop,Rock, Classic; Vocal; Treble; Bass.

4) Background Play: ON/OFF

5) Update Jukebox

#### Video playing

In the main menu interface, touch  icon enter Video content interface. Press "Previous/next" Direction key to choose video and touch video name to start playing, press "up/down" to adjust the volume,touch the  to come back to the previous interface . touch  Icon to retrun to the main menu..


1、touch the video icon to get the video list. touch the name of the video it will start playing.

2、In the Video content interface. Touch the "Sort" icon , spring out submenu: Sort by name;sort by time; sort by type.realized videl files rang by Name/time/type .




2、under video playing mode,long press  to speed up or quick move back.




3、volume adjust:under video playing mode, Touch "+/-" icon to adjust the Volume or press "up/down"Direction key to adjust the volume.

4. When playing the video,press "M" key , it will spring out function menu.: Tvout setting;Fix time Play; screen Controls ;Continue play , Channel Setting:






 
5. Pre/next change: short touch  and to change the pre/next movie or press Direction key .

#### Picture browsing




In the main menu interface. Touch  icon enter picture content interface, press "Page up/page" or "previous/ next" direction key to choose photo , touch photo name to start browse. ,touch the  to come back to the previous interface . touch  Icon to retrun to the main menu..

In the picture browse interface, touch " " to realized rotate picture, touch  icon to realize the curenty pic as background,touch  to realized start /pause picture browse, touch  icon to realized change picture .

#### Record

In the main menu interface. Touch  icon enter record interface, touch  icon to realized quality setting( high quality,mid quality,Low quality) , press  icon to realized start/pause record. Touch  icon to save recording,touch the  to come back to the previous interface . touch  Icon to retrun to the main menu

#### E-book reading

In the main menu interface. Touch  icon enter e-book content interface, touch photo name to start e-book reading,touch the  to come back to the previous interface . touch  Icon to retrun to the main menu

In the e-book reading interface (HTML,HTM,TXT,PDB File format s). Touch "Menu" Icon, spring out submenu: Autoplay, Jump To, Bkmark, Chapter, Ftsize, Fonts, Rotate, color,TTS; touch "Reading" icon to realize "TTS" function . Touch "annotation" Icon , spring out "Annotation""Delecte this""Delete all " submenu, touch submenu to realize "add Annotation"and "Delecte Annotation" function (the function are available for HTML,HTM,TXT,PDB File format only). Touch "Music" Icon , spring out Music player, can start/pause music and change previous/next music directly on the music player; Touch "previous/next" Icon to change content page .

##### Submenu function Specification

Autoplay: Perlire, Perpage, Smooth,

JumpTo: adjust Page NO. and touch "ok/cancel" to realize Jumpt page or cancel Jumpt page function

Bkmark: add bmark ;Del Bmark

Chapter:

Ftsize: FTSize; Linewidth , flow touch  to change Ftsize and Linewidth , touch "OK/cancel" to realize function. Fonts:

Rotate: Touch the Icon to rotate E-book reading direction

Color: font color; Bkg color setting;Flow touch Color strip (Red,Green,blue) to adjust color, touch "ok/Cancel" to realize change color function,

 
TTS: Touch the Icon, spring out TTS setting menu : Woman/ man; slow/normal/fast; none/wander/echo; Robert/chorus/udwater; Reverb/eccentric . choose setting option you need, touch "OK/Cancel" to realize function,

In the E-book reading interface( PDF,UMD),Press "M" key , spring out: Back to program; zoom in/out; Rendering size; display setting; Jump To, Esc,

#### Application

In the main menu interface, Touch the  Icon enter Application interface. can play 256 bit game In the interface,

#### Browse

In the main menu interface,Touch the  icon enter Files browser interface.you can find all files include music,video, photo,e-book files and so on .

#### System settings

In the Main menu interface, Touch  icon enter setting interface.

1). About: Checking hardware and software information

2) OTG connect :

3) Video setting:

Continue play: On/off ;

Zoom Mode:Normal, fillbox, full screen,fit 110%, Fit 120%, Zoom 100%;

aspect Ratio :Auto Detect; 4:3 ; 12:11 ; 10:11 ;16:9; 16:11; 40:33 ; 2.35:1; 1:1

DHMI Mode: 720p\_50HZ, 720p\_60HZ;576P;480p

4) Time Set :

5)Display: Background lights; Back to Default Background

6)Bright time : 5s, 10s,15s,20s ,30s, Always on

- 7) Sleep Off: 10 min, 30 min, 1hour, Switch off  
 8)Auto off : 10 min, 30 min, 1hour, close  
 9)Speaker: Off/ON  
 10)Language: Chinese; english , Multi-language  
 11) Lock time Setting: 5s, 10s, 30s,60s, 5min; No Locking  
 12)Galibrate Touch screen  
 13) Channel setting: Normal; Invert; Left; Right  
 14)Default Set:

### 13.Restart the player

If the player encountered an illegal operation and anomalies appear. Such as setting screen,can not operational etc. push the switch key to off side. And restart again .

#### (四)、Troubleshooting

- ① Reader can not be properly turned on

Check the battery is without electricity

Connect the charger and recheck it

If it can not be open after charged again, please contact with our customer service

- ② earphone can not hear the voice

check the volume is set to "0"

check the earphone connection there is no problem

- ③ **Serious Noise**

Please check whether the earphone plug clean, dirt can lead to noise

Check the music file is damaged,try playing other music.If the file has been damaged, Could lead to serious noise.

#### (五)、Function

No.	Function list	
	Name	Content
1	Music	MP3 , WMA、FLAC、WMV and AAC.
2	E-book formats	TXT、PDF、PDB、FB2、EPUB、HTM、HTML
3	Video	MPEG-4、WMV、RM、RMVB、3GP、FLV、MP4、DAT、VOB、MPG、MPEG、MKV、MOV video format play ,full screen play display
4	Picture browsing	Support JPG,BMP
5	SD card	Support up to 8GB
6	System information	support
7	Record function	Support Voice record and FM record
8	TTS	Txt to Speech(optional) Chinese&english only