



 
## Taking Photos and Recording Videos

The camera is a combination of camera and camcorder that you can use to shoot and share pictures and videos.

### Opening Your Camera

1. Touch  > **Camera** to open the camera. The camera opens in landscape mode, ready to take a picture or shoot a video.
2. Press  on the picture capture screen to close the camera.


### Capture Screen

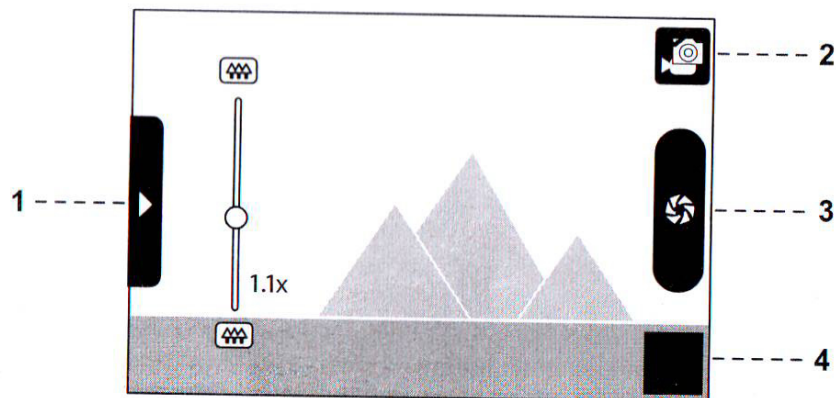

On the capture screen, touch the screen to show the zoom in or out controls.

- 1 Touch to open the settings panel.
- 2 Touch to take a photo or shoot a video.
- 3 Touch to shoot videos (camcorder mode) or take photos (camera mode).
- 4 Thumbnail of last photo. Touch to preview the photos or videos.



### Taking a Photo

1. Open your camera and switch to the camera mode.
2. If necessary, open the settings panel to change the camera settings. The preview changes as you change the settings.
3. Compose your photo within the photo capture screen.
4. Touch and hold  to take your photo.

### Viewing Your Photos

1. After taking a photo, a thumbnail of the photo you have just taken is shown in the bottom right corner of the Capture screen. Touch the thumbnail to view it.
2. Touch the onscreen button to do any of the following:
  - Touch **Delete** to delete the photo.
  - Touch **Share** to send the photo in a message or post it online.
  - Touch **More** > **Set as** to set the photo as a wallpaper or a contact icon.
3. If you want to view more photos, touch the screen, and then flick right or left.

### Making a Video

1. Open the camera, and then switch to camcorder mode.
2. If necessary, open the settings panel to change the camcorder settings.
3. Frame the scene which you want to start your video.
4. Touch  to start recording a video. The camcorder starts shooting the video.
5. Touch  to stop shooting. You can shoot another video or preview your videos.



## YOUR MOBILE PHONE

### Mobile Phone View



- |                       |                            |
|-----------------------|----------------------------|
| 1 Power key           | 9 Send key                 |
| 2 Earpiece            | 10 Menu key                |
| 3 Front Camera        | 11 Search key              |
| 4 Proximity sensors   | 12 Back key                |
| 5 Volume control keys | 13 Headset jack            |
| 6 Capture key         | 14 Charging/Data interface |
| 7 End key             | 15 Camera                  |
| 8 Home key            | 16 Speaker                 |

## Key functions

### Power key

- Press to turn on your mobile phone
- Press and hold to open the **Phone Options** menu.
- Press to lock the screen when your mobile phone is on.



Send key

Press to go to the **Call log** screen



End key

Press to end a call



Back key

- Press to return to the previous screen.
- Press to exit any application you are running.



 
Menu key

Press to open the menu on an active screen.



## GETTING STARTED WITH YOUR MOBILE PHONE

### Installing the SIM Card

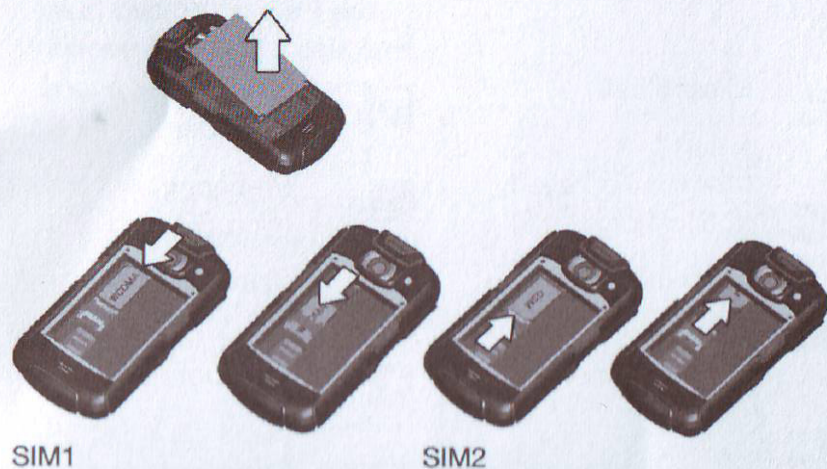

1. Remove the battery cover carefully. Use a screwdriver to loosen the screws.
2. Insert the SIM card as shown in the diagram and close the battery door.
3. Use the Screwdriver carefully and do not overwind the screws.

**Note:** When inserting the SIM card, ensure that the golden contact faces downward. Card slot 1 supports WCDMA and GSM networks while card slot 2 supports only GSM networks. If you want to use a SIM card supporting WCDMA networks on your phone, insert the card in card slot 1 for better services.

## NOTIFICATIONS AND STATUS INFORMATION

### Notification and Status Icons

	Call in progress		Call in progress using Bluetooth device
	Missed call		New calendar reminder
	More undisplayed notifications		Preparing microSD card
	Roaming		Signal strength
	Airplane mode		Bluetooth on
	Connected to another Bluetooth device		Connected to a Wi-Fi network
	Speaker on		Sound off
	Vibrate mode		Microphone off
	Battery full		Battery very low
	Battery is charging		Music playing
	Alarm set		New email
	New message		



## USING A MICROSD CARD

### Installing the microSD Card



1. Remove the battery cover carefully. Use a screwdriver to loosen the screws.
2. Insert the microSD card as shown in the diagram and close the battery door.
3. Use the Screwdriver carefully and do not overwind the screws.

**Note:** When inserting the microSD card, make sure that the gold contacts face towards the front of the phone.


### USING THE MICROSD CARD AS USB MASS STORAGE

To transfer all your favorite music and pictures from your PC onto your mobile phone's microSD card, set the microSD card as USB mass storage.

 
1. Connect your mobile phone to your PC with the USB cable.
2. Touch **Mount microSD card to your computer** in the dialog box that opens to confirm that you want to transfer files. Your PC will detect the microSD card as a removable disk. You can now transfer files from your PC to your microSD card.

## USING THE ONSCREEN KEYBOARD

### Displaying the Keyboard Panel

Open the keyboard as follows: Touch the space where you want to write text to display the keyboard. Press  to hide the keyboard.

### Using the Android Keyboard

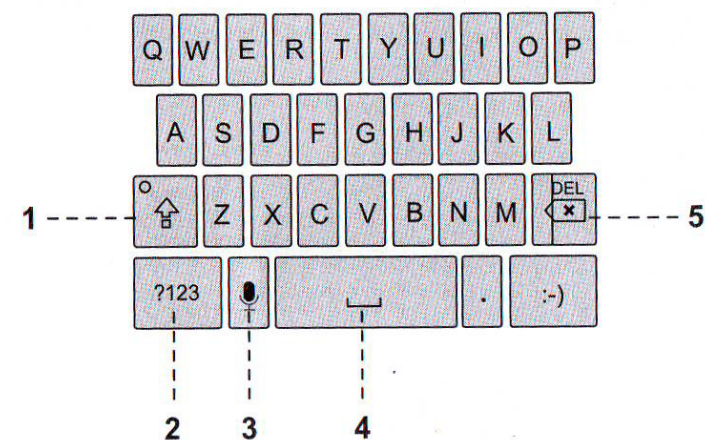

- 1 Touch to change from uppercase to lowercase.
- 2 Touch to change from text mode to symbol/ number mode. Touch again to change back.
- 3 Touch to turn on voice input.
- 4 Touch to insert a space in your text.
- 5 Touch to delete a character to the left of the cursor. Touch and hold to delete all characters to the left of the cursor.



## Creating a Google Account


If you do not have a Google account, you can create one:

1. After reading the setup information, touch **next**.
2. Touch **Create**.
3. Enter a first name, last name, and user name for your Google account, and then touch **Next**. The mobile phone will connect to the Google server to check whether the username is available. If the username you entered is already in use, you will be prompted to choose another one or select one from a list.
4. Enter and confirm your Google account password.
5. Select a security question from the drop down menu, and then enter the answer.
6. Touch **Create**.
7. When the **Google Terms of Service** screen appears, touch **I agree, Next**.
8. Enter the characters that appear on the screen, and then touch **Next**.


## Using Gmail

**Gmail** is Google's web-based email service. When you first set up your phone, you may have configured it to use an existing **Gmail** account or create a new account. The first time you open the **Gmail** application on your phone; your **Inbox** will contain the messages from your Gmail account on the web.



 
## Opening Gmail

Touch  > **Gmail**. The **Inbox** mail list appears. Any emails you decide to keep on your mobile phone will go to your **Inbox** folder.


## Switching Between Accounts

1. In the mail list, press , and then touch **Accounts**.
2. Touch the account that contains the email you want to read.

## Creating and Sending an Email

1. In the mail list, press , and then touch **Compose**.
2. Enter the message recipient's email address in the "To" field. If you are sending the email to several recipients, separate the email addresses with commas. You can add as many message recipients as you want. If you want to send a copy (Cc) or a blind copy (Bcc) of the email to other recipients, press , and then touch **Add Cc/Bcc**.
3. Enter the email subject and write your message. If you want to add a picture attachment, press , and then touch **Attach** to select the picture you want to attach.
4. After composing your email, touch **Send**.

## Replying To or Forwarding an Email


1. In the mail list, touch the email that you want to reply to or forward, and then touch  on the upper right.
2. Touch **Reply**, **Reply all**, or **Forward**.
3. Do one of the following:
  - If you selected **Reply** or **Reply all**, enter your message.
  - If you selected **Forward**, specify the message recipients and add any additional text you want to include with the forwarded message.
4. Touch **Send**.



## Using Market

Android Market provides direct access to applications and games which you can download and install on your phone.

## Opening Market


1. Touch  > **Market**.
2. When you open **Market** for the first time, the **Android Market Terms of Service** window will appear. Touch **Accept** to continue.

## Searching for Applications

There are a few different ways to find applications on the **Market** home screen, including:

- **Featured applications:** Scroll horizontally to view more.
- **List of applications by category:** Includes subcategories, which you can sort by popularity.
- **List of games.**
- **Search function.**
- **Downloads:**

## Installing an Application

*If you want to install a non-Market application, touch  > **Settings** > **Applications**, and then select the **Unknown sources** check box to allow installation of the non-Market application.*

1. In the **Market**, touch **Apps**.
2. Touch a category, and then touch the item you want to download.
3. On the item details screen, read more about the application, including its cost, overall rating, and user comments. If you scroll down to the **Developer Info** section, you can see other applications from the same developer or link to the

developer's website.

4. To install the item, touch **Free** and then touch **OK**, whichever is displayed.
5. To check the progress of a download, open the notification panel. Most applications are installed within seconds. To stop an item from downloading, touch **Cancel**.
6. After the application has been downloaded and installed on your mobile phone, the content download icon appears in the notification bar.

## Uninstalling an Application

1. On the **Market** screen, touch **My apps**.
2. Touch the application you want to uninstall, and then touch **Uninstall**.
3. When prompted, touch **OK** to remove the application from your mobile phone.
4. Choose the reason for removing the application, and then touch **OK**.

## SYNCHRONIZING

Some applications on your mobile phone give you access to the same personal information that you can add, view, and edit on your computer. If you add, change, or delete your information in any of these applications on the web, the updated information also appears on your mobile phone.

This is made possible through over-the-air data synchronization. The process occurs in the background and does not interfere with use of your mobile phone. When your phone is synchronizing, a data synchronization icon will be shown in the notification bar.



Scope of Delivery:

- 1 x Mobile Phone
- 1 x 2000mAH Polymer Lithium Ion Battery
- 1 x Charger
- 1 x Stereo-Headset
- 1 x Manual
- 1 x Carabiner

Specifications:

SAR: WCDMA:0.913 W/Kg, GSM:1.024 W/Kg

WCDMA/UMTS: 900/1900/2100 MHz  
GSM : 850/900/1800/1900 MHz

Weight: 204g (with Battery), 175g (without Battery)  
Dimensions: L 125.0mm x W 65.5mm x H 20.5mm

Standby time: 420h (single SIM), 160h (dual SIM)  
Talktime: 500min