

3G Watch User Manual



1. Introduction

Thank you for choosing our Smart Watch Phone! Smart Watch Phone comes in Android 4.0 O.S. and with networks GSM (850MHz, 900MHz, 1800MHz, 1900MHz) and 3G WCDMA (850MHz, 1900MHz, 2100MHz). The basic specifications are as follows:

- 1.1. Main screen resolution: 240*240 OGS capacitive screen;
- 1.2. Built-in GPS;
- 1.3 .1.0G MTK 6577 dual chip;
- 1.4. 2MP Camera;
- 1.5. RAM: 512MB ROM: 4GB;
- 1.6. GPRS, EDGE, Bluetooth, WIFI, FM

Note: Please shut down GPS, WiFi, Bluetooth and return to the standby state after using the watch in order to save the energy of battery.

2. Safety Instructions

Safety Warnings and Precautions

Please read these Precautions to ensure the correct use of the Smart Watch Phone before using it.

- Please shut down the Smart Watch Phone when you are on the plane, in the hospital or other places where mobile phone is forbidden to use, otherwise it will affect the normal work of the electronic equipments and medical instruments. If you use the Smart Watch Phone in these places, please comply with the relevant provisions of the place.

Please abide by the laws, regulations and related markers near the fuels, chemicals or explosives.

Please do not use the Smart Watch Phone if the signal is weak or you are in the vicinity of high precision electronic equipments. Radio

interference may cause the erroneous operation of these electronic equipments or other problems. Special attention is required when near the equipments like: hearing aids, pacemakers and other medical devices, fire detectors, automatic doors and other automatic control devices. Please consult the manufacturer or its local agents for learning the impacts on the equipments.

Note of Using Smart Watch Phone

Please do not disassemble or remodel the Smart Watch Phone, otherwise it will cause damage, leakage of the Smart Watch Phone. If you need to disassemble it, please send it to the professional repair point. Non professional personnel shall not dismantle the Smart Watch Phone.

Please do not knock on the LCD screen or knock other things with the screen, otherwise it will cause the leakage of liquid crystal. It's dangerous if the liquid crystal flows into the eyes which will be riskily blinded. If it does flow into the eyes, please immediately flush eyes with water (do not rub the eye) and ask for help of the doctors.

Please do not use needle or sharp pen to touch the screen, otherwise it will damage the Smart Watch Phone or cause misoperation.

 
Please avoid the Smart Watch Phone is too close to the magnetic objects, like magnetic cards, because watch phone radiation may remove the information stored on the floppy disk, stored value card or credit card.

Please avoid the moisture, water or other liquid into the machine because it may cause short circuit, leakage and other troubles to the

Smart Watch Phone.

3. Get Prepared

A. Product Introduction

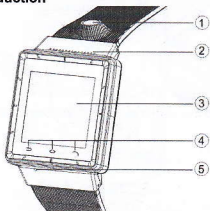

1: Camera; 2: Speaker; 3: Touch screen; 4: Function key 5: Microphone

The USB interface on the side, can be used for earphone, usb cable, charger.

 
B. Battery removal and installation

Warning: Make sure to turn off your phone before you removing the battery, do not take out the battery when the watch in the boot or have other external power supply connection. Otherwise may damage the SIM card and watch.


Install and remove, follow as below steps:

① Let the battery cover two clasp align at the clasp of the body of watch : Press the battery until the battery completely lock into the

battery compartment (as shown)

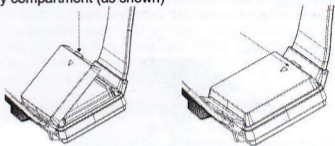

 ② Sideways unplug the back cover then remove it.(as shown)

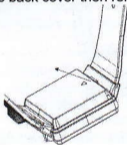


C. SIM card installation

Before installing the SIM card, please turn off your phone, then take out the battery, Find the SIM card slot, insert the SIM card then locked the holder(as shown) Make sure the sheet metal side of the SIM card should be downward.

Please put the SIM card to the place which the children can't reach.

- Bent or improper operation will may damage the SIM card when

 insert and remove the SIM card, please take care.
This watch's SIM card support the GSM and 3G network.

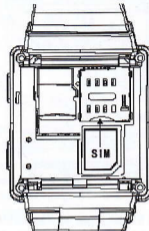


D. T-Flash card installation

Bent or improper operation will may damage the T-Flash card. When insert and remove the T-Flash card, please take care.

- Please turn off your phone before taking out the battery then the T-Flash card.

 Find the T-Flash card slot, insert the T-Flash card then locked the holder(as shown) Make sure the sheet metal side of the T-Flash card should be downward.

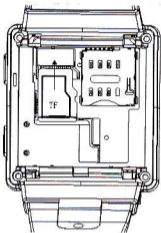


E. Charge the battery

Insert the charge plug of the charger to the watch's USB port. The starting condition into the charging plug, the battery icon in the upper right of the screen intensity stripe rolling said charging has started, when the fringe fills the icon stops rolling, said battery charging has been completed, after charging pull out the plug; the off state to insert the charger plug screen battery icon started rolling, charging plug is completed.

Attention:

When the battery is low, the screen will display warning information, when the battery is empty, the watch will automatically shut down. Please do not let the battery in a state battery is low for a long time, otherwise you will damage the battery quality and longevity.

 To make sure the watch work well, please use our standard charger.

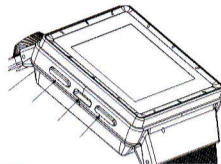

F. POWER ON/OFF

The button is at the top left (beside speaker), long press to turn on/off, short press to dark/bright screen.

Note: Where mobiles are banned or using mobiles may cause interference and danger. Pls. don't turn on your device, and you'd better remove your battery.

G. Return button

The button is on the lower left (beside watchband), step by step to return/exit.

In a call /music playing /FM, long press to volume adjustment.

H. Three keys on TP (virtual key)



Optional



Home



Return

4. Standby interface and clock Standby interface



Main menu



Dial

 


Messaging



Phonebook

Press "power" to Analog Clock, slip screen to other clock pictures.

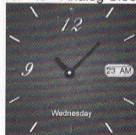

5. Main Apps



Slip from right to left or click  to Main Apps when the device is standby.

4 Apps each page, you can slip it freely. The Apps you installed will be the end page.

Points under the surface stand for quantity of pages in the device, bright point means current page.



6. Menu structures

Two parts after entering into main function.

Top: Status bar

Slip from top to bottom to details, on the contract, it will be back to the original,

Icon from right to left : Time ,Optional , Signal and any others.



Main Area :

watch phone function show and operating interface .



Note: to save battery , please close GPS ,wifi ,Bluetooth and so on after usage .


7. Function Introduction

> Dial Features

Step into the dial pad:

Option 1: In the standby clock interface, sliding from left to right into the dial pad feature.

 Option 2: Go to the main menu, click the icon (Top four icons are: dial, call history, phone book and search function.)





(On calling status, long press the back button to enter the volume adjustment; short press the back button you can return to other functions.)

> Settings




> From main menu click Settings , enter the menu settings.

  
Here Including WLAN (WIFI settings), Bluetooth, Date usage, Display, Audio profiles, Battery, Apps, Security, Language&input, Date&time, Schedule power on/off, Accessibility, Developer options, Backup&Reset, About phone etc.





WIFI settings: switch on / off, click to enter, scan, select the search to a wireless local area network, enter the password. (Please use "Showing password" in order to see whether the password is correct; can customize the installation Input Method)

 



Bluetooth setting: Enter main menu, click  menu setting, choose bluetooth setting. Turn on/off.

Airplane mode settings: Go to the main menu, click  menu setting, Click "more" options to find the Airplane model settings


Auto-rotate screen settings: Go to the main menu, Click  menu setting, Enter the "display" then find the "Auto-rotate screen" .


Audio Profile settings: Go to main menu, click  menu setting, Slide down the screen, click on the "Audio profile."



Language&input settings: Go to the main menu, click  menu setting, Slide up and down the screen, click on the "language&input", click into the "language", select the language you need.

Download the installation program from the PC: Go to the main menu,

 
click  menu setting, slide up and down the screen, click on the "Developer Options" Figure (1), check the "USB debugging" Figure (2), if some third-party software can not be installed, set up security check inside the "unknown sources" in "Security" as (3) (recommended PC client software download, such as using third-party applications: 91 assistants, 360 assistants and so on.)



Picture (1)



 Picture (2)



Picture (3)

Other features are:

People
Browser
Music
Camera
Messaging
Calendar
File Management
Play store

Calculator
Gallery
FM Radio
Sound Recorder

8. Volume Control Settings

Quick settings: In music playing, calling, FM playing interface, you can long press the return button to enter the volume control settings, slip the volume controller to set.
Other settings: In contextual mode, you can set the volume of calls, SMS and Alarm.

9. Set Flight Mode

Long press the "power" button, you can choose the below operation: Power off; Flight mode; Silent mode; Vibration mode; Normal mode. (as shown)



10. Connect with PC

■ After connect with PC, you can charging the watch.

■ U-disk function

After connect with Pc via usb cable, it will show you a interface for choosing functions you need as a U-disk, press the back button to ignore it and will be in charging status.



Common Troubleshooting

If any problems appeared when using the watch phone, please follow below solution ways. If the problems are still existed, please contact the distributor or appointed maintenance personnel

The watch phone can not power on.

- Press "on" button till startup screen
- Check the battery power
- Check if the battery poor contact, remove it and install the battery again, then power on

No feedback for several minutes

- Press "off" key
- Remove the battery and install again, then power on.

Using time is short

- Please make sure have not closed the screen savers
- Please make sure enough charging time (more than 3 hours)
- After charging parts of power, Battery level indicator might be inaccurate. Please wait about 20 minutes to get the accurate indication after removing the battery charger.

Cannot connect the network

- Please try in another place
- Please confirm the net service place from your network supplier
- Please make sure your SIM card is effective from your network supplier

- Try to select the network by hand
- Please try it later if the network is busy.

Cannot dial the watch phone

- Please make sure the telephone NO. is correct and press the call button
- For the internet calling, please check the country code and area code.
- Please make sure the phone with net work and not in busy status
- Please make sure your Sim card have enough money and did not prohibit the calling
- To inquiry your register information from your network supplier (such as limit, SIM card validity and so on)
- Please make sure did not set the call limited
- Please check if set the fixed dialing

Music cannot be played

- Please check if the music format is supportable, such as MMF format
- Please check the music is existed without deleting: you can update your playing list and make sure it is under "my music" file.