

### Quick Start Guide

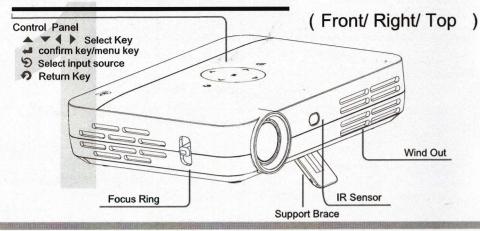

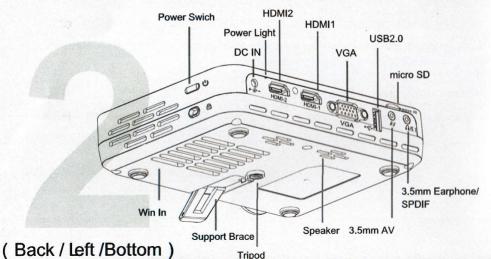

# **Control Panel Operations**

### 1. Multimedia play status



- **△** Prev
- ✓ Press:REW ; Long press: Vol-
- **∨** Next
- > Press:FF; Long press: Vol+
- ➡ Press: Play/Pause ; Long press: Enter OSD
- Music or Video o Quit
  - 1 Input Source



- ∧ Prev
- **∨** Next
- **>** Clockwise Rotation
- Finish Reading
- S Input Source



- < Prev A Prev Page
- ✓ Next Page 
   ➤ Next
- ➡ Press: Open file ; Long press: Enter OSD
- O Close file
- 9 Input Source



1. System OSD menu operation (PS: Under other status, such as AV/VGA /HDMI-1/ HDMI-2, Press ← key to enter OSD)




- **✓ Left Page** ∧ Up
- V Down > Right Page
- A Back
- 9 Input Source


# **Using The Tripod**


The projector can be used with the tripod by connecting the tripod to the bottom of the projector. General standard tripods are compatibles.

(The tripod is not standard accessory)

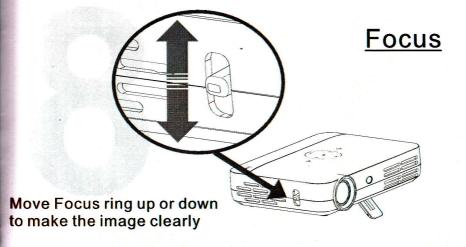

## Remote Control

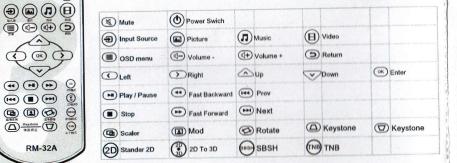

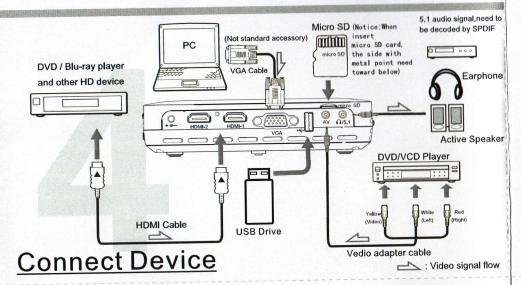

OK ()

**RM-32A** 

(Front)

### Multimedia play

The projector can play the files in USB card or micro SD card directly.

- After insert USB card or micro SD card into the projector, then switch on the projecor. Select the file type:"image","music","video", "txt"
- Use ▲ ▼ ◀ ▶key to select USB or micro SD as the input source ,then press OK key to select the file you want to play.
- ●Or use the 🖾 🗗 🖽 key on the remoter control to select the file you want to play quickly.



(Multimedia OSD menu)



(Select USB or micro SD under multimedia status)



(Multimedia select file menu)

### OSD Menu

Wey on the remote control to enter the menu 1 or menu 2.

### \*OSD menu 1

Computer/HDMI-1/AV. you will see OSD

Lise Av Okey on the remote or control

 
select and adjust.

### \*OSD menu 2

when the input source is HDMI-2, you will see the menu 2, use well key on the remote or panel to select and adjust.



OSD<sub>1</sub>



OSD 2

# Select Input Source

key on the remote, or key on the top control to select the source




## Use 3D glass

#### Switch on:

Press the power key on 3D glass, after the indicator flash 1 time, then can use the 3D glass.

### Switch off:

Pres the power key for 2 seconds then switch off the 3D glass. The indicator will automatically power off after flash 3 times.

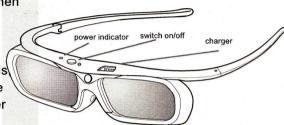


(operation way is decided by the glass type below is just reference.)

The indicator will power off if not receive any3D singal in 5 minutes.

## 3D Play

 The screen will display blue information when the projector detected or handover manually corresponding 3D format. Please take on the 3D glass at this time.







### 2D to 3D format

- •When play the vide ,enter system OSD Menu.,and select "3D set"
- Press OK key to enter the sub menu,use
   key to select "2D to 3D", and then press "ok" key to confirm.





• Or use (2D) on the remote control to select 2D to 3D quickly.

After the file convent to be 3D file, the screen will display blue information to provide the information of take on the 3D glass. .

# Support "SBS" or "TNB" video

- When play the video ,enter the OSD menu, and select "3D set"
- Press Ok key to enter sub menu, use ◀ ▶ key to select "SBSH" or"TNB", and then press OK key to confirm.
- Or press or on the remote control or select SBSH or TNB mode directly.

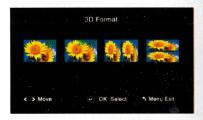

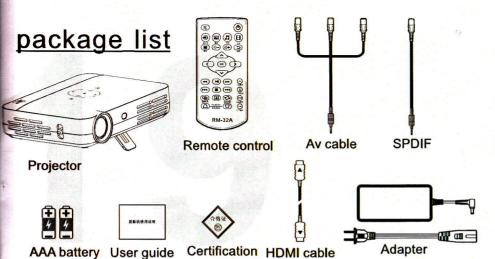



# **Notice**

Don't put the projector in below environment:or else will lead to problems or damage the projector.

Please don't use it in less wind environment



Please keep more than 30 cm from surround space

Please don't use it in hot and moise environment



### Preview

Ordinally video preview:

Put the cursor on the file and wait for 2 seconds, the video can be previewed automatically. Press "OK" key to play the file.



(Ordinally video preview)

### •3D video preview:

Put the cursor on the file and wait for 2 seconds, and select 3D format to be "side by side" or "top and button". And then press "OK" key to play the file.



### Return to 2D mode

- When play video, enter system OSD menu, select "3D set".
- Press Ok key to enter sub menu, use ◀ ▶key to select "standard 2D",thenpress Ok key to confirm.
- Or use the weekey on the remote control to select standard 2D directly.




(When the file format convent to be standard 2D format, the screen will display blue information, and take off the 3D glass at this time)

# Adjust 3D depth

- When play video, enter system OSD menu, select "3D set".
- Press OK key to enter sub menu,use key to select "3D depth".

Notice:"3D depth" is only used in 2D convent to 3D mode; if the video format is 3D, then can't adjust.

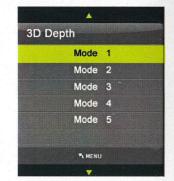


Please don't use it near temperature and fog sensor



When use the projector, please don't see the lens directly, it will harm eyes

 Please don't use it in the place that cooling air blow directly



Under so places install the projector maybe lead to problem because of steam cool or temperature increase Install it far away the wal . In order to maintain the performance and reliability

