

# i6 user manual



## Safety notices

Safe warning and attentions:

Before using, please read below attentions carefully for using accurately.

Please shut down the watch when in the plane、hospital and other places which is not allowed to use, or it will affect the electronic equipments and medical instruments work. Please comply with the policy of this places if using in there.

Please observe the law and legislation and relate marks when the watch close to the places which storage fuel, chemicals or explosives.

Please don't use this watch near the poor signal or high precision electronic equipment. Radio wave disturbance will affect the error operation and other problems of this electronic equipment. Especially in the vicinity of the following devices: Hearing aid, pacemakers and other medical electronic equipment, fire detector, automatic doors and other automatic control devices and son on. Please inquiry the effect of the devices from the manufacturer or local retailers.

## 1. Product introduction



1: Speaker 2: Camera 3: Microphone 4: Return button 5: USB port/earphone 6: Power on/off

 
## 2 Icon function

 
At clock interface slide left to main interface, slide right to make phone call, slide up to calculator, slide down to play music



main interface slide left to menu  
phone No. Interface

## 3 menu

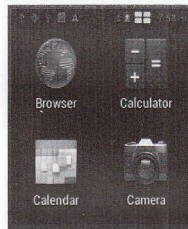

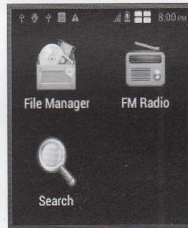



#### 4 Turn on/off Short key



slide down to shortcuts key
  
#### 5. Connect with PC

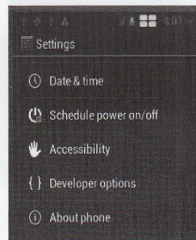

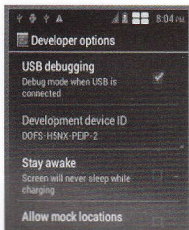

Choose setting-develop-USB debugging

## 6. Network Setting



turn on wifi, Bluetooth and so on

 
## 7. Battery removal and installation

**Warning :** Make sure to turn off your phone before you removing the battery.

Do not take out the battery when the watch in the boot or have other external power supply connection. Otherwise may damage the SIM card and watch.

Install and remove, follow these steps:

- ① Let the battery cover two clasp align at the clasp of the body of watch : Press the battery until the battery completely lock into the battery compartment (as shown)
- ② Sideways unplug the back cover then remove it.(as shown)

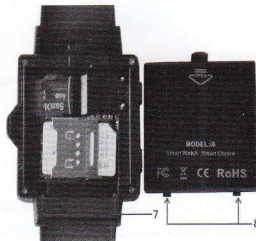

## 8 Battery lock and unlock

7: Battery connector on Watch 8: Battery connector on battery (Note: Put 8 insert to 7)



9: Lock on watch 10: Lock on Battery

(Note: After Connected 7 and 8 Lock it; Disassembly battery unlock it from opposite from 9 and 10)

## 9. Sim card and TF card removal and installation

### SIM card installation

Before installing the SIM card, please turn off your phone, then take out the battery, Find the SIM card slot, inset the SIM card then locked the holder(as shown) Make sure the sheet metal side of the

sim card should be downward.

### T-Flash card installation:

Bent or improper operation will may damage the T-Flash card. When insert and remove the T-Flash card, please take care. Please place the T-Flash card in the children can't reach.

Before installing the T-Flash card, please turn off your phone, then take out the battery.

Find the T-Flash card slot, inset the T-Flash card then locked the holder(as shown) Make sure the sheet metal side of the T-Flash card should be downward.



11: TF card slot 12: SIM card slot 13: TF card installation direction 14: Sim card installation direction

## **10 Troubleshooting**

If any problems appeared when using the watch phone, please follow below solution ways. If the problems are still existed, please contact the distributor or appointed maintenance personnel

### **The watch phone can not power on.**

- Press "on" button till startup screen
- Check the battery power
- Check if the battery poor contact, remove it and install the battery again, then power on

### **No feedback for several minutes**

- Press "off" key
- Remove the battery and install again, then power on.

### **Using time is short**

- Please make sure have not closed the screen savers
- Please make sure enough charging time(more than 3 hours)
- After charging parts of power, Battery level indicator might be inaccurate. Please wait about 20minutes to get the accurate indication after removing the battery charger.

### **Cannot connect the network**

- Please try in another place
- Please confirm the net service place from your network supplier
- Please make sure your SIM card is effective from your network supplier

- Try to select the network by hand
- Please try it later if the network is busy.

### **Cannot dial the watch phone**

- Please make sure the telephone NO. is correct and press the call button
- For the internet calling, please check the country code and area code.
- Please make sure the phone with net work and not in busy status
- Please make sure your Sim card have enough money and did not prohibit the calling
- To inquiry your register information from your network supplier (such as limit, SIM card validity and so on )
- Please make sure did not set the call limited
- Please check if set the fixed dialing

### **Music cannot be played**

- Please check if the music format is supportable, such as MMF format
- Please check the music is existed without deleting: you can update your playing list and make sure it is under "my music" file.