



WATCH PHONE

Directory

1. Basic knowledge	3
1.1. Introduction	3
1.2. Safety	3
1.3 Safety warnings and cautions.....	3
2. Before use	7
2.1.Handsets.....	7
2.2 .Battery	8
3. Quick Start Guide	9
3.1. Features	9
3.2 Call	10
3.3 Reject a call.....	10
3.4. Answer the phone.....	11
3.5. End the call	11
3.6 Emergency services.....	11
3.7. Extension speed dial	11
3.8 Dialed numbers / Missed calls / Received calls / reject a call	11
3.9. Call transfer.....	11
3.10. Call Waiting.....	11
3.11 Call barring.....	11
3.12. Off	11
4. Function menu	11
4.1. The function menu structure	11

4.2. Phonebook.....	14
4.3 Information	16
4.4. Call Centre	19
4.5. Setting	21
4.6. Multimedia	23
4.7. File Manager	25
4.8 Game	25
4.9. Profile	26
4.10. Toolkit	26
4.11. Network Services	27
4.12. Calculator.....	28
4.13.E-book	28
4.14. exchange rates	28
4.15. compass	28
4.16. phone	28
5. input method introduced	29
6. Accessories	29
7. Care and maintenance	30
8. Safety Information	30
9. Appendix.....	31

1. Basic knowledge

1.1. Introduction

Thank you for choosing the color GSM / GPRS digital mobile phones Single card standby. You can read the manual, a comprehensive understanding of the use of mobile phones and enjoy its perfect functionality and simple method of operation.

This phone is for GSM / GPRS network environment and design. In addition to basic call functionality, this phone also offers you type in English and Chinese input, including Lenovo, phonebook, 64 polyphonic ring tones, MMS, digital camera and video recording, clock, alarm clock, calculator, timer switch, the World time, the music player and video player, voice recording, Bluetooth, GPRS Internet access, STK, Keypad lock, etc., a variety of practical functions. To facilitate your work and leisure activities, in addition, the mobile phone a personalized man-machine interface design, its perfect functionality to meet your needs. The color screen phone line with GSM / GPRS specifications, and obtain certification authority.

The Company reserves without any prior notice the contents of this manual under the right to make changes.

1.2. Safety

- If your phone is lost or stolen, immediately notify the telecommunications sector, or its outlet, to disable the SIM card. This will allow you to take phone calls from other economic loss arising.
- When you work with the telecommunications sector or its outlet, they need to know your phone's IMEI number (printed on the label on the back of the phone, remove the battery you can find.) Please copy the numbers to stay and save for future needs.
- To make you more secure use of mobile phones, please take precautionary measures, such as: mobile phone SIM card set PIN code. PIN code of your SIM card is to prevent unauthorized people. Leave your car, please do not put phone in easy to be seen, it is best to carry or locked in the trunk. ?

1.3. Safety warnings and cautions

Please read carefully before using the phone these precautions to ensure the correct use of mobile phones.

1.3.1. General Considerations

- on the plane, in hospitals where such use is prohibited, please turn off the phone, otherwise it will affect electronic equipment and medical devices work properly. Use of mobile phones in these areas, please observe the relevant provisions of the place.
- Please strictly abide by the use of mobile phones where you drive the laws and regulations. If you use the phone while driving

please observe the following rules: focus on driving, pay attention to road conditions; if the phone has a speakerphone function, use the hands free calls; if driving conditions are bad, please stop, and then make or receive Tel.

- close to store fuel, chemicals or explosive materials, and other places, obey the laws, regulations and related mark.
- Keep phones, batteries and chargers on the children's difficult to reach places to prevent their children as a toy, causing injury.
- Use only on your designated mobile phone batteries, chargers and other accessories. Using other batteries, chargers, batteries may cause leakage, overheating, burst, fire phenomenon, caused by cell phone damage.
- Do not weak signal or use near high-precision electronic devices. Radio wave interference may cause malfunction of these electronic devices and other problems. Especially in the vicinity of the following devices require special attention: hearing aids, pacemakers and other medical electronic equipment, fire detectors, automatic doors and other automatic control devices. The impact of the equipment, please contact the device manufacturer or local distributor.
- The phone has a timer function automatically start, check the phone's clock is set to confirm that the aircraft flight mobile phone does not automatically boot.
- Do not crashing, shaking or throwing the device, cell phone fires and other failures occur.
- Do not put batteries, cell phone, charger in a microwave or high-pressure device, or it may cause circuit damage and fire and other accidents.
- Do not use with flammable gases, local phone, mobile phones may cause malfunction and cause a fire.
- Do not store the device in high temperature, high humidity, or dusty places, or mobile phones may cause malfunction.
- Do not phone in uneven or unstable areas, to prevent malfunction or damage caused by falling.
- Use only the first wife or by the Company recognized antenna. Unauthorized antennas, modified or added accessories antenna may damage the phone. Do not touch the antenna during a call. Touch the antenna affects call quality and make the power higher than the normal use of mobile phones the power required. In addition, the use of unauthorized antennas may violate the provisions of your country.

1.3.2. Notes on use of mobile phones

- Do not disassemble or modify the phone, or mobile phones may cause damage, leakage and circuit failure.
- Do not knock hard on the LCD screen or use it to hit other things, otherwise it will cause breakage of the LCD panels and LCD liquid leakage. If the LCD fluid into the eye will be blind to danger. Then wash the eyes immediately with water (do not rub your eyes),

and immediately to the hospital.

- In rare cases, some models of the car phone use may adversely affect electronic equipment inside the vehicle. Do not use this time to avoid loss of security.
- If your vehicle is equipped with air bag, do not phone in the area over the air bag to reach the area later, so the air bag inflates, the phone by a strong external force, causing serious damage to the vehicle owners.
- Do not use needles and other sharp objects written contact with the screen, otherwise it will damage the phone or produce misuse.
- If the antenna is damaged, please do not use the phone, or may cause personal injury.
- Avoid the phone too close to the magnetic card and other magnetic objects, mobile phone radiation may remove the floppy disk, stored value cards, credit card information stored.
- Please thumbtacks and other small metal objects away from the local mobile phone handset. Speakers to work with the magnetic, will attract small metal objects, which may cause injury or damage to personal mobile phones.
- Avoid damp and mobile water or other liquids into the phone, cause the phone short circuit, leakage and other faults.
- If possible, away from the fixed telephone, television, radio and office automation equipment using a telephone in order not to affect the use of these devices and mobile phones effect.

1.3.3. Note the use of batteries

- Do not disassemble or modify the battery will cause battery leakage, overheating, bursting and fire.
- Do not throw old batteries in the general garbage. There are clear provisions in place to handle your used batteries in accordance with instructions provided.
- Do not put batteries in a fire, otherwise it will cause the battery to fire and burst.
- Install the battery, do not force pressure, otherwise it will cause battery leakage, overheating, bursting and fire.
- Do not use wires, needles and other metal objects to short-circuit; do not want batteries and necklaces and other metal objects together, otherwise it will result in battery leakage, overheating, bursting and fire.
- Do not use wires, needles and other metal objects to short-circuit; do not want batteries and necklaces and other metal objects together, otherwise it will result in battery leakage, overheating, bursting and fire.
- Do not solder the battery contacts, otherwise it will lead to leakage, overheating, bursting and fire.
- If the battery fluid into the eye would be the risk of blindness, then please do not rub the eyes, rinse with water use, and then

immediately to the hospital.

- Do not fire or other high-temperature heater for use near or place the battery will cause battery leakage, overheating, bursting and fire.
- If the battery is in use, the process of charging or save abnormal warming, colors, shapes and so on, please stop using and replace the new battery.
- If the battery leaks liquid touched the skin, on clothing, which may cause skin burns, immediately rinse with water if necessary medical attention immediately.
- If the battery fluid leakage or a strange odor, immediately next to it take away from the flame to avoid fire and burst.
- Do not wet the battery, which will cause the battery to overheat, smoke and corrosion.
- Do not place in direct sunlight and other high-temperature use or store the battery, otherwise it will result in fluid leakage and overheating may reduce performance and shorten life.
- Do not charge for more than 24 hours.
- Keep the battery out of the sun, cool well ventilated place.
- Phone battery life is limited. Battery charging time in the frequent gradually reduced. Invalid number charging, the battery life has done, should be replaced new battery type specified.

1.3.4. Notes on the charger

- Do not disassemble or modify the charger, otherwise it will result in personal injury, electric shock, fire and damage the charger.
- Use the 220V AC. Use of other voltage can cause leakage, fire and damage the phone and charger.
- Prohibition of short-circuit the charger, otherwise it will cause electric shock, smoke and damage the charger.
- Please do not damage the power cord in case of use the charger, otherwise it will cause a fire and electric shock.
- Please clean the product in the power outlet on the dust.
- Please do not put water containers, etc. on the charger next to the charger to avoid water spills caused by short circuit or other malfunction.
- If the Chargers come into contact with water or other liquids, immediately cut off the power to prevent short circuits, fire, electric shock and charger failure. Please do not place high humidity in the bathroom, use the charger, otherwise it will cause electric shock, fire and damage the charger.

- Please do not touch the charger with wet hands, wires and electrical outlets, otherwise it will cause electric shock.
- Do not place heavy objects on the power cord or modified wire, otherwise it will cause electric shock and fire.
- In the cleaning and maintenance before you plug the charger unplug from the power socket.
- Unplugging the charger when you seize, pull the power cord can damage the wires, electric shock and fire. Do not charge in the following areas: direct sunlight, such as high temperatures; humid, dusty places or where vibration (may cause failure); television, radio and other electrical appliances near (in image, sound effects).

1.3.5. Cleaning and maintenance of high humidity in the bathroom

- Do not use the phone where the battery and charger, the same should also avoid the rain.
- Use a soft, dry cloth to clean the phone, battery and charger.
- Do not use alcohol, thinner or benzene and other chemicals to clean the phone.
- Dirt outlet will lead to poor contact, power-down, which does not charge, regular cleaning.

2. Before use

2.1 Handsets

- Appearance of a single-screen display of the phone, look like watches. A charger / USB data cable and headset share the transmission interface. (Front diagram) (Please provide pictures)

2.1.1. Keystrokes

- Dial key is used to initiate the call (when the number has been or is in the phone book under) can also be used to answer the call. In standby mode, press to lock the screen. The idle screen press the button to turn on / off flashlight.
- On / off button for the suspension of the call the call state, call state for the end or exit the menu, return to standby mode, press and hold the key 2 to 3 seconds to turn on or turn off the phone.

2.1.2. SIM card

Mobile phone before you must insert a valid SIM (Subscriber Identity Module) card, SIM card by the network provider. And establish a network connection of all the relevant information is recorded in the SIM card chip, with records on the card along with your SIM card phone book to store names, phone numbers and text messages. SIM cards can be removed from your phone and put it into any GSM phone to use a (novice will automatically read the SIM card). To prevent the SIM card is lost or damaged information, avoid touching

the metal contact surface, and SIM card away from electricity and magnetism place. Once the SIM card is damaged, you will not normally use the phone.

Warning: Be sure to remove the SIM card before the phone off. There is absolutely prohibited in the case of an external power supply connected to insert or remove a SIM card, or SIM card and mobile phone may be damaged.

2.1.3. SIM card insertion and removal

SIM card of the metal contact surface scratches easily. In the assembly, you must be careful to remove it.

- off the phone, remove the back cover, battery or other external power supply;
- SIM card will be the end of the outside corner cutting and metal side facing down, insert the SIM card slot plug, and then withhold slot plug.

■ Remove the SIM card, first open the plug to remove the SIM card slot.

2.1.4. T card insert and remove

The T slot close to the SIM card slot, T slot open the phone plug, plug must first open the SIM card slot, then T cards face down side of the metal into the T slot plug, the plug can hold back the card slot. If you want to remove the T card, first open the SIM card slot plug, then open the T slot plug, you can remove the T card. Tip: If T card fails, check whether the correct place, and the metal point of contact. T stands for T-flash card, card, all of this article referred to as T card.

2.2. Battery

2.2.1. Install the battery

- Remove the back cover to.
- Metal surface on the battery align one end of the phone battery connector pieces.
- Then gently press down with your fingers to install the other end of the battery cell.

Tip: operate correctly to prevent damage to the battery connector pieces.

2.2.2. Charge

The charger in the phone charging port. Insert the charging plug in, the screen icon in the top left of the battery strength of that charge stripes have started rolling, when the fringe is full of the icon and stop rolling, the battery charging has been completed. When the power is low, a warning message displays while the battery is empty. Power is low, the phone will automatically shut down. Do not for a long time the battery is running low state, otherwise it will undermine the quality and battery life.

■ PIN code

PIN (Personal Identification Number) protects your SIM card from unauthorized use. SIM card PIN code provided with generally. If you enter the wrong PIN code three times, you should enter the PUK code to unlock. Please contact your network operator for.

■ PIN2 code

Access some functions (such as call cost) is required to enter the PIN2 code, and if three consecutive incorrect PIN2 code, you should enter the PUK2 code to unlock. Please contact your network operator for.

■ PUK code

Locked in the PIN code changes, the need to enter the PUK (personal unblocking key). PUK code supplied with the SIM card. If no contact your service provider. If ten consecutive times wrong PUK code input, this SIM card can not be used. Contact your service provider to purchase a new card. You can not change PUK code. If you lose the code, contact your service provider.

■ PUK2 code

In the code change a blocked PIN2, you need to enter the PUK2 code. If you enter the wrong ten times in a row PUK2 code, you can not use the function needs PIN2 code. Contact your service provider to purchase a new card. You can not change PUK2 code. If you lose the code, contact your service provider.

3. Quick Start Guide

3.1. Features

In addition to your mobile phone features a mobile phone's basic functions, also supports a rich, practical, efficient features briefly described as follows:

■ **Phone book:** Support the Find feature; phone can store up to 500 records; support to send the information in the phone book, dial and other functions; support for copying between SIM card and mobile phone of the record; support the deletion of SIM cards and mobile phones in the phone book records.

■ **Call records:** Your phone automatically stores the information about phone records to see; support calls in the call log the phone number; support the call records the phone number saved to the phone book and other functions.

■ **Profiles:** according to different events or circumstances from the definition of mobile phone models, including the ring setting, volume adjustment, Ring type, ring type, tone, response mode.

- **Network Services:** Your phone supports WAP services. Internet service using the wireless network access and tour, access to a wealth of information.
- **Camera:** Your phone supports cameras and video recording function. You may need the camera, video recording device to personalize, support the camera set the wallpaper or pictures via MMS, Bluetooth to send to your friends.
- **Information:** including SMS, MMS, voice mail, cell broadcast; support the short message stored on the phone; support for a variety of personalized settings for MMS;; support to see the SIM card and mobile phone text messages stored on the state; Optional support for SMS storage location.
- **Multimedia:** Your phone provides a variety of entertainment, including cameras, photo albums, video recording, video player, music player, voice recording, FM radio and other functions.
- **Toolbox:** Your phone supports a variety of useful features. Support alarm clock, tasks, calendar, world time functions.
- **Games:** Your phone supports the compass, QQ, entertainment space.
- **Set:** You may need to personalize the phone settings, including handwriting settings, phone settings, network settings, security settings, restore factory settings, touch-screen calibration and other functions.
- **Input:** Your phone supports a variety of input modes in order to facilitate you to enter letters, numbers, characters, symbols and so on.

Function hotkeys

function	hot key	state description
power	Press Off button	Shutdown
Shutdown	Press Off button	Turned
hang up	Press switch button	call

3.2. Call

Make a call in the standby mode, click on the phone menu, clicking through the touch screen need to dial the phone number, click to dial (or press the dial key).

3.3. Reject a call

When you have an incoming call, press the End key to reject a call.

3.4. Answer the phone

When you call, the phone will issue the appropriate prompt (such as vibration, ringing, etc.), if the network support, the screen displays the caller's name or number, and you can press dial keys to access listen to the call.

3.5. End the call

The call is completed, you can hang up to end the call.

3.6. Emergency services

Use different networks of different emergency numbers, please check the network operators.

3.7. Extension speed dial

Into the phone, enter the phone number, to enter the extension number, please press "*" key, the display appears on the "P" after you enter your extension number. Dial the phone, it will dial directly to extensions.

3.8. Dialed numbers / Missed calls / Received calls / reject a call

You can view the recent calls in the call center records.

3.9. Call transfer

Call transfer feature is turned on, set the transfer under different conditions (transfer all voice calls, Busy, No Answer Transfer, contact can not transfer, transfer all the data calls), you can divert calls to voice mail options or other phone number.

3.10. Call Waiting

Call Waiting enabled, when you call, another call is incoming.

3.11. Call barring

Call barring feature is turned on, set the constraints under different conditions will call the appropriate limit (network operators are required to apply for business).

3.12. Off

In standby mode press and hold button to turn off your cell phone.

4. Function menu

4.1. The function menu structure and function of the menu is structured as follows:

1. Phonebook

- | --- 1. Quick Find
 - | ---2. Add contact [to the SIM card] [to phone]
 - | --- 3 . View
 - | ---4. Send SMS
 - | ---5. Send MMS
 - | --- 6. Call
 - | --- 7. IP dial-up
 - | --- 8. Edit
 - | ---9. Copy
 - | ---10. Delete
 - | ---11. Mobile
 - | ---12. Send Contact
 - | ---13. Blacklist
 - | --- 14. Caller groups
 - | ---15. Phone book settings [preferred storage location] [my number] [other numbers] [Memory Status] [Contact Copy] [Move Contact]
- [Delete Contact]
- 2. Information**
- | --- 1. Text messages [Inbox] [Outbox] [an information] [Sent] [Delete message] [Drafts] [templates] [SMS settings]
 - | --- 2. Color letter [written information] [Inbox] [Outbox] [Drafts] [MMS settings]
 - | --- 3. Cell Broadcast [Receive Mode] [Read Info] [Language] [Channel Settings]
- 3. Call Center**
- | --- 1. Call records [Missed calls] [dialed] [have to answer the phone] [delete call records] [Call duration] [call cost] [SMScounter]
- [GPRS counter]
- | ---2. Call [phone number] [call waiting] [Call Forwarding] [Call restrictions] [circuit switching] [Close User Group] [Advanced Settings]
- 4. Set**

- | --- 1. Touch-screen calibration
 - | ---2. Phone settings [time and date] [time switch] [Language] [standby menu display] [subject] [automatic update time] [handset]
- [Other Settings]
- | --- 3. network settings [Network selection] [preferences] [GPRS connection]
 - | --- 4. Security Settings [SIM lock] [keypad lock] [phone lock] [Change Password]
 - | -- 5. External links [Bluetooth] [data account]
 - | --- 6. restore the factory settings
- 5. Multimedia**
- | --- 1. Camera
 - | --- 2. Album
 - | --- 3. Video recording device
 - | --- 4. Video Player
 - | --- 5. Music Player
 - | --- 6. Recording
 - | --- 7. FM radio
- 6. Document Management**
- | --- 1. Mobile
 - | --- 2. Memory card
- 7. Game**
- | --- 1. Entertainment space
 - | --- 2. Game
 - | --- 3 . dynamic game
- 8. Profile** [standard model] [conference mode] [outdoor mode] [indoor mode] [Headset] [Bluetooth mode]
- 9. Toolbox**
- | --- 1. Flashlight
 - | --- 2. Calendar

- 3. Tasks
- 4. Alarm clock
- 5. World Time

10. Network Services

- 1. STK Services
- 2. Internet Services
- 3. Baidu search

11. Calculator

12. Ebook

13. Exchange rates

14. Compass

15. Phone

4.2. Phonebook

Future lets you browse the phone book, store, edit and delete cell phone and SIM card in the name and telephone number. To facilitate records management functionality of the phone set the group will be in the same group related items. SIM card storage capacity depending on the cards, the unit's maximum storage capacity of 500.

4.2.1. Quick look

A the cursor location specified input pinyin initials, first in English letters or numbers, you can locate in many of the numbers to the first record to meet the conditions, such as search, "Zhang" name, enter in the input area "Z" you can quickly find the letters.

4.2.2. Add contacts

To the SIM card: a record can record the following entries: name, phone number; To the phone: a record can record the following entries: name, phone number, caller picture, caller ring tones.

4.2.3. Show

you can view the contact details.

4.2.4. Send a text message

you can send text messages to contacts.

4.2.5. Send MMS

you can send MMS to contacts

4.2.6. Call

you can call the contact.

4.2.7. IP dialing

your way through the IP-dial call contacts.

4.2.8. Edit

your contact information can be re-modified.

4.2.9. Copy

you can select "Copy" to copy the selected contacts.

4.2.10. Delete

you can select "Delete" to delete the selected contact.

4.2.11. Mobile

4.2.12. Send a contact

via SMS, MMS, Bluetooth, a way to send contacts.

4.2.13. Blacklist

will be added to the blacklist of the selected numbers.

4.2.14. Caller group

can add new group, and were added to the group members to view, delete, delete all and group settings (ringtones, caller picture settings).

4.2.15. Phone book to set

[the preferred storage location]: Select the priority of the current number of stored paths (mobile phone, SIM, all). **[My number]:** on my business card to edit or send.

[Another number]: Local number: the number of SIM card edit; **fixed dialing:** This feature may require SIM card and network operator support. Activate this feature, you can only make the list of fixed dialing numbers; activate fixed dialing, you need to enter the PIN2 code.

[Memory Status]: check the phone book capacity, including the SIM card and phone.

[Copy Contact]: total number of mobile phone SIM card copy; all the numbers on the SIM card is copied to the phone.

[Move Contact]: all the numbers on the phone to the SIM card mobile; all the numbers on the SIM card is moved to the phone.

[Delete All]: Delete all of your phone or SIM card number.

4.3. Information

Messaging is a network service, you may need to apply first network operator to send and receive messages.

4.3.1. Text messages

sent to your phone supports SMS function. Short message is first sent to the network's news center, and then send the purpose of the network again.

[Inbox]: you can view in your inbox a short message has been received.

Re: the received short text messages back.

Call From: contact information for sending a call.

Delete: delete the current short message.

Forward: You can forward this message to others.

Delete all: delete select all the text messages inbox.

Advanced Settings: Use the number (number of the received short message, SMS, digital information in a call, save to the phonebook); use the website (link to the URL specified in the message content); use of USSD. **[Outbox]:** You can view the Outbox failed to send a short message.

Resend: resend the message.

Edit: to edit the text messages.

Delete: Delete the current text message.

Delete all: Delete Outbox select all text messages.

Advanced Settings: Use the number (number of the received short message, SMS, digital information in a call, save to the phonebook); use the website (link to the URL specified in the message content); use of USSD.

[Drafts]: save the message was not sent.

[Sent]: Save the information has been sent successfully.

[An information]: In this menu you can create a text message.

Note: Some cities or regions do not support the length of the information. Written information, click the icon to switch the input method; input method; click the Clear button to remove the soft keyboard, the character before the cursor; press the back button to return to the previous menu, hang up key to return to standby. The length of your phone supports the sending of information. If the information is too long, then two or more of the ordinary as a text message sent.

Options Features editing the content of messages sent to the recipient can choose intelligent input method in English lowercase, stroke input, smart pinyin, the English uppercase, lowercase English, digital input, punctuation inserted into the phone already has the template pre-election messages Senior entry into the number (choose any number in the phone book); insert name (choose any name in the phone book); to insert a bookmark (you can insert a bookmark) to the draft will be edited information is saved to the Drafts

[Template]: commonly used phrases can be edited or deleted, can also create new information

[delete information]: Inbox: Delete all inbox messages. Outbox: outbox to delete all of the information.

Draft: draft removed all of the information.

Sent messages: Delete all the information in the sent messages.

All the information: delete all messages.

[Note set]: In this menu you can within the short message SIM card to set some parameters.

Mode: To send text messages, you must first enter the local SMS center number. **NOTE:** SMS center number provided by the network operator. **Voice Mail:** Voice mail is a network service, you may need to subscribe to the service. For more information and the voice mailbox number, contact your service provider. **Edit -** to edit, delete your voice mailbox number, press OK store the number. **Call voice mail -** can call you to save the voice mailbox number.

Tip: set up voice mail number, enter the phone menu, press and hold the 1 key for 2 seconds SIM card, call voice mail option.

Status is set to:

[Send report]: network notify the other party has received a text message, and the time of receipt.

[Return path]: path to send back to the network side, the function is to support short message center.

[Save to sent messages]: sent successfully saved to the sent SMS messages. **Memory status:** You can view the SIM card or mobile phone short message storage space usage. **The preferred storage location:** set location of the information stored (SIM card or phone).

Preferred connection: set the preferred connection (GPRS priorities, GSM first, only GSM)

4.3.2. MMS

multimedia message can contain text, sound clips, pictures and video clips. If the message contains a picture, the phone will transfer the images to make it appear in the phone screen. A multimedia message may vary depending on the receiving device.

Note: Only when the network operator or service provider support, you can use this feature. Only with compatible MMS-enabled devices can receive and display multimedia messages.

[Write information]:

Add the recipient number - Enter the phone number to send the object.

Add e-mail - Enter the e-mail address to send the object. Cc

Add number - Enter the copy sent to the object number.

Add e-mail - enter e-mail copied to the object. Bcc to

add number - enter the password to send the object number.

Add e-mail - enter the password e-mail sent to the object. Theme: The theme is free to edit the MMS. Contents: MMS content can be edited by the main course you can get one-touch option: Select finish editing, change the input method, add pictures, add sound add video, add attachments, add a new page in the former, add a new page in the , add the bookmark text, MMS and set the page display the preview interval.

◆ Enter the appropriate information is confirmed, click the option Edit: Edit selected the appropriate entry; click "Finish" to the next option.

Send: Send the edited

save and send MMS: Send and store the edited MMS inbox;

Save to Drafts: Drafts of the MMS to be saved to the issue later;

saved as a template: the color of the editing information saved to the template; delivery options: to send a set

Exit: leave the MMS editing screen to save or abandon the edited message.

[Inbox]: can you receive multimedia messages to view, reply, reply messages, reply to all, forward, delete, delete all, save as a template, the information details, use the details of such an operation.

[Outbox]: View the sending did not succeed, or save and send the message.

[Draft]: View the MMS saved to Drafts. Sending options: set is sent

[MMS settings]: You can MMS within this menu to set some parameters. Have set the file, edit the settings, send the settings, receive settings, filters, storage state.

4.3.3. Cell Broadcast

Cell Broadcast by network operators in a particular area, sent to all users within the region of similar weather, traffic conditions and other information services.

[Receive Mode]: On / Off function to receive messages.

[Read information]: It is open to receive broadcast messages, received messages can be read, need to open the corresponding service.

[Language]: Set the language can receive messages.

[Channel Settings]: Select or add and edit and delete the channel number.

4.4. Call Centre

4.4.1. Call History

Does not answer the phone call records using this feature, you can access most recent missed call. After entering the function, click the scroll key down to select a phone number. Click the number, enter the options screen can be as follows:

View: View to the specific information does not answer the phone.

Call: call.

Send SMS: send SMS messages to the numbers.

Send MMS: Send MMS to the number.

Save to Phonebook: save the number to the SIM card or the machine.

Added to the blacklist: the number added to the blacklist to prevent harassment.

Former editor of the call: the call may be edited before the contact number.

Delete: Never delete the phone list.

Dialed using this feature, you can access recently dialed numbers. See, call, send SMS, send the message, save it to the phonebook, added to the blacklist, call before the edit, delete. Please refer to the "missed call."

Have to answer the phone using this feature, you can access the phone recently. Can be see, call, send SMS, send the message, save it to the phone book, added to the blacklist, call before the edit, delete. Please refer to the "missed call."

Delete call records to delete all phone records. You can choose to delete the recent call log to delete all records or only missed calls,

dialled calls, received calls list number.

Call timer Last Call: This feature can check the last call duration;

dialled numbers: This feature can search for all words that have been dialled long time;

have to answer the phone: This feature can query all of the phone has been connected Length;

Reset All: This feature can clear all call duration records.

Note: The actual invoice for calls and services may vary, depending on network features, rounding-off for zero-rounded, and tax and other factors.

Call costs required to support network service provider.

Last call cost: This feature can check the last calls;

all call charges: This feature can search for all the calls;

reset the call cost: With this feature you can clear all the calls recorded;

cost constraints: You can call costs limited to a specified number of charging units or currency units. Setting the call cost is required for the PIN2 code.

Prices and rates: This feature is network support, the specific details, please contact your network operator.

Note: This function is SIM card support.

SMS counter has been sent: View sent messages and information will be sent to zero. Received: View the information received and the information received will be zero.

GPRS counter is the last transmission: GPRS traffic records last transmission; Last received: Record last received GPRS traffic; Total transmission: GPRS traffic records all transmitted; Total received: Record all incoming GPRS traffic; reset the counter: all records will be zero.

4.4.2. Call

[phone number]: including system default, the hidden number, send the number. System default: call, press the system default send the unit number. Hide number: call, do not send the phone number to the system. If the system does not support this feature might not call.

Send number: call, send the unit number to the system. Note: This feature is network support.

[Call waiting]: Set on or off call waiting, call hold and conference call in progress when this function must be activated before possible, the specific implementation requires network support. [Call Forward]: is a network, you may need to apply for the network operator

business, you can use the following function. This function call can be transferred to meet the conditions you specify another phone number.

Name Description Divert all voice calls the network will be unconditionally transfer all of your contacts can not transfer calls when the network can not find your phone (off or out of service area), the network will transfer your calls when you no answer phone does not answer the call in a certain time, the network will transfer your call. Busy Transfer when you are on a call, the network will transfer your call. Divert all data calls require network operators to support. Cancel the transfer to cancel all transfer functions (such as a SIM card which will exit the Internet use, be sure to pull the line after the implementation of this operation)

[Call limit]: Restrictions set aside: All calls: prohibit all outgoing calls. International Phone: Disable outgoing international calls.

International non-domestic: in a foreign country, you can only call the phone number of the country and national (ie country of your service provider) phone number. Limit calls: All calls: prohibit all incoming calls. Roaming calls: When you use the phone outside of vesting service area, you can not receive calls. Cancel all: cancel all call barring settings. Can make and receive calls normally.

Change Password: Modify the call restrictions apply to the network password. [Circuit switching]: Line 1, Line 2 switch [Close User Group]: You can add edit a group list. [Advanced Settings]: blacklist: For not want to answer the phone can be added to the blacklist. If the user uses the SIM card does not support Caller ID function, which is the blacklist function is invalid.

Auto Redial: This feature can be set to automatically redial the "on or off." When your phone call after an unsuccessful first attempt, up to ten additional call attempt, to try to connect a phone number. IP Dial-up: to turn IP dial-up IP numbers can be edited. Talktime display: During a call, whether to display your talk time. Talk Time Tip: During a call to set the tone once or periodically, so you always know the call duration. Automatically limit: You can turn on or turn off the automatic time-limited function. Limited time period and can be set automatically.

4.5. Setting

4.5.1. Touch screen

calibration of the on-screen prompts to complete touch-screen calibration.

4.5.2. Phone settings

in this menu you can phone language, standby menu display, time and other options set. [Time and date]: set the local city, time and date settings, format settings, and according to the time zone update.

Setting City: set different cities. NOTE: This option sets the five cities (Beijing, Sydney, London, Tokyo, New York), this option can be

used in conjunction with the automatic update, and in the case of network support, before automatically update the time and date. Time / Date settings: set the current time, date, and on / off daylight saving time. Formatting: Time, date display format and date separator settings.

Note: If you remove the battery from the phone or the battery is exhausted for a long time, when you reinstall the battery or to charge the battery after the reboot, you may need to set the time. According to the time zone update: set the phone is automatically updated according to time zone time and date. [Timer switch]: set the phone to the designated open, shut down time. Special note: in the specific area of use is prohibited (such as the cabin), please enter the area before you make sure TIMER feature is turned off in order to avoid abnormal accidents.

[Language]: Select the language used by mobile phone display (the phone supports: English, Simplified Chinese), the default is Simplified Chinese. [Standby menu display]: standby menu display can be set wallpaper images (system, user-defined), screen saver pictures. [Auto Update Time]: To set the phone to automatically update the time zone according to the current time and date, select "Open." Automatic update will not affect you as alarm clock, calendar or alarm notes set time. When they are used to create based on the time. But the automatic update time may cause some alarm has been set to expire.

Note: Contact your network operator or service provider is to provide the service and more. [Handwritten set]: can set the speed of handwriting, pen color. [Other Settings]: LCD Backlight: LCD backlight can be set time

4.5.3. Network settings

[Network selection]: re-search, select the network and the selection mode. [Preferences Network]: Select the preferred network. [GPRS connection]: You can change the connection or GPRS connection required for the permanent connection.

4.5.4. Security Settings

SIM card lock on or off SIM Lock (PIN code). Phone lock on or off the phone lock. Phone lock is a 4-8 digit password, the factory default password is "1122", you can change the password yourself.

Set keyboard lock keyboard lock off and open the length of time. Change Password [PIN] is more of the PIN in the password, you must to activate SIM lock conditions. [PIN2] PIN2 code generally does not permit users to use and modify the [cell phone password] You can be the default phone lock code "1122" to their own 4-8 digit easy to remember symbols. If you open the phone lock when the phone is switched on will prompt you to "enter the phone password."

4.5.5. External Link

Bluetooth:

[activated Bluetooth]: Set Bluetooth on / off. [Search free devices]: search for Bluetooth devices. [My Device]: see my Bluetooth device. [The machine can be searched]: open / close to set it to be searched. [The local device name]: You can set the local device name.

[Advanced options]:

Set the sound path: Optional stay on the phone or go handsfree. Storage location: Optional storage location is set to phone memory card, always ask. Share permissions: set the share permissions to be free to access, only read. Bluetooth device address: You can view the Bluetooth address.

Account Data GPRS: can refer to the following settings: Account Name: CHINA MOBILE GPRS GPRS connection point: cmwap User Name: blank Password: blank Authentication mode: Normal primary DNS address: 000.000.000.000 time DNS address: 000.000.000.000

4.5.6. Restore the factory settings

the phone to some of the settings back to factory state. Factory set password is 1122 phone password.

4.6. Multimedia

4.6.1. Camera

this feature, you can use the built-in camera phone photos, and can adjust the camera settings. Camera lens at the side of the phone and mobile phone screen as a viewfinder. Camera-generated photos are JPG format. If downloaded to a computer, please use the appropriate software to view!

If not take a new photo storage space, you need to delete some old photos or "document management" function in other files to address storage space. Camera Option Description:!

Option Description View saved photo album camera exposure compensation to set the shutter sound compared to avoid flicker delay shooting photo shooting to set the photo size photo-quality setting White Balance Auto, sunlight, tungsten, fluorescent, cloudy, incandescent light Situation model automatic, night shoot mode effects settings normal, gray, retro, retro green, retro blue, negative, grayscale negative, the board recognized the value of restoration Mo changes the camera settings back to factory settings stored phone memory card

Note: The election scene in the camera interface, a photo quality, white balance, delay shooting, continuous shooting settings, exposure compensation, zoom icon, click the icon to be set accordingly.

4.6.2. Photos

taken pictures are saved to the album. Album Option Description:

Option Description View to view the selected image / photo viewer choose to view pictures mode mode: List mode, matrix mode for the selected photos set to wallpaper, screen saver, picture caller to send the selected photos by color letter sent to rename the Bluetooth rename delete the selected photos to delete the selected photos to delete all the files to delete the album list, all pictures / photosSort pictures in an album by name, type, time, size, sort, easy to find the store location to save to the phone memory card

4.6.3. Video recording devices

operating by the middle button to start recording, video recording devices into the option can make the following settings: Settings option name in the brief video recording mode, you can make the following settings, exposure compensation, night shot mode, to avoid flicker video recording operation can set the video quality to set the white balance automatically, sunlight, tungsten, fluorescent, cloudy, incandescent light effects set to a variety of effects to choose storage location to save to the phone, Mo recognize the value of the card may restore video mode, change the settings restored to factory settings

Note: The election scene in the camera interface, a photo quality, white balance, night shot mode, exposure compensation, zoom icon, click the icon to be set accordingly.

4.6.4. Video player

supports 3gp, mp4 format video playback, the playback can be the following. Flash Player Option Description:

Option Name Description Play Play movie file to send to the selected video sent to MMS, Bluetooth can rename the movie file specified rename delete the specified movie file delete all the files to delete the list to delete all the files can be sorted by name, type, time, file size sorting, storage location easy to find mobile phones, memory card

4.6.5. Music Player

Used USB cable music players and mobile phones connected to the computer, the computer will show new hardware found message, and generates a removable hard drive, MP3 download to the selected removable hard drive. Music broadcasting options Description:

List of Options menu music Description:

Play: Play the currently selected song. For more information: see the song details. Add to ringtone library: adding profile to the current song ringtone library. Updated Playlist: update the current playlist. Setting: The automatically generated list, repeat, random background play, set the preferred list.

4.6.6. Recording

in the studio interface proceed as follows: New Recording: Record new audio file. Play: Play the selected audio file. Additional: The paper referred to the parent directory for additional recording (recording only AMR format audio files can be attached). Rename: file name of the selected recording to re-name. Delete: delete the selected audio file. List: You can view the entire audio file. Delete all files: Remove all of sound recordings. Setting: The audio file format and storage location set, with AMR, WAV formats to choose from. AS: use to profile send: Send to MMS, Bluetooth

4.6.7. FM radio

phone support FM radio FM radio, click the screen icon corresponding shortcut. Speed by the main course "option", as follows: [channel list]: Set channel name and frequency. [Manual Input]: Manually enter the frequency. [Automatically search and set]: Select "Yes", the phone automatically search for channels and channel search to save to the channel list. [Settings]: You can turn on or off the background player and speaker phone, set the recording format (AMR, WAV), storage location (mobile phone, memory card), sound quality (low, high), Radio Data System Settings (audio services, car transportation services). [Sound recording]: the recording [Add]: the parent directory of the file referred to for additional recording (recording only AMR format audio files can be attached). [List of files]: You can view the entire audio file.

4.7. File Manager

Mobile: [Open]: Open the folder. [Format]: format the memory card all data.

Memory Card: phone memory card to expand storage space by the capacity of images through this module, MP3, e-books and folders and other management. Memory Card - storage for the T-FLASH memory card. [Open]: Open the folder [New Folder]: in the root directory, create a new folder, better classified storage file. [Format]: format the memory card all data. [Rename]: rename the storage card. [Details]: T card content for more information.

4.8. Game

4.8.1. Entertainment space

into the entertainment space, QQ games. Please see tariff, then download, you can use.

4.8.2. Play the game settings:

[Background sounds]: Set the background sound when you switch the game. [Game vibration]: Set the game vibration switch. [Volume]: Set the size of the game is the sound of the voice.

4.8.3. Dynamic games

Own compass for use.

4.9. Profile

Your phone has various setting groups, called profiles, for which you can customize the event and the phone number of environmental settings. First, according to your preferences on personalized profile settings, and then you only need to activate any profile can be. Available profiles are divided into standard, meeting, outdoor, indoor, headset, Bluetooth. Each profile can edit the following ring settings: each of the calls, alarm, boot, shutdown, information, sound button to view or set. Volume: ring tones and keypad tones to set the size. Ring way: Bell, vibration, vibration and ringing, vibration then ring a variety of types. Ring type: Set ring type, with sound, repeat and crescendo of three. Other tones: with a warning tone, error tone and the call connected four network connections. Answer mode: any key answer. Personalized settings, in the "Options" select "Start" button. Description: The phone automatically after you insert the headset into the headset mode, unplug the headset before starting the restore mode.

4.10. Toolkit

4.10.1. Flashlight

flashlight can be set to turn on / off.

4.10.2. Calendar

This feature can be arranged through travel alarm to remind you also can record your itinerary. Select the highlighted block to the required date; To see one day all the memo, click View then. Then you can proceed as follows: View the day: View the day's schedule. You can travel to view, add, edit, search, delete, send schedule, save into a file and other operations. View all: View all the schedule. Add Event: Add schedule. Delete Event: You can delete all, has expired, a certain time event. Skip to the specified date: quick access to calendar dates. Weekly / monthly view: to week or month view calendar. Switch to today: You can return to today's date. Lunar: View calendar, choose whether to open or close the lunar calendar.

4.10.3. Task

The task to create a new task. And can be view, add, edit, search, delete, delete the task has expired, all the delete, jump to a specified date, view the unfinished task, sending schedule, save into a file. If you have set the alarm for the task, when prompted to set the time, the phone will ring and will display the contents of the task prompt.

4.10.4. Alarm clock

when phone is turned off, as long as the batteries have sufficient power, the alarm will continue to work. 5 alarm system has been set, the default is off, according to need to open one or all open. Each alarm can be set. Alarm time, the phone beeps. Press Stop to stop ringing. If you press sleep, the phone will be suspended ring. If the alarm time is reached while the device is not on the phone and ring in their own power. If you press Stop, the device asks whether you need to boot. Click "No" turn off the phone, click "Yes" registered to a network boot.

4.10.5. World Time

by left and right buttons to view the world time zone corresponding to the current time. Select "Options" can be turned on or off daylight saving time other cities.

4.11. Network Services

4.11.1. STK

SIM service menu function is to support, according to the different SIM card, the menu offers something different.

With this feature, you can access various services on the Internet. Such services may include weather, news, and financial information and so on. This function provided by the network provider, the services provided under the SIM card will have new menu options appear. If the SIM card and the network provider does not support this kind of service, this function will not be used. For more information contact your network provider.

4.11.2. Internet service

related charges and the specific settings, please consult your local network service operators. Phone provides default settings document, if you can not use, please use the network services according to different network operators to consult the local press OK, proceed as follows:

- 1> Home: factory default URL.
- 2> Bookmarks: store often used in the URL.- Enter: Click on OK, visit the website. - View: You can view the title and address.- Send: SMS or MMS messages can be transmitted. - Add a new bookmark: add a new bookmark. - Homepage: the bookmark is set to home page. - New folder: add a new folder.
- 3> Web History: After browsing the preservation of records.
- 4> Enter the address: enter the URL click on Options \ done directly online.
- 5> Service inbox: is the site to users.

6> set: You can set the file browser options, preferences settings, the service message settings.

4.11.3. Baidu search

at the cursor location specified input information, click on the search.

4.12. Calculator

in the calculator screen, click the appropriate icon, you can add, subtract, multiply, divide, memory plus, memory minus and other operations. Note: This calculator is designed for simple calculations.

4.13. E-book

to enter the feature list in the electronic shelf displays a book name list, click "Options" to proceed as follows: Open the books: open the selected e-book.

Update: refresh the e-book. System settings: can the font size, scrolling, auto-scrolling, scrolling speed, full screen, encoding, alignment, select the storage location set. Information: Display the selected text information. Such as: Title, size, file format. Delete: delete the selected text. Delete all: Delete all text. Sort by: according to name, type, time, size of the sort. The default implementation of the system: the implementation of the "System Settings" in the settings. Help: easy instructions. Note: This function support. TXT format text.

Please pre-read the text stored in the file management \ storage card (mobile phone) \ Ebook Directory

4.14. Exchange

rates enter into the function of the exchange rate.of domestic and foreign, and then enter the national currency, click OK to arrive at a foreign currency. Click Reset to reset.

4.15. Compass

into the function, select the option to click on the calibration, and then rotating the phone can be calibrated. Note: Use the compass needs to be calibrated first.

4.16. Phone

features can be entered into the need to dial the phone number, click to call to call; enter the number could also be click to add contacts, can be saved to the phone number or SIM card. Note: Press * key to enter "+", "P", "W", where "P, W" to facilitate the call extension; "+" for international calls. Press "1" key, voice mail services on behalf of the call center, this number need to pre-set number of voice mail center.

5. Input method described

in Chinese and English on your mobile phone is a dual-purpose full touch screen mobile phone, not only can display Chinese and English menu interface, you can also write a short message in Chinese and English. Using the text input, you can edit the English phone book, SMS and so on. Phone using the classic Sogou input method is more convenient to use, fast. Mobile phone input method including: intelligent case in English, English input (uppercase and lowercase letters), Digital input, intelligent phonetic input, handwriting input.

Enter the basic letters touch screen input method of this phone supports all key functions, each time entering a corresponding character. Sogou Pinyin input method of the all-touch-screen phone inputs, Sogou input method. Click the Input Method icon to quickly switch the input method. Digital input method input method in this state click on the number keys enter the corresponding number. Handwriting neat and simply write on the screen characters needed. Symbol input keys directly click on the corresponding symbol

6. Accessories

you can buy the following parts of the company to meet the mobile phone. Other accessories your dealer for details. You can purchase additional batteries to provide the company with other different-capacity lithium batteries. Ultra-lightweight travel charger, rapid charger and practical. Can quickly charge the phone. The charger into a power outlet, and the other end into the bottom of the phone attachment interface. You can view the display in the phone charging status, power off state does not automatically start charging, charging during the start button you can press the switch on your phone Headphones, USB cable.

7. Care and maintenance

Your phone is a battery maintenance

- rechargeable battery as a power source. When the power weak, the battery charging. To preserve battery life, the best will in the charge before the battery is empty.
- When the battery charger when not in use, cable and power supply source separation. Do not connect the charger and the battery more than one week, over-charging will shorten battery life.
- Temperature limits of the battery can be charged. Therefore, before charging, the battery may need cooling or warming. If the battery temperature exceeds 40 degrees Celsius, the battery will not charge.

- Keep the battery in its original purposes, causing the battery to prevent short circuit. When the battery is directly connected to the conductive material will result in negative short-circuit.
- Do not use a damaged battery.
- Keep the battery in extremely cold or very hot place will lead to shortened battery life, will expose the battery to the place in the cold or heat may cause the phone function does not play, even if the battery fully charged, too.
- Do not place batteries in a fire! According to local laws and regulations dealing with waste batteries. Mobile maintenance following suggestions will help you take care of your mobile phone:
 - the phone with all accessories away from the place where children can touch.
 - Keep the body dry, the liquid will cause the metal circuit corrosion.
 - Keep the body away from heat, high temperatures will shorten the life of electronic devices, so that the plastic melt and damage the battery.
 - Do not attempt to open or mobile phone casing collapse, the demolition of non-professional body may cause damage.
 - Do not use strong acid or strong alkaline detergent body.
 - Only use the phone original accessories. Violations of these will void the warranty.

8. Security information

in the use of your phone, you must follow to protect users and their environment and the development of safety regulations.

Traffic Safety

- except in emergencies, if not installed to ensure safety and freedom of movement of the hands-free device while driving, do not use the phone, to ensure that you focus all the attention on driving, please park your car to a safe place to re-use phone. Always obey the laws and regulations.
 - the case is not sufficient protection, some electronic systems in cars may be radio waves transmitted by the impact of your phone.
 - It is recommended that you only have an external antenna to use the car phone.
 - Only a qualified technician to install your phone in your car. Before boarding an aircraft safety turn off your cell phone, because it affects the operation of the aircraft and the entire cellular network. Cell phone use on planes is illegal, violating these safety regulations will be prosecuted or cause a denial of service GSM network. Environmental Safety

- Remember to follow wherever the existing special regulations in place prohibiting the use of mobile phones, or it may cause interference or danger must be shut down.
- Use of any radio transmitting equipment, including cellular phones, may inadequately protected medical devices cause interference. If you have any questions in this regard may be made to a physician or medical device manufacturer for details.
 - Your phone may have hearing aids, pacemakers and other medical electronic equipment interference. Follow your doctor or medical device manufacturer's recommendations.
 - may cause an explosion in any place, such as gas stations, chemical plants, the user turn off the phone.
 - comply with the use of wireless devices restrictions.

9. Appendix

Fault Diagnosis

Symptom	Possible Cause
Can not boot	The battery has power. Battery placement is correct.
SIM card error	SIM card is dirty, clean the SIM card. Reinstall the SIM card. SIM card is damaged, replace the SIM card
Reception and	Check the signal strength indicator on the display tag, the number of cells in the symbol grid, said signal strength of 5, 2 cells expressed the following weak signals.
Phone can not breath	You can set your phone number hidden, but your network operator does not provide the service; Ii likely to interfere with the surrounding environment has a strong signal; Iii may prohibit you activate the call feature; Iv can you activate the line 2, but your network operator does not provide the

	service;
Battery is not charging	may have over-discharge the battery, you need to connect the charger to recharge after a period of time; li battery performance has deteriorated
Can not be connected to the network	l signal is too weak, or around wireless interference li SIM card is installed correctly, whether bad or SIM card is damaged? Such as the SIM card is damaged, please contact the network service provider
Dark photographs	l brightness setting is too low; li ambient light is too dark;
Photographs are too vague	l shooting objects in motion state; li cell phone the instant you press the shutter a slight jitter; (C) low light
Photographs are distorted	Distance of the lens may be too close to your subject
Can not enter the service menu	Possible that your SIM card does not support services
Set to the standby image can only see part of the picture	May be the size of your image does not meet the screen size of the machine