

# **ZGPAX**

## **S5 User Manual**



## Preface

**Attention:** For saving the battery power, please shut down the GPS, WIFI, Bluetooth and so on, and back to the standby status when not use these functions.

### 1. Main functions:

1. Screen resolution: 240\*240 pixel, OGS capacitive screen
2. Built-in GPS
3. MTK 6577 Chips, dual core 1.0G
4. 2.0M camera
5. Ram: 512M ; Rom :4G
6. GPRS,EDGE,BLUETOOTH,WIFI,FM RADIO

### 2. Safety notices

Safe warning and attentions:

Before using, please read below attentions carefully for using accurately.

Please shut down the watch when in the plane、hospital and other places which is not allowed to use, or it will affect the electronic equipments and medical instruments work. Please comply with the policy of this places if using in there.

Please observe the law and legislation and relate marks when the watch close to the places which storage fuel, chemicals or explosives.

Please don't use this watch near the poor signal or high precision electronic equipment. Radio wave disturbance will affect the error operation and other problems of this electronic equipment. Especially in the vicinity of the following devices: Hearing aid, pacemakers and other medical electronic equipment, fire detector, automatic doors and other automatic control devices and son on. Please inquiry the effect of the devices from the manufacturer or local retailers.

#### ■ Attentions when using

No removing or adapting the watch to avoid the damaging and Leakage fault. If really need the disassembly, please delivery the goods to the service

center. Non professional personnel shall not dismantle the machine.

Please don't knock the screen strongly or with other things, it will cause the breakage of liquid crystal panel and leakage of liquid crystal. The eyes maybe blind if the liquid crystal was get into. So please use the clean water to wash the eyes (don't rub your eyes) at this time and come to the hospital at once.


Please don't use the needle、pen and other sharp objects to touch the screen and button, it will cause the damaging of the watch or error operation.

Please avoid closing to the magnetic card or other magnetic objects, Cell phone radiation may clear the messages of floppy disk, store value card and credit card

Please avoid damping or the water enter into the watch, it will make the short circuit, leakage and other faults.

### 3. Prepare before using

#### A、Product introduction

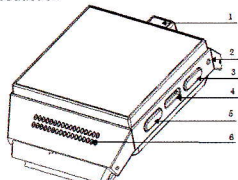

- |             |                 |                |
|-------------|-----------------|----------------|
| 1: Camera   | 2: Microphone   | 3: Back button |
| 4: USB port | 5: Power on/off | 6: Speaker     |


USB port is in one side of the watch, can use for headphones, USB cable, and charger port.

## B. Battery removal and installation


Warning: Make sure to turn off your phone before you removing the battery. Do not take out the battery when the watch in the boot or have other external power supply connection. Otherwise may damage the SIM card and watch.

Install and remove, follow these steps:

① Let the battery cover two clasp align at the clasp of the body of watch : Press the battery until the battery completely lock into the battery compartment (as shown)

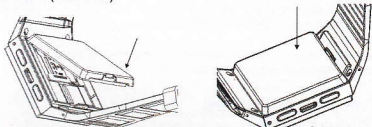

 ② Sideways unplug the back cover then remove it.(as shown)

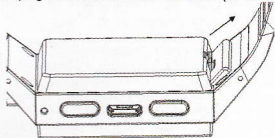

## C. SIM card installation

 
Before installing the SIM card, please turn off your phone, then take out the battery, Find the SIM card slot, inset the SIM card then locked the holder(as shown) Make sure the sheet metal

side of the sim card should be downward.

**Please place the SIM card in the children can't reach.**

Bent or improper operation will may damage the SIM card, when insert and remove the SIM card, please take care.

This watch's SIM card correspond to the GSM network.

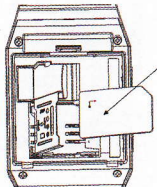

## D. T-Flash card installation

 
Bent or improper operation will may damage the T-Flash card. When insert and remove the

T-Flash card, please take care.

**Please place the T-Flash card in the children can't reach.**

● Before installing the T-Flash card, please turn off your phone, then take out the battery.

Find the T-Flash card slot; inset the T-Flash card then locked the holder(as shown) Make sure the sheet metal side of the T-Flash card should be downward.

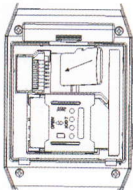

#### E. Charge the battery

Insert the charge plug of the charger to the watch's USB port.

Notice:

When the battery is low, the screen will display warning information, when the battery is empty, the watch will automatically shut down. Please do not let the battery in a state battery is low for a long time, otherwise you will damage the battery quality and longevity. In order to ensure the watch to work properly, please be sure to use the designated charger.

#### F. Power on/off

Power key In the upper left of the watch, long press for start-up and shutdown functions.

Short press to off and bright LCD screen function;

Notice:

When you are in place to prohibit the use of mobile phones or use mobile phone may cause interference or danger, please don't open your mobile phone, and better remove the battery.

#### G. Back button.

It's located below the fuselage on the left by (relying on the camera side) one step back, exit the function.

When calling, music playing, FM, can long press the back button to enter the volume adjustment function.

 
### 4. Watch Phone standby clock

#### 4.1 Clock display



(Clock Point 3 o'clock displays the date; 6 o'clock position shows the week; 9 o'clock AM / PM. (AM / PM).

Double-click anywhere on screen to bring up the clock selection menu. There are three hour optional, defaults is the first "Clock one".)

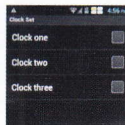



## 4.2 Functional operation

- A、 In standby clock interface slide from right to left on the clock interface directly into the function menu
- B、 In the standby clock interface slide from up to down, directly into the music functions
- C、 In the standby clock interface slide from left to right, directly into the dial pad
- D、 In the standby clock interface slide from down to up, directly into the calendar function

**Note:** In standby mode, press the power key to unlock and enter the system, you need to wait for about 3-5 seconds

## 5. Function Main Menu

Slide from right to left on the clock interface to enter the main menu.

Main Menu sub-page display, can scroll left or right page.

Each page is shaped like a swastika grid, each of which has four function icons.

Users install the application on the last page will automatically add an application icon.





Interface points below the page, there are many pages total, when the round point is bright, it means you are at the position for the current page menus.

## 6. Menu Structure

**Note:** Entering function interface is divided into two parts.

Top: The status bar can be dragged out of the downward slide, and pack up when upward slide.

Right to left: Time Options Batteries signals and functions into a running shrink icon (Note: Click the Options menu, you need to wait 3-5 seconds after the pop-up options menu)

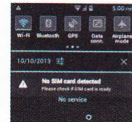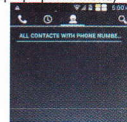

Main area: Phone features display and User interface


To save battery power, after use, please turn off Wifi , Bluetooth, GPS, etc., to return to the standby state.

## 7. Features


- Dial Features


Step into the dial pad:

Option 1: In the standby clock interface, sliding from left to right into the dial pad feature.

Option 2: Go to the main menu, click the icon .

 (Top four icons are: dial, call history, phone book and search function.)

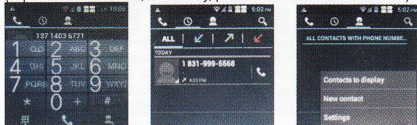

(Click on the button , After a few seconds the bottom submenu pop-up.)



(On calling status, long press the back button to enter the volume adjustment; short press the back button you can return to other functions.)

#### ➤ Settings





➤ From main menu click , enter the menu settings.

Here Including WLAN (WIFI settings), Bluetooth, Date usage, Display, Audio profiles, Battery, Apps, Security, Language&input, Date&time, Schedule power on/off, Accessibility, Developer options, Backup&Reset, About phone etc.

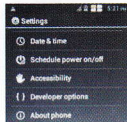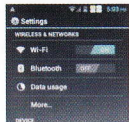

 
WIFI settings: switch on / off, click to enter, scan, select the search to a wireless local area network, enter the password. (Please use "Showing password" in order to see whether the password is correct; can customize the installation Input Method)

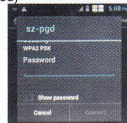


Bluetooth setting: Enter main menu, click  menu setting, choose bluetooth setting. Turn on/off.




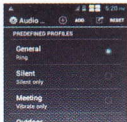
Airplane mode settings: Go to the main menu, click  menu setting, Click "more" options to find the Airplane mode settings



Auto-rotate screen settings: Go to the main menu, Click  menu setting, Enter the "display" then find the "Auto-rotate screen"



Audio Profile settings: Go to main menu, click  menu setting, Slide down the screen, click on the "Audio profile."




Language&input settings: Go to the main menu, click Settings menu setting, Slide up and down the screen, click on the "language&input", click into the "language", select the language you need.


Download the installation program from the PC: Go to the main menu, click




Settings menu setting, slide up and down the screen, click on the "Developer Options" Figure (1), check the "USB debugging" Figure (2), if some third-party software can not be installed, set up security check inside the "unknown sources" in "Security" as (3) (recommended PC client software download, such as using third-party applications: 91 assistants, 360 assistants and so on.)

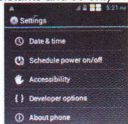

Picture (1)

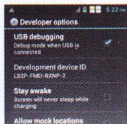

Picture (2)

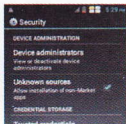

Picture (3)

Other features are:

People  
Browser  
Music  
Camera  
Messaging  
Calendar  
File Management  
Play store  
Calculator  
Gallery  
FM Radio  
Sound Recorder

### Set Volume

Quick settings: When in the audio playing, calling, FM menu interface, long press Esc button to set volume directly.

Other settings: Can set incoming call, message, clock volume in contextual model.

### Open Airplane mode

When long press power On/Off button, you can choose: Power off; Airplane mode; Silent mode; Vibrate Mode; Normal mode (as shown)



 
### Connect PC

■ If watch is power on, will show you the battery icon at the top of screen;

If watch is closed, will show you the battery icon in charging status until power full.

#### ■ U-disk

When watch connect with PC by usb cable, will automatically popup a dialog box for your choice to be U-disk, if press Esc button then just charging.

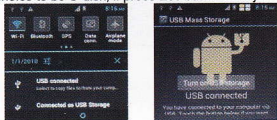

## 8. Common Troubleshooting

If any problems appeared when using the watch phone, please follow below solution ways. If the problems are still existed, please contact the distributor or appointed maintenance personnel

#### The watch phone can not power on.

- Press "on" button till startup screen
- Check the battery power
- Check if the battery poor contact, remove it and install the battery again, then power on

#### No feedback for several minutes

- Press "off" key
- Remove the battery and install again, then power on.

#### Using time is short

- Please make sure have not closed the screen savers
- Please make sure enough charging time (more than 3 hours)
- After charging parts of power, Battery level indicator might be inaccurate. Please wait about 20 minutes to get the accurate indication after removing the battery charger.

#### Cannot connect the network

- Please try in another place
- Please confirm the net service place from your network supplier
- Please make sure your SIM card is effective from your network supplier
- Try to select the network by hand
- Please try it later if the network is busy.

#### Cannot dial the watch phone

- Please make sure the telephone NO. is correct and press the call button
- For the internet calling, please check the country code and area code.
- Please make sure the phone with net work and not in busy status
- Please make sure your Sim card have enough money and did not prohibit the calling
- To inquiry your register information from your network supplier (such as limit, SIM card validity and so on )
- Please make sure did not set the call limited
- Please check if set the fixed dialing

#### Music cannot be played

- Please check if the music format is supportable, such as MMF format
- Please check the music is existed without deleting: you can update your playing list and make sure it is under "my music" file.