



THE WORLD'S LEADING HIGH-DEFINITION FASHION



INSTRUCTION VIDEO GLASSES

7.2 inch
Full color LCD screen



AV IN

CONTENTS

SAFETY.....	1
QUICK START.....	2
SETTING.....	8
PLAY MUSIC.....	12
PLAY MOVIE.....	14
PICTURE BROWSING AND E-BOOK.....	16
AV IN.....	18
OTHERS.....	19
GUARANTEE.....	22

SAFETY NOTICE

1. 1 Warm notes:

- * Keep the machine dry all the time!
- * Please use the accessories recommended only!
- * Please do not divide the head cover (or back cover). If repair is needed, please contact our distributors. Unauthorized repair of the product shall lead to the loss of warranty.
- * Avoid dropping and knocking the product. Keep TFT screen from violent shakes to avoid damages to the screen and improper display. Users shall be held liable for any problems resulted from dropping or knocking.
- * Damage caused by unproper operations , we does not provide free warranty !

1. 2 Video Glasses Notes


- * To avoid possible failure, do not disconnect when uploading or downloading is in process.
- * Due to the different calculation of capacity and the space taken by firmware and FAT partition table of flash memory, the labeled storage capacity can be slightly different from the volume when connected to the PC, depending on the version of firmware and the type of Flash memory.
- * Since files and programs on the product can be easily damaged by the spreading of computer virus, measures should be taken to prevent computer virus. Once the product fails to operate due to contamination of virus, firmware should be upgraded on a computer free from virus before format is conducted.
- * There will be slightly rises in temperature when the battery is recharged. This will not affect the proper use of the machine. Software and hardware versions may lead to some difference in performance and function, and are subject to change without prior notice. The manufacturer reserves all the rights for the improvement of the product design.
- * Do not use the product in extreme temperatures, dusty and humid environment.

1. 3 In The Following Places, It Is Necessary To Pay Special Attention So As Not To Lead To The Failure Of The Product.

1. Places which are sandy and dusty
2. Easily contact with water, such as in rainy days or on the beach.

We sincerely recommend you do not let the video glasses stay in your pocket when you sit down, or forced it into packages which are filled with things.

2.1 Shape diagram

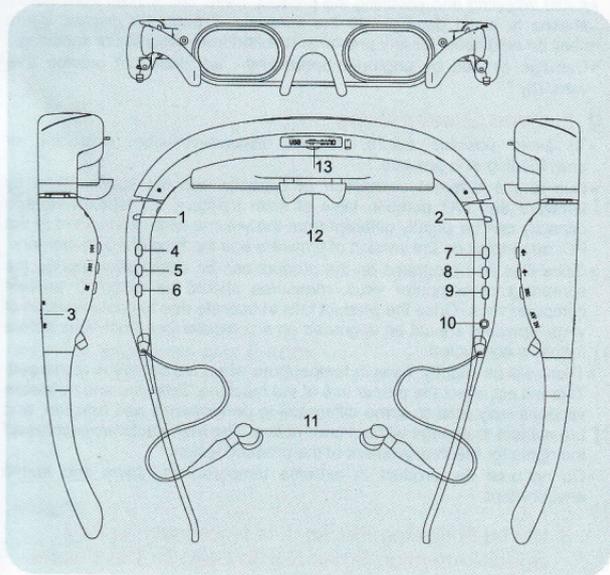


top


2.2 Key and shape functions

1. Power-on Indicator
2. Charging Indicator
3. (ON-OFF) keys
4. ⏮ Next, Fast Forward
5. ⏪ Previous, Fast Backward
6. OK Enter, Menu, Play/Pause
7. 🔊+ Volume up, Next page, A-B Repeating
8. 🔊- Volume Down, Back page
9. ESC Return Saving Settings
10. Av-in Video Jack
11. Earphone
12. Nose Clips
13. USB Jack and TF Card Jack


2.3 Accessories

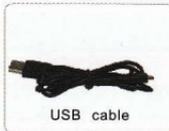

USB cable

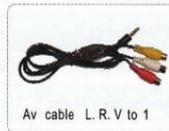

Av cable L.R.V to 1

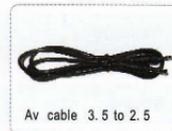

Av cable 3.5 to 2.5



USB Charger



Light Shield




Deluxe Carrying case

2.4 Specifications

Items	Description
Memory	Built-in 4 GB memory, support TF card, support up to 32 GB
System	Support the Hassel Support Files Play ,Files Browsing
Display	72inch 16 : 9 virtual display.(2 meters distance)
Menu Language	zh-CN,zh-HK, En, De, It, Pt, NL, Fr, Es, PL Ru,Tr,Da, Cs, Ja,Sk, Kr, IL,Ar, Eg
Menu System	Picture Menu Word Menu
Audio format	MP3,WMA, FLAC,AAC,APE
Frequency Response	30HZ-18KHZ 0dB± 3dB
Output Power	L (10mw) +R (10mw) (32 Ω)
Built-in Audio	Formal/ Rock /Pop /Classic / Custom / Bass/ Jazz
Custom Sound	Support
Play-FX Sound:	Support
Resolution	RM/RMVB: Below 720*576 AVI: Below 800*480 FLV format play
USB Interface	High speed USB 2.0
Recharger	DC5V Input
Power source	3.7V Lithium polymer batteries
Volume	170mmX55mmX30mm
Working Temperature	-5℃~45℃
Weight	80g
Operate System	Support Windows2000/XP/Vista
AV-in	Auto recognition NTSC/PAL systems

2.5 Menu mode

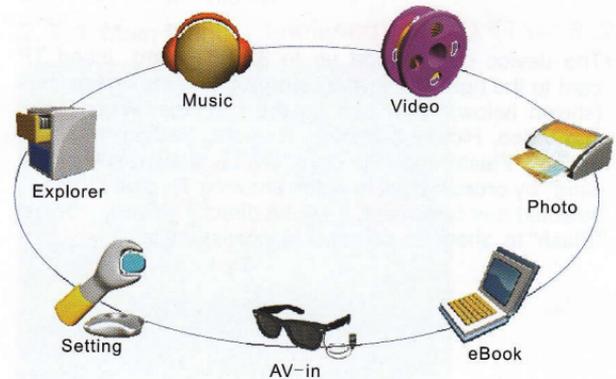

2.6 Basic operation

2.6.1/Power ON/OFF

*Power ON: Turn the switch to "ON" position to enter main interface for function selection.

 
*Power OFF: Turn the switch to "OFF" position to power off the player.

2. 6. 3/Connect PC And Files Transfer

*When connected to a PC through USB cable, the product can be accessed as a moveable disc for data transfer. At this mode, the player will work as a memory stick. You can copy the music you like directly on to the product without any third party program.

2. 6. 4/TF Card Expansion

*The device can support up to 32G TF card. Insert TF card to the right place in accordance with the instructions (shown below), then turn on the machine. When enter into Video, Picture browsing, E-books, Setting, two sub-options "Flash" and "SD Card" will be shown, select "SD Card" by pressing OK to enter, showing TF card storage , selected one document, it will be directly played。 Select "Flash" to show the contents of local storage.



2. 6. 5/Volume Adjustment

*Press \uparrow to adjust volume up and to press \downarrow to adjust volume down while playing music or playing video.

2. 6. 6/Fast Forward And Fast Backward

*Short Press \rightarrow to adjust volume up and short press \leftarrow to adjust volume down while playing music or playing video.

2. 6. 7/Last And Next

*Press \leftarrow and \rightarrow or \ll and \gg to go to the last and next file while playing music, playing video or viewing pictures.


2. 7 System menu

2. 7. 1/Main Menu



*At the main menu, press \uparrow and \downarrow ; or \rightarrow and \leftarrow to select Video/Music/Picture Browsing/E-Book/AV IN/Resources Manager/System Setting functions, and press OK to enter the functions(as shown in the drawing).At System Setting and Resource Manager, press OK to enter the functions, directory or menu. Press ESC to return to the upper level of directory or menu.

3. 1 Setting

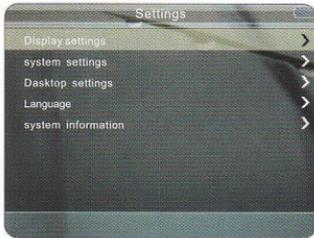


*At the main menu, select Setting (as shown below), Press OK to enter the menu and select sub-menu before pressing \leftarrow and \rightarrow or \leftarrow and \rightarrow

3. 1. 1/Display Settings




In the display settings, press "OK" to enter the two sub-directories, "Backlight Lights Show" and "Hide Status Bar", select by pressing \leftarrow and \rightarrow , and then set separately.

3. 1. 2/System Setting

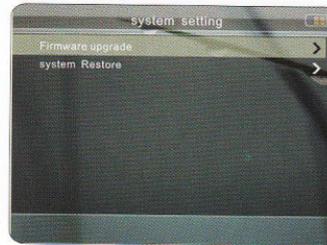


At Setting menu, select System Setting and press OK to enter 2 Sub-Menus: Firmware Upgrade and System Restore.

1. Firmware Upgrade: A drop-down dialogue box will give reminder for firmware upgrade. Exit if firmware upgrading is not needed at the moment.

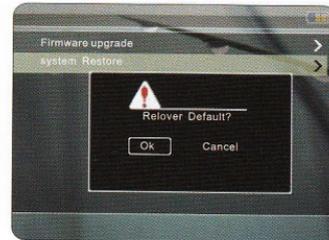

2. System Restore: A drop-down dialogue box will give reminder for system restoration is not needed at the moment

3. 1. 3/Desktop Setting

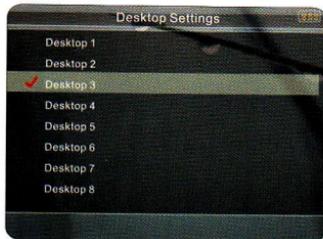


At Setting menu, select Desktop Setting and press OK to enter. Press $\diamond+$ and $\diamond-$, or \triangleright and \triangleleft to select Desktop 1-8.

3. 1. 4/Language Setting



At Setting menu, select Language Setting and press OK to enter. Press $\diamond+$ and $\diamond-$, or \triangleright and \triangleleft to select the language as you like and press OK to confirm.

3. 1. 5/System Information

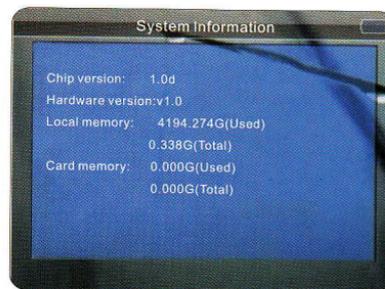


At Setting menu, select System Information and press OK to show the information of the product: manufacturer, model, chip version, software version, local memory and card memory.

★3. 1. 6/Saving Settings

To save any settings, return to the main interface and long press ESC for about 2 seconds to power off the product. The settings shall be saved and effective when the product is powered on next time. If the product is powered off by directly turning power switch to "OFF" after changing settings, all the changed settings will not be saved or effective when product powered on next time.

4. 1 Play Music

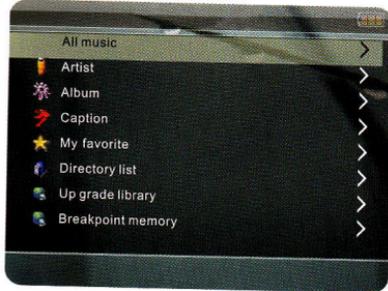

1. At the main menu, Select play music, press OK to select to enter media library. This menu contains all music, artist, album, caption, my Favorite, directory list, upgrade library and replay. Selecting the items by press $\diamond+$ and $\diamond-$; or \triangleright and \triangleleft and press OK to enter. Selecting the music you want to play and press OK to start.
2. At the media library, select all songs, press OK to enter the directory list, selecting your favorite songs by pressing \triangleright and \triangleleft ; or $\diamond+$ and $\diamond-$, press OK to add them to the favorite, press "OK" few second again to confirm the addition. At the media library select my favorite, and the song you have added.
3. At play mode, press "OK" few second to enter the Setting Menu: Repeat Setting, Play Setting, PlayFX , EQMode, Favorite EQ Setting and Display on screen.

4. 2 Repeat Setting

- A. Normal play: Stop while the song end.
- B. Repeat One: Replay the selected song
- C. Repeat All: Replay all the songs once more.
- D. All Repeat: Replay all the songs.
- E. Scan: Scan each song in the directory for 10 seconds (Replay all when the scan is over)

4. 3 Play Setting

Normal and Shuffle Play for users.

4. 4 EQ Mode

8 EQ Mode: Normal/ PlayFX/ Rock/POP/Classical /TruBass/Jazz/Favorite

4. 5 Display On Screen

Users can set Lyric/EQ/Off to display on screen.

Note 1:

Lyric corresponding to the songs can either be downloaded from websites like WWW.51LRC.COM or made with software. In order to display lyric on the screen, keep the lyric file synchronize for the MP3 by the same file name.

Note 2:

When lyric file by the same name is kept in the directory, it will be displayed on the screen.


Note 3:

Very few MP3/WMA/Audio files with special order can not be played. Reproduction with audio converting tools should be done before they can be played.

Note 4:

Only NORMAL and FAST version of APE songs in 3.95, 3.97and 3.98 are compatible

5. 1 Play Movie

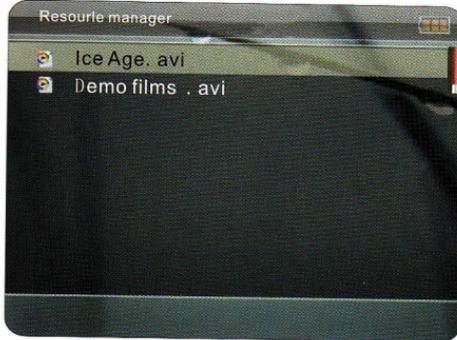


1. At the main menu mode, press \leftarrow and \rightarrow ;or \leftarrow and \rightarrow To select Play Video menu and press OK to enter Resource Manager for video files. Press OK to play the video you have selected.
2. At Play mode, press \leftarrow and \rightarrow to adjust the volume. Press ESC to enter Resource Manager.
3. At Resource Manager, press OK to enter the directory, selecting the file to play by pressing \leftarrow and \rightarrow ; or \leftarrow and \rightarrow and press OK to start.
4. While playing movie, press \leftarrow and \rightarrow to go to pervious or Next; press and hold \leftarrow and \rightarrow to Fast Backward and Fast Forward. To pause, press OK .To return to upper menu, press ESC.



Note:

- *For video files in RM/RMVB format, only those at 720*576 and under are supported. The larger the capacity, the longer it will last. If the video is beyond the range, it should be converted.
- *For video files in AVI format, only those at 800*480 and under are supported. The larger the capacity, the longer it will last. If the video is beyond the range, it should be converted.
- *Due to network environment and transfer, some of the video sources within the range are partially damaged and can not be played on the product. In this case, conversion should be made on PC before they can be played.

6.1 Picture Browsing

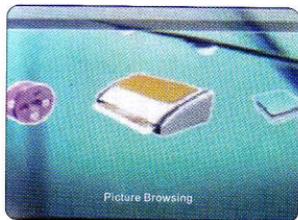


1. At the main menu, press \leftarrow and \rightarrow to select "Picture" menu and press OK to enter Resource Manager. Press OK again to select the picture you want to display. While browsing the pictures, press \leftarrow and \rightarrow ; or \uparrow and \downarrow to select the picture you want to display.
2. At Resource Manager, press OK to enter the directory and select the file you want to show by pressing OK. To return to the upper directory, press ESC.
3. While showing the picture, press OK to show the options for right turn, left turn, zoom out, zoom in and scanning.

Note:

* A small number of applications and JPEG files on Apple computer system can not be displayed. In order to view these pictures, please convert with tools like Paint that comes with Windows.

6.2 E-book

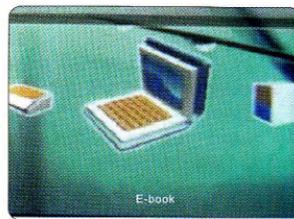

1. At the main menu press \uparrow and \downarrow , or \rightarrow and \leftarrow key to select "E-Book" menu. Press OK key to enter E-Book directory and press key OK again to confirm your selection.
2. At Resource Manager, press OK key to enter the directory and select the file you want to read by pressing \uparrow and \downarrow , or \rightarrow and \leftarrow key. to go to Last or Next, press \uparrow and \downarrow , or \rightarrow and \leftarrow key, to return to the upper directory press ESC key.
3. While reading e-book, press key to show menu for next page, store bookmark, open bookmark, delete bookmark, font size, font color, auto view and style.


Note:

* Only files with "ANSI" coding can be displayed. To view documents with other codes, open file with Notepad on computer and select File/Save As. Select "ANSI" coding and save the document in txt format before copying it on to the player.

6.3 AV IN



1. At the main menu, press \lll and \ggg to select "AV IN" menu and press OK to enter AV-IN.
2. Connected smart phones, PMPs, DVD players, game consoles and other video output device with AV cable.

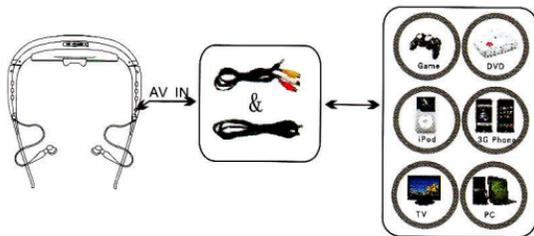**Note:**

- * The device supports NTSC / PAL video signal input, the system automatically identify the video signal format.

7.1 Resource Manager

A: Feature function of "Resource Manager" makes users scan all the stored files and directory clearly and conveniently.

B: At the main menu press \lll and \ggg , or \ggg and \lll key to select "Resource Manager". Press OK to enter. Under Resource Manager, press OK to enter the directory and ESC to return to the upper level of directory. Press \lll and \ggg , or \ggg and \lll to select the file you want to and press OK to enter.

7.2 Play File

At the resource Manager, select the file you want to play by pressing \lll and \ggg or \ggg and \lll .

7.3 USB Mode


High-speed USB2.0 port and standard moveable disc functions are fitted with the product. It supports Windows98 (Driver required) and support Windows2000/XP/Vista (No driver required). A few seconds after connecting with PC, USB mode will be displayed. Click the "Moveable Disc" in "My Computer" for reading and writing.

WARNING:

File can not be played when the product is connected with a PC at USB mode, otherwise the screen will blink.

7.4 Recharge

1. To charge the product, you can connect it with an international standard charger through "DC IN" jack or connect it with a computer through the USB port on the product: please refer to the below diagram.

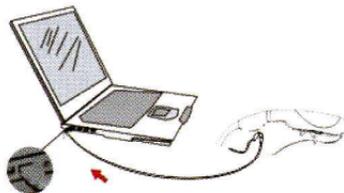

2. The battery icon on the top right of the screen will display impulse state during charging when the product is power on and the indicator light on the right ear handle shall turn red if the product is power off. When battery is fully charged the indicator light be off.
3. The product can be charged while working. However when charged by being connected to computer USB port, the product will automatically enter USB mode. After exiting this mode, you can use the product while charging.
4. To fully charge the battery when product is power off, the battery needs to be continuously charged for 3 hours.

WARNING:



The product can be charged through "DC IN" jack or USB port, but charging the product by connecting it with the two ports at the same time is strictly prohibited.

7.5 TROUBLE SHOOTING

7.5. 1/The player can't be turned on?

- *Check if the battery is out.
- *Check again after connected to adapter.
- *If the product still can not be started after recharge, contact our distributor.

7.5. 2/No sound comes from the earphone?

- *Check if the volume is turned to 0.
- *Check the problem of earphone connection.

7.5. 3/Serious noise?

- *Check if the plug of the earphone is clean as dirt can cause noise.
- *Check if the music file is damaged by playing other files. If it is damaged, serious noise or leaps can be resulted.

7.5. 4/Unreadable Code?

- *Please check if the language is suitable to be read. Set the right one in Setting-Language Select.

7.5. 5/Unable to download

- *Make sure PC is connected to the player correctly.
- *Make sure the memory is not full.
- *Make sure the USB connection cable is not damaged.