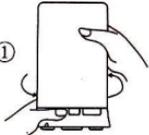
 


Along with the mist spraying out by ultrasonic wave, essential oil is also diffusing, the aroma is expanding immediately as soon as switch on. Since this aroma was diffused in a natural way which is completely differ from heating up perfume, so you can enjoy the natural aroma of the essential oil. The light is used as indirect lighting.	
Specification of the product	Operation Method
[Product Name] Ultrasonic Aroma Diffuser	<p>※ For details, please refer to "operation method" on page 6.</p>  <p>①</p> <p>Take off the cap of the main body, fill in water and essential oil into the water tank and install the cap as the original way.</p>  <p>②</p> <p>Mist Switch Press down the light switch at the back of the main body and select the mist operation time. (4 levels)</p>  <p>③</p> <p>Light switch Every press down the light switch at the back of the main body, the LED light color and lightness can be adjusted between High white, Low white, High red, Low red, High green, Low green, High blue, Low blue and OFF.</p>
[External Size] Approximate Ø80×140 (Height)mm (excluding the extruding part)	
[Weight of the Main Body] Approximate 220g (not including AC adaptor)	
[Power Supply] Packed with special AC adaptor Input power: AC100-240V 50/60Hz Output power: DC24V 650mA	
Length of the power supply cable: About 170cm Rated Electricity Consumption: 16W	
[Electricity Consumption of the Main Body] About 10W	
[Available Time to be Set by Timer] 180 minutes, 120 minutes, 60 minutes, 30 minutes	
[Aroma Spray Manner] Vibration humidification method by ultrasonic wave, vibration frequency: about 2.4MHz	
[Applicable Area] About 12-15 Square meter	
[Capacity of the Water Tank] About 100ml	
[Numbers of LED] Lights: 6 Timers: 4 Color of the lights: High white, Low white, High red, Low red, High green, Low green, High blue, Low blue	
[Main Material] Water tank, main body cap, internal cap, base: PP Lower part of the main body: PP Measuring cup for water filling: PP	
[Accessories] Special AC adaptor, measuring cup for filling water, operation manual.	
Made in China	

Qualified products

Ultrasonic Aroma Diffuser

Operation Manual

Thank you for buying our products. To ensure your comfortable and safe operating, please read the manual carefully before operation and handle it correctly.

In addition, after you have read the manual, please keep it at the place from where it can be immediately accessed in case of any obscure point occurred, the manual can be reached for reference immediately.

The warranty certificate including two parts: the manual and the warranty certificate page, Please keep them together.

Contents

Safety Warnings.....	1-4
Aroma Diffuser User.....	5
Operation Method.....	6-7
Attentions and Notes in Operation....	8-11
Maintenance Method.....	12
Parts Name.....	13-14
In case of possible faults, what about the solution of repairing and parts	15-16
About After Service.....	17-18
Specification.....	Back Cover

Attached Warranty Certificate

Safety Warnings

• Please strictly abide by the following warnings for safe operation.

In this operation manual, the warnings that may be caused by error operation are mentioned here with the purpose to prevent it from happening beforehand and the following symbols will be used. The meaning of the symbols are interpreted as follows.

Meaning of Symbol is described as the contents of the text and marks.	
△ Warning symbol	△ Symbol calls your attention.
⊘ Prohibition symbol	⊘ Symbol tells you the prohibiting activities.
● Compulsive and instructive symbol	● Symbol tells you the compulsive and instructive activities.

⚠ Warning	This symbol indicates that in case of error operation, it may cause fatal harm or serious hurt.
-----------	---

⊘ Forbidden to be remake	It means not to remake and the product can not be disassembled or repaired except technicians. → To remake the product may cause fire, shock, hurt or failure. For repairing, please contact with the shop where you bought from.	⊘ Prohibition	It is not a medical respirator. The mist sprayed out from the outlet can not be sucked in intentionally. → It may be harmful to your health. The product can not be used for other purpose except as aroma spray and diffusing.
⊘ Prohibition	Do not intentionally hurt, bent, stretch, twist the cable of the power supply of the adaptor, never put it close to high temperature area, do not put heavy articles on it and do not clamp or machine it. → Damaged cable may cause electric shock, short circuit and fire.	⊘ Prohibition	For maintenance, do not use the other detergent except the neutral ones in washroom. → The detergent remained in the water tank may cause to produce poisonous gas or other faults.

⊘ Prohibition	If the cable of power supply of AC adaptor is hurt or the insert of the socket is loose, please do not use it. → These may cause electric shock, short circuit and fire.	⏻ Plug off from the power supply	In case of maintenance or water supply, the AC adaptor must be plugged off from the socket. → It may cause electric shock or injury.
⏻ Plug off the power supply	In case of unpleasant odor or noise, abnormal heat, there were some abnormal issues happened on the main body and AC adaptor, please immediately plug off the AC adaptor from the socket and stop using it. → If you still keep it working under the abnormal conditions, it may cause fire, electric shock and other accidents and faults. As soon as you felt anything abnormal, please stop it immediately and contact with the shop where you bought from.	⊘ No wet hands touch	Please do not plug in and out the AC adaptor with wet hand. → It may cause electric shock or injury.
⊘ Prevent from moisture and water	Please do not put the AC adaptor into water or have water on it. Please do not use or save it in humid places such as bathroom, dressing room or green house. → It may cause short circuit, electric shock and other faults.	⊘ Prohibition	Do not put the foreign matter such as pin, needles etc. at the outlet of the mist spray or the gap of the main body. → It may cause electric shock or injury.
		⊘ Prohibition	Please do not use or arrange it at the site where the baby can easily approach or on bed. → It may cause the product falling down and result in electric shock, injuries and other incidents.

	Attention	To neglect the symbol, operate it wrongly may cause the operator to be hurt and it also indicates the possibility of damages.
--	------------------	---

	Do not block up the openings such as the mist outlet. →To disturb the normal working condition may cause defectiveness, overheat and fault.		When you use the commercial essential oil, you must abide by the follow terms. →You must use the 100% naturally extracted essential oil (refined oil), please do not use the synthetic perfume. In addition, please follow the dosage instruction of 2-3 drops (about 0.2-0.3ml) for every 100ml water and do not use it over the dosage. It may cause fault.
	During operating, do not take off the cover of the main body of the product. →Water and essential oil flies out, it may damage the objects around the products or cause fault.		In case of maintenance or drainage, please follow the instruction of the operation manual and draining the water with correct direction and method. →If draining water with wrong direction, the water may flow into inside of the electronic part of the product and may cause fire, electric shock and short circuit.
	Please do not touch the ultrasonic wave vibration board. →Please do not touch, hurt or press the ultrasonic vibration board with your hand directly, it may cause accident or fault.		Please do not arrange the product in the place where there is electric devices such as computer, TV set etc or electric products, household, music instrument or face to wall. → If the product contacted with mist or fell down with the water poured out, it may cause fault or hurt the surface of the object.
	If you do not use it, please plug off the AC adaptor from the socket. → It may cause electricity leakage, fire or shock due to the deteriorated insulation.		In operation or after work, please take care, do not touch the product unintentionally. →During operating or after working, the product may have high temperature. please don't touch the main body or contact with diffused mist for a long time incautiously, it may hurt you. please take care.




	Clean off the dust on the power supply plug regularly. → The accumulated dust may cause moisture and deteriorated insulation, fire, shock, fault etc.		Please do not arrange the product on un-safe places, such as high location, titled place, shelf or unstable place etc. →If it turned over, the water poured out, it may damage main body of the product or cause hurt.
	Every day you must fill in fresh water into the water tank from water pipe. Clean the inside of water tank regularly to keep it clean for operation. → At least for every 3 to 4 days of operation, you must clean inside of the water tank with clean water and clean tools. If you use this products without any maintenance, incrustation scale and mineral substance may stick on and cause malfunction. In addition, there is a threat that various germs and mold spread and give off a bad smell that will be harmful for health. Due to different healthy conditions, it may cause allergy and sensitive reaction by mold and various germs. Please take care of it.		You must use the water from water pipe under room temperature. →In case of using mineral water, alkali ion water, well water, purified water, it may be easy to produce lot of scales, mold and various germs. In addition, if the hot water became the reason of deformation and malfunction, please do not use it.

Entertainment Method of the Aroma diffuser

Operation Time


<p>■ The max continuous working time is 3 hours.</p> <p>※ According to the ambient conditions and the residual water, the output volume of the mist is changing.</p> <p>※ Due to the water temperature and the water quality change, turn on the power supply, the mist volume is reduced immediately, a few minutes later, the output volume of the mist is stable.</p> <p>When you want to start the operation.</p>	<p>※ In case of turning off the mist power supply with hand, the LED light power supply will not turn off. <u>Please do not forget this point.</u> If you want to turn off the LED light, press down the light switch and turn off the power supply. But if you turn off the power supply with long time pressing down the mist switch, LED light is turned off simultaneously.</p>
<p>■ Press down the mist switch.</p> <p>■ Please shift it with the order of 180 minutes, 120 minutes, 60 minutes, 30 minutes, OFF.</p> <p>When you want to stop the operation.</p>	<p>Other Functions</p>
<p>■ Continuously press down the mist switch over 1 second till it turns to OFF.</p> <p>Set timing mode method</p>	<p>■ If water is not put into, the mist function can not work.</p>
<p>■ The product will stop automatically after the operation reaches to the set time.</p> <p>■ There are four shifts of timing, 180 minutes, 120 minutes, 60 minutes, 30 minutes.</p>	<p>Under this condition, if you press down the mist switch, the electric announcer will sound three times as bee, bee, bee, to alarm the water is empty. (water empty alarm function)</p> <p>■ During operation, if the water is out of supply, the electric announcer will sound three times as bee, bee, bee, then it will stop automatically.</p>
<p>About Lighting (LED light)</p>	<p>Proximate Electricity Consumption</p>
<p>■ It is only used for indirect lighting.</p> <p>■ There are four colors with two light degree levels available.</p> <p>Every press of light switch, the LED light color and lightness can be adjusted between High white, Low white, High red, Low red, High green, Low green, High blue, Low blue and OFF.</p> <p>※ When the light is used with mist together, as soon as the timing operation stops, the LED turns off.</p> <p>※ When the mist switch is pressed down under the condition of no water and with the LED light on, the electric announcer will sounds three times as bee, bee, bee, then the LED light will turn off.</p>	<p>■ About 10W</p>

Operating Method ※ Please refer to P.13 for "Name of Each Parts".
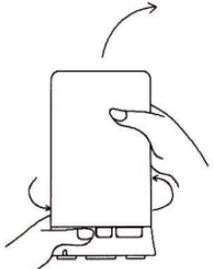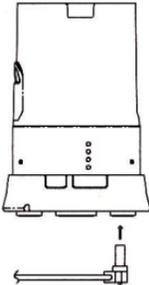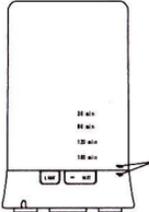
<p>① Viewing from the cover of the product main body, turn it with the direction of counter clock wise to take off the product.</p>  <p>⚠ If you close or open the main body of the product with water in, please do not tilt product.</p>	<p>② Please connect attached AC adapter to the base of DC jack of the main body via cable guide. AC adapter cable should be installed on a stable and flat place.</p> 
<p>③ You must use the measuring cup to supply water from the water pipe.</p> <p>④ Please take care, do not spoil water out of the cup and fill water into the water tank with measuring cup. Pay attention to the filled water level, do not exceed the max line on the water tank.</p> <p>※ Water with high temperature and the mist may fly out, Please never fill in water during operating.</p> <p>⑤ Drop essential oil into water tank vertically. The dosage is about 2-3 drops (about 0.2-0.3ml) per 100ml water.</p> <p>⑥ Connect the AC adaptor with family use power supply socket.</p>	<p>⑦ Install the cover of the main body with the original channel. After covered the cap of the main body, viewing from the top, turn it with the direction of clockwise to fasten it until the circular mark on the cap of the main body aligned with the circular mark on base.</p> <p>⚠ The main body that was filled with water absolutely can not be tilted. If the internal water is spilt out of the air outlet and enters into the mechanic part of the product, it may cause fault.</p>  <p>Aligned</p>

⑧ If you press down the mist switch on main body of the product, mist function is on. You can set up the timer, each time you press down this button, the timer will be changed between 180 minutes, 120 minutes, 60 minutes, 30 minutes and off.


At any position, if you press down the mist switch for a long time over 1 second, the electric announcer sounds bee and then stop working.

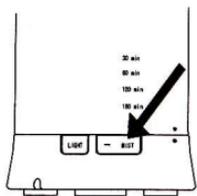

※ When the power supply is connected, the original state is OFF.

※ If there is few water in the water tank, the power supply will turn off immediately even with power connected.

※ If the timing mode is off, LED light will be off at the same time.

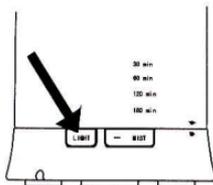

⑨ If you press down the light switch on main body, you can chose ON/OFF state of the LED light. If you press down this button for each time, the light color and lightness will be changed between High white, Low white, High red, Low red, High green, Low green, High blue, Low blue and OFF.

⑩ If you do not use it for a long time, please drain out the water from thank water, dry and then save it.

If you want to use it again, use the neutral detergent to clean the inside of the water tank again, then you can use it.

(for the maintenance method, please refer to P.12)

Attentions and Notes in Operation ※ Please refer to P.13 for "Name of Parts".

⚠ If the attentions and notes had not been followed properly and resulted in defaults or damages, they are not included in warranty range and free repair. Please pay attention to the notes.

-About the Operation Method of the Main Body-

● Please note, the volume of the water supply can not exceed 100ml (the max line of the water tank). If water exceed this line, the mist can not be produced properly.	● Do not use it under the following places. It may cause fault, error action or damages to the surroundings. ☆ where the mist may directly contact with furniture, clothes, curtain, wall, books, paper and ceilings.
● If there is no water filled into the water tank, please never switch on the power supply. It may damage the ultrasonic wave vibration board and cause fault or water leakage etc.	☆ where directly accept the sunshine, high temperature due to heating system, closing to fire or where directly blow with the air coming from the air conditioner.
● Please do not touch the internal ultrasonic wave vibration board inside of the water tank directly with your hands.	☆ on top of carpet or cloth cushion, tilting places, other unstable places, high sites etc.
● Please clean the inside of the water tank with soft cloth regularly. If the ultrasonic wave board was polluted, it may cause error action or default. The regular clean time is after every 5-6 times operation or after 2-3 days.	☆ near to the electric products or precise instruments.
● As for maintenance, you must plug off the AC adaptor from the socket and maintenance will be performed only if the power supply is off.	● The main body of the product filled with water can not be tilted. If water entered into inside of the product main body from the air outlet, it may cause fault.
● When it is possible to freeze, please drain out of the water from tank. If water was freezed inside of the water tank, it may cause fault and damage.	● Please do not arrange it on soft cushion and or long bushy carpet. If the air inlet at the base was blocked, it may cause abnormal movement or fault.
● After operation, you must drain out the water. If water remained in water tank, there is risk that the germs may grow there.	● Please do not arrange it on unstable place or uneven places. If the product fell down, inside water may be spilt out.

<p>●The essential oil can not touch the outside of the main body directly. It may cause fault or melt away the out painting.</p>	<p>●If the humidity is too high, mist will drop down in front of the mist outlet and the dew may come out. In that case, put a towel in front of the mist outlet as solution.</p>
<p>●In case of water re-filling, the cap of the main body must be taken off, please fill in water with attached measuring cup. Please do not fill in water from the blowing outlet or water faucet directly. It may cause fault.</p>	<p>●As the water drops may reach inside of the main body cover, when you take off the cover, please choose a proper site for the wet cover and prepare a towel to wipe off the water drops. ●In case of drainage, drain water with the air outlet facing upward. If water entered into inside of the main body from air outlet, it may cause fault.</p>



<p>● Please avoid to use the product continuously for a long time. At least, after operation of 180 minutes, switch off it more than 60 minutes. If you heat up the ultrasonic wave vibration board, it may cause fault.</p> <p>●Please use fresh water from the water pipe. Do not use the well water, mineral water, Alkali ion water. It may cause fault.</p> <p>●If you do not use it for a long time, please maintenance with the order written on the page of "Maintenance Method", dry off the product and store it.</p> <p>●When you have not use it for a short time, before you use it again, please maintenance it with the procedure written on the page of "Maintenance Method" .</p> <p>●Due to the effect of water temperature, water quality and other conditions, as soon as switch on, the mist may be produced with less volume, but a few minutes later, the mist comes out with stable volume.</p> <p>●Due to the effect of air temperature and air flow of humidity, sometimes the mist is not visible completely but it is not a trouble.</p>	<p>● The product applied the principle of ultrasonic humidifier as a aroma diffuser (diffusing aroma). It is not used as a humidifier to increase humidity, please understand this point.</p> <p>-About the application of essential oil-</p> <p>●Please use essential oil (refined oil) which ingredient was 100% extracted from natural plant for this product. Because the aroma oil may contain synthetic perfume or oil containing impurities, solid materials that may cause fault, please do not use them. As for the essential oil application, please read attention and notes about it.</p> <p>●Please take 2-3 drops (about 0.2-0.3ml) essential oil for full water (100ml) for use. Fill sufficient or too much essential oil under the conditions of water unfilled or lack of water, it may cause the ultrasonic board contact with oil directly and result in fault and defective movement.</p> <p>●If the previous essential oil category was changed but you can still smell the residual perfume, please clean the water tank with the procedure stated on the page of "Maintenance Method".</p>
--	---

In the event of water spilt, the solution is as follows.


If the water tank is full of water and the product main body is turned over or tilted by mistake, the water may spilt out. If you keep the product as the way afore mentioned, the water will stay inside of the main body and cause trouble.

Immediately plug off the AC adaptor from the socket and take it away from the main body of the product, adopt the following procedures to drain out of water from inside.

- ① Take off the cap of the main body
- ② Drain water out of the water tank from the water drainage side.

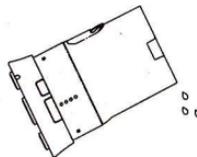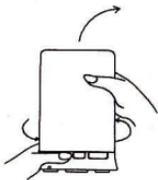

- ③ Lightly shake the main body of the product from left to right, drain out the water from the water outlet on the base and dry off the main body.

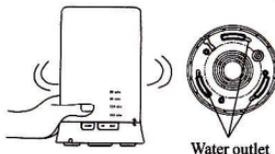

※ The product should be dried very well above 24 hours before you use it again.

Maintenance Method

● In order to assure the products can be safely operated, it's necessary to maintenance it regularly. Generally maintenance one time after every 5-6 times operation or 2-3 days. Please maintenance this products according to following procedures.

- ① Plug off AC adaptor from the socket and take off the cap on main body.




⚠ When you open the cap of the main body, it must be performed on a stable and flat site. Please do not tilt the main body.

- ① When there is some water remained in water tank, please tilt the main body toward drainage side to drain out inside water.

※ As there is the risk of water entering into inside, it is forbidden to drain out water from the air outlet side.

Air outlet

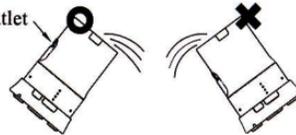

- ② Take off the AC adaptor from the main body.

- ③ Wipe with the wring out cloth that was soaked in warm water in which the kitchen synthetic detergent was diluted. In case of maintenance of the ultrasonic board base of the water tank, please use the cotton swabs. Clean it with cloth or cotton swab as the way cleaning the cap of main body.

※ Please do not touch the ultrasonic board at the center of the water tank base and do not put on too much power.



Ultrasonic board

- ④ After maintenance, re - fill pipe water into water tank, operating 30 minutes by timing, drain out water, wipe away water drops and dry it.

- ⑤ When the essential oil was attached on the outside of the water tank or the cap of main body, please wipe away it with the wring out cloth that was soaked in warm water in which the kitchen synthetic detergent was diluted.

- ⑥ If you felt that it was contaminated around the mist outlet opening, please take off the internal cap and maintenance it.

(the method of installing the internal cap)



Mist outlet

 

Set the extruding point of the internal cap into mist outlet opening.

Hold here, push it slightly till A and B are locked together with a sound of "click".


※ On occasion of maintenance, please do not use chemicals such as benzene thinner alcohol. It may have risk of damaging the product and wiping away the indication scales.

※ You must use neutral detergent. If hydrochloric detergent, acidity and enzyme detergent remained inside, there is risk of producing poisonous gas.




Name of all Parts

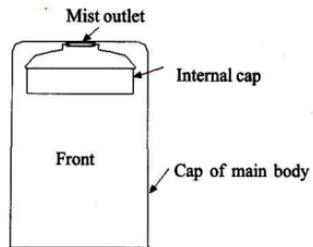

Measuring cup
for water filling

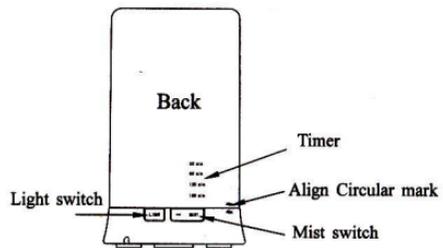

View the inside from top
 Ultrasonic vibration board
 ※ The center of the water tank base
 Water tank
 Main body
 (base) air inlet
 (the air blow fan is installed internally)

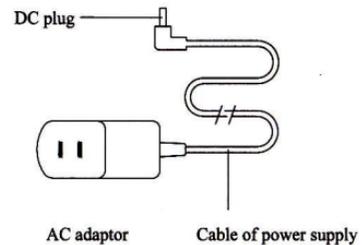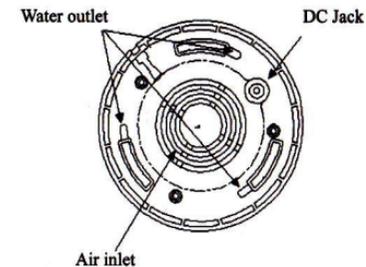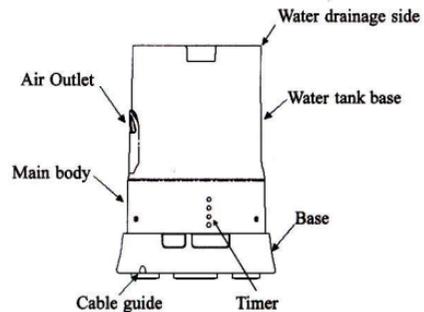

※ There may be difference between the illustration and the real product.

When you feel that it may be a problem.

If you felt there may be a problem, please confirm following points before asking for repairing from us.

<p>The power supply can not be switched on. It will turn off automatically as soon as the power switched on.</p>	<ul style="list-style-type: none"> ■ Was the tank full with water? Or the water is sufficient or not? → Please fill water into the water tank. ■ Was the AC adapter connected properly? → Please confirm the connection between the product and socket. With the view to confirm it, plug off the DC plug from the main body and connect it to main body again and then re-operate.
<p>Mist can not be produced. Mist can not be produced properly.</p>	<ul style="list-style-type: none"> ■ Was the water in water tank decreased? → Please supply water into the water tank. ■ Had the water tank filled too much water? → If water in the tank exceeded max water (100ml) and the mist can not be produced properly. ■ Was the ultrasonic vibration board polluted? → Please clean inside of the water tank and ultrasonic vibration board. (please refer to the page of "Maintenance Method") ■ Was the cap of the main body or internal cap installed properly? → Please close the cap of the main body and internal cap properly. If the cap of the main body and internal cap are not in right position, it can not guide the produced mist right into the outlet opening. ■ Was the air inlet opening on the base polluted? → If the air inlet opening on the base is blocked by dust, it will reduce air flow volume and result in mist can not come out properly. ※Due to air temperature, humidity and the surrounding conditions, sometimes the mist is invisible but actually it's still producing properly from inside of the water tank and the air delivering fan is still working. (The motor sound can still be heard), so it is not fault.
<p>The water is leaking from the main body.</p>	<ul style="list-style-type: none"> ■ Was the cap of the main body installed properly? Was the internal cap out of position or dropped off? → Please set the cap of the main body and the internal cap properly. If the cap of the main body and the internal cap are not in right position, the produced mist

	<p>can not be guided into mist outlet opening and form into dew.</p> <ul style="list-style-type: none"> ■ Was the temperature too high or too low? → If the temperature is too low or the humidity is too high, it may cause the mist comes into dew.
<p>About the solution of repairing and parts</p>	
<p>-About LED light-</p> <ul style="list-style-type: none"> ● It is better to use the LED light with longer service life. In case of the the light can not be lit due to the worn of the other parts of the product, we are not responsible for this kind of exchange or parts solution. Please understand. ※ As for the other repairing, please check it on Page 17 of "About after service". 	<p>-About the solution to parts-</p> <ul style="list-style-type: none"> ● AC adaptor Parts solution is available. When you bought the product, please contact with the Shop for qualified products.

About after service

If you find out some troubles in use or you feel something is unusual, please contact with the shop for qualified products. According to different "trouble state", sometimes it was not real fault, please read this operation manual carefully before take the product back to the shop. Thank you.

In addition, the purchase date was written in the note column as certificate, if there is no shop stamp or receipt, you should pay for repairing. About other warranty, please read the contents in warranty certificate carefully.

This book will not be issued again, please keep it with care to avoid losing.

Ultrasonic Aroma Diffuser JX-LM001 Warranty Certificate <u>Bring for Repairing</u>							
Warranty Time (One Year after the Date of Buying)	Date	Month	Year	Date	Month	Year	
Name	Address		☎ ()				
Stamp of the Shop			Repairing Memo				
<p>Hereby we declare that the product has been checked and qualified.</p> <p>According to this manual, if there is natural fault occurred during normal operation, the product will be guaranteed for one year free.</p> <p>Although the product will be repaired free according to rules in this book, we do not intend to limit the legal right of the customer.</p> <p>As for repairing after warranty period, please contact with the shop you bought from.</p> <p>If you moved to other place for living or got the product as a present then you should contact with the customer service center since the shop no longer take the responsibility any more.</p> <p>The personal information (name and address etc.) written in the warranty certificate should be confirm correct and valid. That should be used for the corresponding warranty solution. Please understand.</p>			<p>If the product was broken down during warranty period, please bring this book with warranty certificate page, product main body and accessories all together to the shop where you bought from for free repairing. But if there is following cases, we cannot free repair it even in the warranty period.</p> <ol style="list-style-type: none"> 1. The trouble occurred one year later after the date of buying. 2. There is no presentation of the book, any shop stamp or receipt to indicate the buying date either. 3. There are signs that the date, words or numbers were changed on purpose. 4. There are fault caused by fire, earthquake, storm and flood, damage, salt erosion, public disaster, war or other disasters. 5. There are fault caused by falling down, using in water, misusing or using in abuse. 6. Hurt, contaminated or fault occurred on appearance. 				

<p>all of the customer's personal information can not be disclosed, lent or showed to third party without the consent of the customer except special cases. But it does not including the cases that required by legal institutions or in order to protect the rights and property of our company etc.</p>	<ol style="list-style-type: none"> 7. The fault caused by disassembly, remodeling, error repairing. 8. Regarding to the wear parts, such as LED and other accessories except the main body of the product. 9. The fault caused by using for other purpose rather than family use. 10. The fault caused by using the other material other than water and essential oil (refined oil).
--	--