 


USER MAUAL

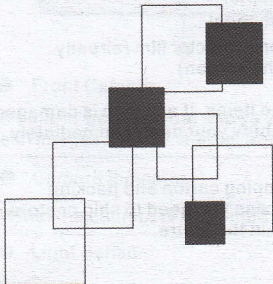

Getting the Tablet PC Running

This section guides you through the procedures for getting the Tablet PC ready for operation.

Unpacking

After unpacking the shipping carton, you should find these standard items:

 
- **Tablet PC**
- **Accessories:**
 - 1x AC adapter
 - 1x User manual
 - 1x Screen protector film (already attached to the screen)

Inspect all the items. If any item is damaged or missing, notify your dealer immediately.

Keep the shipping carton and packing materials in case you need to ship or store the tablet PC in the future.

View your Tablet PC

Front

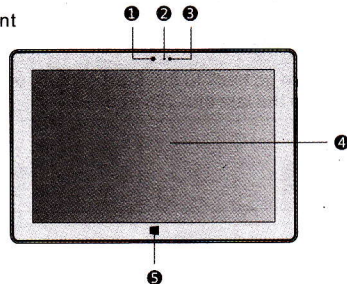

① Front Camera

A built-in webcam that allows you to capture still images, record videos, and chat online.

② Camera indicator

When the camera is on, it lights up.

③ Light Sensor

With its innovative brightness control technology, Tablet adjusts contents on the screen automatically by continually monitoring your environment for battery saving.

 
④ Multi-Touch Screen

Use finger to control system & application.

⑤ Windows 8 touch Key

Press to go back to the Start screen, or go back to the last app you opened.

Rear

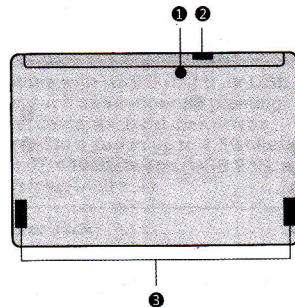

① Back Camera

You can take photos and recording videos.

 
② 3G SIM card slot

Insert a 3G SIM card(can't support PnP), then you can connect to 3G network.(For more information, please contact local Telecom Operators.)

③ Speaker

Produces sounds from multimedia files or the operating system.

Side

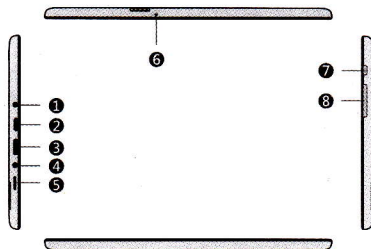

① Audio jack(integrated MIC)

Connects 3.5mm earphone to play audio or chat online.

② Mini HDMI

With a Mini HDMI to HDMI cable(Not included) connects an optional to video and audio devices, such as television, or any compatible digital or audio component that uses a HDMI connection.

③ Micro USB 3.0 port

With a Micro USB 3.0 cable(not include), The USB (Universal Serial Bus) port is compatible with USB 3.0, 2.0, or USB 1.1 devices such as keyboards, pointing devices, cameras, hard disk drives, connected in a series up to 4.8Gbits/sec (USB 3.0), 480Mbits/sec (USB 2.0), and 12Mbits/sec(USB 1.1).

④ Power Jack

Connects AC power supply to power the device and charge the battery.

⑤ Micro SD card slot

Insert a Micro SD memory card to further expand the capabilities of your tablet PC, you can exchange data material with Tablet PC.

⑥ Microphone

Receives sounds and voices for recording.

⑦ Power Button(with Battery charge indicator)

Press to power on / off your Tablet PC, or put it to sleep or hibernate and wake it up from sleep or hibernate mode.

8 Volume Key

To adjust the system volume (+Volume increase/-Volume decrease.)

▲ Reset system: When system abnormal, press the - volume and the power button simultaneously for 4s to restart system.

Battery charge indicator

This two-color LED provides a visual indication of the battery's charge status.

Refer to the table below for details:


Color	Status
Blue	Fully charged.
Red	Charging mode.
Blue	The AC adapter is not plugged to the Tablet PC.

▲ Note: You need to charge your Tablet PC every three months, Otherwise battery life will be adversely affected.

Charging your Tablet PC


1. Assembling the power adapter

 Slide the plug fitting into the power adapter body until it clicks into place.

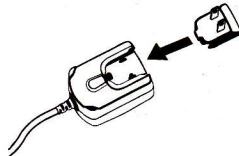

2. Connecting power

 Connect the DC-in jack to your tablet and plug the AC adapter into any AC outlet.

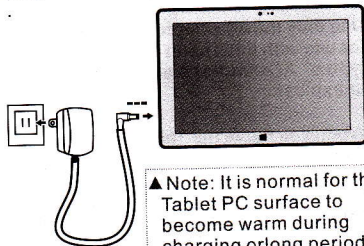

▲ Note: It is normal for the Tablet PC surface to become warm during charging or long periods of use.

Safety Instructions

Use the following safety guidelines to help protect yourself and Tablet PC.

- Do not attempt to service the Tablet PC yourself. Always follow installation instructions closely.
- Be sure that nothing rests on the AC adapter's power cable and that the cable is not located where it can be tripped over or stepped on.
- Do not cover the AC adaptor with papers or other items that will reduce cooling; also, do not use the AC adapter while it is inside a carrying case.
- Use only the AC adapter that are approved for use with this Tablet PC. Use of another type of AC adapter may cause risk of fire or explosion.
- When you move the Tablet PC between environments with very different temperature and/or humidity ranges, condensation may form on or within the Tablet PC. To avoid damaging the Tablet PC; allow sufficient time for the moisture to evaporate before using the Tablet PC.

- When you pull out the connector, keep it evenly aligned to avoid bending any connector pins.

CE Mark Warning



CE marking for devices without wireless

LAN/Bluetooth

The shipped version of this device complies with the requirements of the EEC directives 2004/108/EC "Electromagnetic compatibility" and 2006/95/EC "Low voltage directive".

RF Exposure Information (SAR) - CE

This device meets the EU requirements (1999/519/EC) on the limitation of exposure of the general public to electromagnetic fields by way of health protection.

The limits are part of extensive recommendations for the protection of the general public. These recommendations have been developed and checked by independent scientific organizations through regular and thorough evaluations of scientific studies. The unit of measurement for the European Council's recommended limit for mobile devices is the "Specific Absorption Rate" (SAR), and the SAR limit is 2.0 W/Kg averaged over 10 gram of body tissue. It meets the requirements of the International Commission on Non-Ionizing Radiation Protection (ICNIRP).


For next-to-body operation, this device has been tested and meets the ICNRP exposure guidelines and the European Standard EN 62311 and EN 62209-2. SAR is measured with the device directly contacted to the body while transmitting at the highest certified output power level in all frequency bands of the mobile device.


Power Safety Requirement


Products with electrical current ratings up to 6A and weighing more than 3Kg must use approved power cords greater than or equal to: H05VV-F, 3G, 0.75mm² or H05VV-F, 2G, 0.75mm².


Proper disposal

⚠ Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

 **DO NOT** throw the battery in municipal waste. The symbol of the crossed out wheeled bin indicates that the battery should not be placed in municipal waste.

 **DO NOT** throw the Tablet PC in municipal waste. This product has been designed to enable proper reuse of parts and recycling. The symbol of the crossed out wheeled bin indicates that the product (electrical, electronic equipment and mercury-containing button cell battery) should not be placed in municipal waste. Check local regulations for disposal of electronic products.

 **DO NOT** throw the Tablet PC in fire. **DO NOT** short circuit the contacts.

 **DO NOT** disassemble the Tablet PC.

Disclaimer

Our corporation shall not be liable for technical or editorial errors or omissions contained herein; nor for incidental or consequential damages resulting from furnishing this material, or the performance or use of this product. In the interest of continuing product improvement, our corporation reserves the right to change product specifications without notice. Information in this document may change without notice. No part of this document may be copied, reproduced, or transmitted by any means, for any purpose without prior written permission from our corporation.

Some content and services accessible through this device belong to third parties and are protected by copyright, patent, trademark and/or other intellectual property laws. Such content and services are provided solely for your personal non-commercial use. You may not use any content or services in a manner that has not been authorised by the content owner or service provider. Without limiting the foregoing, unless expressly authorised by the applicable content owner or service provider, you may not modify, copy, republish, upload, post, transmit, translate, sell, create derivative works, exploit, or distribute in any manner or medium any content or services displayed through this device.