

Dual Core Cortex A9 Andriod4.1 Mini PC Manual

Declaration

●The user manual includes all the information of safe and correct operation instruction. To avoid accident and product damaged, please make sure go through all the content carefully before using the product.

●Please keep the product away from high temperature, humid and dusty environment.

●Do not drop or crash the product.

●Do not cut off the device when it is formatting or upgrading. Otherwise it will cause operation system error.

●Do not dismantle the device. Do not clean it by alcohol, thinner and Benzene

 
*We keep the right to upgrade and modify the product.

*Disclaimer: We only take the responsibility to provide the product warranty and after service. The users have to take care their data in the device by themselves. We do not responsible for any data lost or related lost.

*The product is not water-proof.

*All the pictures in the instruction are just for reference.

A.Appearance Introduction

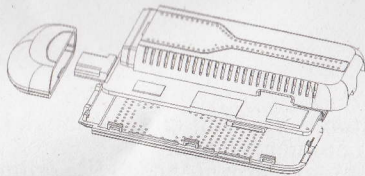

●AV out:HDMI

●TF-CARE: Could be expended by T-Flash memory.

●Micro USB OTG: For power.

●USB HOST: For pen drive, mouse, keyboard, External HDD, could be expended by USB Hub.

B. Initial operation

1.Hardware connection instruction.

●Connect the TV set or LCD monitor. Set up the TV data receive mode to HDMI port. (Refer to TV set user manual)

●Suggest to use 2.4G wireless mouse and keyboard. Plug 2.4G receiver on USB Host connector. If only mouse plugged, the device will provide soft keyboard in operation system. If the device detected the physical keyboard, the soft keyboard will be hide by OS automatically.

●Mouse left button for "ok", right button for "return", rolling for page up and down. Hold left button to pull icon or copy & paste file. Hold middle button for Properties

2.OS interface

Connect power supply and devices, the booting information will show up within 1min.



3.Management software



Click the



4. Return, Homepage,



Return button: click to return to the upper level directory.

Homepage button: click it anytime to return to homepage.


Program button: click to check all the running program.

5. Status bar



Click status bar, the hide menu will bound up.




Click this icon , it will shows up more options.




C. Setting, Open



 It is in Tool bar. Click to show it up.

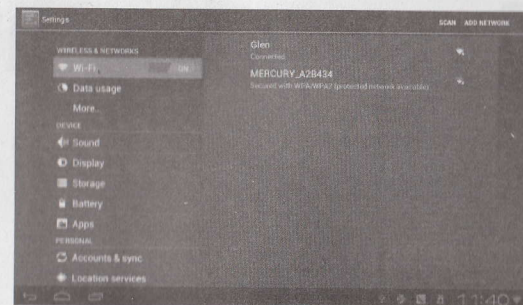


 1.WIFI Setting

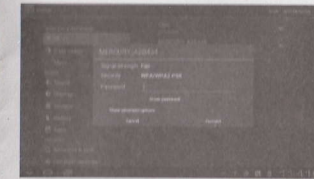


2.Bluetooth.

 
click "setting" -> click "bluetooth" confirm is ON

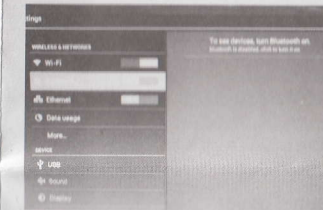

 Click the Device Bluetooth is Visible ro all Bluetooth devices

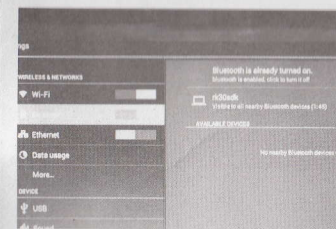

 
Then let other Bluetooth device is Open also, then pair it, then is ok.

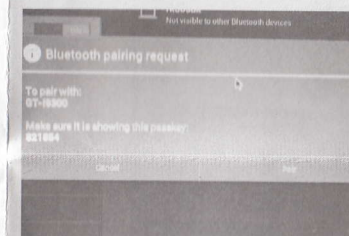


B. Install/delete program



 Click it ,then can manager the APPS

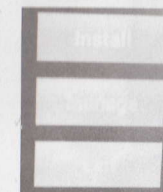

 If click manage , then can choose one program and delete it

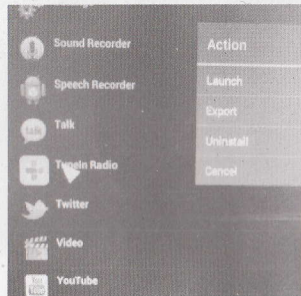

Install program

Please click install to find downloaded software package. Then Click to install.

E.Picture, Video, Filing management, Webpage

1. How to see the picture , home screen>"galler



2. How to play media player,home screen>"vide

 


3. Music Player,home screen> "Music"



4. Visit the website

Please set up Wifi to access to internet. Click any browser at home screen bottom

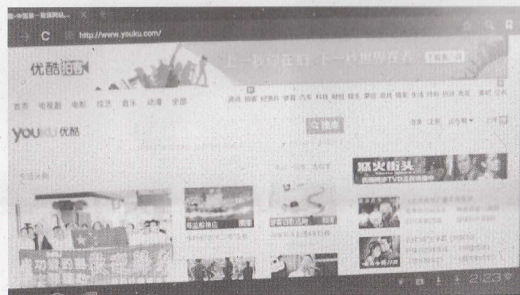


5. watch film online



E.Language and Input

1. Select language and usual input method

 
The devices is including 54 different language. Please Click "setting"
->"Language and input"

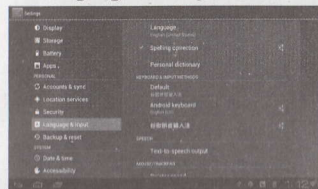

Different area users please select the suitable input software according. And make some setting under this item.

2.Keyboard and Mouse

 
Device will show up the soft keyboard if it is only connected with mouse. And the soft keyboard will be hide once the hardware keyboard is detected by the device.

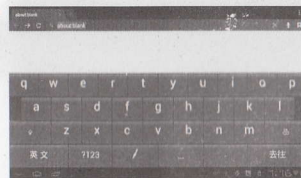


H. E-HOMEMEDIACENTER

First confirm other laptop or dest pc use same wifi router with the android mini pc.,and open.

 Example for windows7 laptop to show:open the windows media player

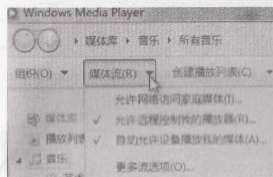

 
Click share your music,picture and video file, then on android mini pc homemedia player can find this pc,see follow:

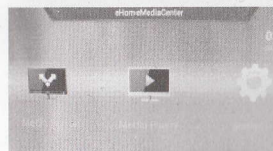

click media player



 
If your pc share,then can find your pc,and click your pc.

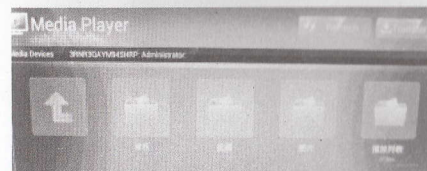

Then you can player your pc file,



 I. other setting: In apps, Fancy Widgets

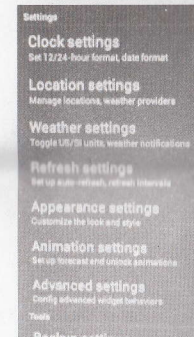

J. Question& Answer

Screen flicker or unstable working: please check if the HDMI cable has been connected tightly.

Can not start device: please download OS file from official website to refresh the device OS. Make sure all the important data has been backup before process it. If the issue still can not be solved, please contact the distributor which you bought from.

Keep restarting system automatically: Please check if the device get enough power supply (best is 5V, 1A).

Sometimes, external HDD cause power shortage. Please plug additional power supply for external HDD or other external devices.

Can not find file in SD card or pen drive: Please check all the connection of the device.