

Fashionable fish tank, multifunction calendar with thermometer

Function:

★ Multifunction calendar:

- Date (year, month, day), Current Time, Day, Temperature display
- Alarm and snoozing
- Nature sounds and color backlight(blue/green)

★ Fashion fish tank:

- Running water
- Underwater colorful light
- LED lamp

Instruction for the LCD Calendar

Five buttons: [MODE] , [SET], [UP] , [DOWN], [SOUND].

Normal Time mode

Once, 3 "AA" batteries put in, AM12:00 is displayed in 12 hours format.

Time setting

Press [SET] to set up Date/Time with the sequence as follows:
{Hour}→{Minute}→{Year}→{Month}→{Date}→{Exit} and press [UP] button and [DOWN] button to adjust the setting.

Displaying range: year from 2000 to 2099, month from 1-12, date from 1-31, hour from 1 to 12 or 0 to 23, minute is 0-59.

The day will change automatically from Monday to Sunday according to the date.

12/24 hours format

Press [UP] to convert to and from 12 and 24 hour format.

Alarm and snoozing mode

Press [MODE] to enter alarm setting mode

A. alarm setting

1. Under alarm setting mode, press [SET] to set the alarm, with the sequence as follows:
{Hour}→{Minute}→{Snoozing }→{Music}→{Exit}
2. Under alarm setting mode, press [MODE] button or non-pressing for 1 minute to return the normal time display.
3. Under alarm setting mode, press [UP] or [DOWN] button to turn alarm and snoozing ON or OFF,

when the alarm is on, a "⌚" symbol is displayed. When the snooze is on, a "⌚" & SNOOZE" symbol is displayed.

4. Press any button, except [SET], to stop the alarm for about 2 minutes, after this period, the alarm will ring again automatically, the snooze function will repeat 2 times (2 minutes each time). Press [SET] button to cancel the alarm.

5. The scope of interval and duration of snooze time is :1-60 minutes. You can choose the nature sound one by one after day setting in alarm setting mode.

Temperature mode

Display the current environment temperature.

Press [DOWN] to convert to and from °C and °F .

Nature sounds

Press [SOUND] to turn on the nature sound with the sequence as following: 1.sounds of running water and animal, 2. sound of forest, 3.sound of running water ,4.sounds of running water and birdcall,5.sounds of seagull and sea wave, 6.repeat of above 5 sounds

Backlight

Press [SOUND] to turn on the nature sound and backlight, it will light up for 20 seconds and then off. Press any other button, it light up for 5 seconds and then off.

Instruction of fish tank

1. When using the fish tank, please filled water in place, no higher than Max line and no lower than Min line.
2. When power on, use [MOTOR] to switch the running water and light on and off. When it is on, the water runs and light at the bottom of fish tank is on. When it is off, water stop running out from the faucet tap and color light is off.
3. Adjust the LED lamp on the suitable place. Use [LIGHT] to switch on and off the LED lamp.
4. When renewing the water: turn the LED lamp above the penholder, then pour water out slowly from one corner far way from the faucet tap, then add water in place. Remember to turn off the water pump.
5. When cleaning the fish tank: turn the LED lamp above the penholder first, pour out the water, and then remove the water pipe and the bottom housing. After finished cleaning, put back the housing to the bottom, connect the water pipe well, and then add water. Remember to turn off the water pump when clean the fish tank.
6. Power source of the fish tank: USB/DC5.0V. Plug in : mini USB

Notes

1. Use 3 "AA" batteries for the calendar, use DC5.0V for fish tank.
2. Please change new batteries when LCD display unclearly or volume is low
3. Please prevent it from strong colliding, shaking, moisture and insulation.
4. Please put batteries out if not use for a long time
5. Please re-install batteries ,if disorder or no display.