

## Manual

Thank you for purchasing this phone. The phone Android-based high-tech and high standards to provide you with high quality mobile communication and entertainment.

This manual is designed to guide you understand the functions and features of the phone.

### Please read the documentation

Before using your phone, please carefully read all safety precautions and this manual to ensure safe and proper use.

Described in this manual is based on the phone's default settings.

Images and screen shots used in this manual may be different from the actual product appearance.

Contents of this manual may be associated with the product may also be different from the software provided with the service provider or the service provider. Subject to change without notice.

Available features and additional services may vary due to mobile phones, software, or service provider.

The format and information of this manual is based on the Google Android operating system, the user's operating system may differ with.

Application and its features may vary by country, region, or hardware specifications. Performance issues caused by third-party applications. Takes no responsibility.

Performance problems caused by the user to edit the registry settings or takes no responsibility for incompatibility issues.

Send and receive information, upload and download, automatic synchronization or the use of location-based services may have other costs. If you want to avoid additional costs, select appropriate data charging scheme. For more information, please contact your service provider.

Please keep this manual for future reference.

Indicator

Please familiar with the icons used in this manual before you start using:

⚠ Warning - may hurt themselves or others.

⚠ CAUTION - phone or other equipment may be damaged.

📖 Note - notes, usage tips, or other information.

Installation

Accessories Introduction

Check the product box for the following items:

Phone

The battery

Travel charger (charger)

Use Instructions

⚠ Only use approved software. Pirated or illegal software may cause damage or malfunction manufacturer is no warranty.

📖 The items supplied with the phone may be different, depending on the software and accessories in your area can be used or provided by the ISP.

You can buy other accessories to the local dealer.

Accessories can provide the best support for mobile phones.

Other than accessories. Accessories may be not compatible with your phone.

### Install the SIM or USIM card and battery

 
When you order a mobile phone service, will receive a Subscriber Identity Module (SIM) card, which contains detailed information of your order, such as a personal identification number (PIN) and optional services. If you

wish to use UMTS or HSDPA services, you can purchase a Universal Subscriber Identity Module (USIM) card.

To install the SIM or USIM card and battery:


1 If the phone is switched on, long press [⏻], and then select Shut Down → OK to turn off the phone.

2 Remove the battery cover.

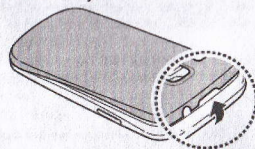


⚠ Remove the battery cover, careful not to hurt the nails.

 
3 SIM or USIM card inserted in the phone, its gold contacts facing down.

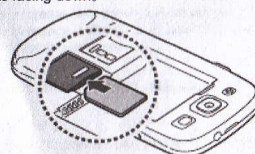

4 Insert the battery.

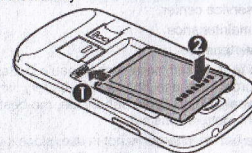 

5 Replace the battery cover.

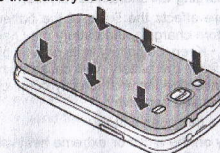 

### Battery charge

 
Before using your phone for the first time, you must charge the battery.

Only the use of the mobile phone charger and data cable. Failure to do so may cause the battery to explode or damage your machine.


⚠ The battery power is low, the phone will issue a warning tone and display a low battery information. The battery icon will appear blank. If the battery is too low, the phone will automatically shut down. Need to continue to charge the battery before using the phone.

### Travel Charger charging

1 Plug the small end of the travel charger into the multifunction jack

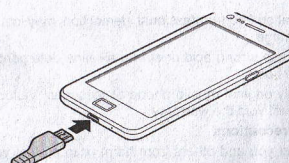

 ⚠ Travel Charger Improper connection may cause serious damage to the phone. Will not warranty any damage due to misuse.



2 The large end of the travel charger plugs into a standard electrical outlet.

📖 Can use your phone while it is charging, but it will extend the time the battery is fully charged.

When the phone is charging, the touch screen may be unstable due to power failure. In this case, disconnect the travel charger from the phone.

Phone become warm during charging. This is normal and will not affect the phone's lifespan or performance.

3 When the battery is fully charged (the battery icon is no longer moving), disconnect the travel charger connected to the phone, and then unplug it from the electrical outlet.

⚠ Do not remove the battery before removing the

travel charger. Doing so will damage the phone.



⚠ Wish to save power when the phone is not in use, unplug the travel charger.


Travel charger no power switch, so you must unplug it from the outlet travel charger to stop charging. Use the travel charger should remain close to the socket.

### Insert the memory card

 Wish to store more multimedia files, you must insert a memory card. Phone microSD, MicroSDHC. Storage card capacity up to 32 GB (depending on memory card manufacturer and type).

1 Remove the battery cover and battery.

2 memory card into the phone to the gold contacts facing down.

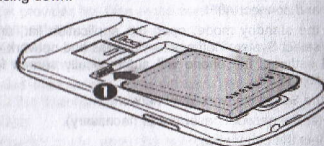

3. Memory card to promote the memory card slot until it locks into place.

4 Replace the battery and the battery cover.

Take out the memory card

Remove the memory card before you uninstall the memory card for safe remove.

1 In standby mode, open the application list, then select Settings → SD card and phone memory → Unmount SD card → OK.

2 Remove the battery cover and battery.

3 Push the card gently until it disengages from the phone.

4 Remove the memory card from the memory card slot

5 Replace the battery and the battery cover.



⚠ Do not remove the memory card when the phone is sending or access information, otherwise it may cause data loss or damage to the phone and memory card.

### Formatting a memory card

In standby mode, open the application list, and then select Settings → SD card & phone storage → Unmount SD card → Format SD card → Format SD card → OK → Delete all.



⚠ Before formatting the memory card, remember to back up all important data to your phone. The Manufacturer Warranty service does not include data loss due to user actions.

Getting Started Guide - startup and shutdown

To boot, long press [⏻],

 
For off, press and [⏻], And then select Shut Down - determine.

Please observe all posted warnings and instructions of the officials in the regional restrictions on the use of wireless devices (such as airplanes and hospitals).

Who wish to only use the phone's non-network services you can switch to flight mode. Long press [⏻], and then select the flight mode.

Getting to know your phone - Phone layout

# user manual

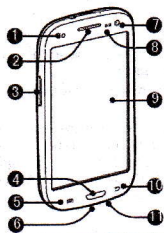

Digital	functions
1	Log
2	handset
3	volume
4	main
5	Options
6	multifunction
7	front
8	distance
9	touch
10	return
11	microphone

1 will only be activated only when using the speaker function or record a video. Microphone

8

	Is connected to the GPRS network
	EDGE network is connected to
	Connected to the 3G network
	Connected WIFI
	Activated Bluetooth function
	A call is
	Missed calls
	Connected to the computer
	No SIM or USIM card
	New information
	Roaming (in the outside service area)
	Activated mute mode

10

select System Settings → Profiles, select any mode except mute outside → ringtones, select a ringtone from the list, and then select OK.

Start switching window display animation

In standby mode, open the application list, select System Settings → Display → Animation → Some animations or All animations.

#### Select the idle screen wallpaper

In standby mode, press [ ] → Wallpaper

Adjust the brightness of the display

1 In standby mode, open the application list, and then select System Settings → Display → Brightness.

2 Clear automatically adjusts the brightness of the selection box next.

3 Drag the slider to adjust the brightness level.

Set screen lock

Select System Settings → Security, start the "Set up screen lock" feature can lock the touch screen. Each boot or unlock the touch screen, the phone will be asked to enter the unlock code.

1 Set unlock pattern

Note to watch the on-screen instructions and an example pattern and select continue → determine (by dragging your finger to connect at least four points, draw the pattern)

2 Set up SIM card lock

Start Set up SIM card lock, enter the password of the SIM card.

Use language and keyboard

 
Select System Settings → Language and keyboard

1 Select languages to choose English, Chinese (Traditional), Chinese (Simplified)

2 keyboard to select Sogou input method, Android keyboard and Google Pinyin input method.

3 input method selected in the editing interface is

12

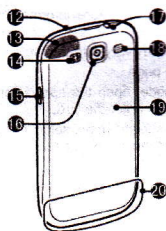

Digital	functions
12	microphone
13	GPS
14	Flash
15	Power
16	rear
17	headphone
18	Speaker
19	Battery
20	main

Indicator icon

Icon on the display may vary by region or service provider.

	No signal
	Signal strength

9

	Activated flight mode
	An error occurs, or the need to pay attention
	Battery charge

#### Application settings

Settings → Applications into the system has the following options:

Unknown source selected unknown source can install unknown applications.

2 management application can view the phone or SD card installed as well as downloading and running the program, you can visit the application process uninstall or remove data or to move to the SD card.

Click to stop 3 fortune line card applications.

4 Battery use to view the rate of mobile phone use.

5 develop specific circumstances.

Custom Phone

Set the current time and date

1 In standby mode, open the application list, and then select System Settings → Date and time.

2 to set the time and date and change other options.

Switch to silent mode

To activate or cancel the silent mode, perform one of the following actions:

Press and hold [1], then select silent mode.

2 Open the list of desktop applications → Settings → Profiles, select the Mute.

#### Change the ringtone

In standby mode, open the application list, and then

11

entered in this input method.

For applications downloaded from the web:

1 In standby mode, open the application list, and then select Internet.

2 search a file or application and download it.

To install the website to download applications from outside the Android Market, you must select the System Settings Settings → Applications → Unknown sources → determined.

Restore the factory settings, and important data backup

Enter the System Settings → Privacy → restore factory settings reset before backup data.

Backup and recovery

Backup and recovery into the application will display the backup list, click on the data before backup data recoverability.

Communicate

Call

Learn how to use call functions, such as make and receive calls and use the options available during a call, or with call-related functions to customize and use.

Make and receive calls.

Dial, answer, end or reject calls, you can use the buttons or touch screen.

When the open distance sensor, the phone will automatically turn off and lock the touch screen when the phone close to the face to prevent accidental input.

Body and clothing issued electrostatic call may interfere with the distance sensor.

Make a call

1 In standby mode, select the phone, enter the area code and phone number.

2 choose to make a voice call.

3 To end the call, select End call.

13

Answer the phone

A call comes in, drag it to the right.

2 To end the call, select End call.

#### Reject a call

When there is an incoming call, drag it to the left.

For reject a call, send a message, press [ ] to reject a call and send text messages.

First of all, it is set to be sent to the caller's information. In standby mode, open the application list, and then select System Settings → Call settings → Settings → set refused to back the information.

To make an international call

1 In the standby mode, select Phone → keyboard, then tap and hold 0 to insert the + sign.

2 Enter the complete number you want to dial (country code, area code and phone number), and then select call.

Using the headset

The headset into the phone, answer the phone and hang up the phone

In a voice call using the option

A the dial keyboard input digital function

Keep click call remains available for a conference call, click again to restore the previous layer call.

3 handsfree activate the loudspeaker.

4 contacts start contacts can call or send text messages.

5 Add call to start the dialing keypad to enter the number to dial.

Select such features as call, press [ ]

1 Bluetooth is turned on Bluetooth call.

2 start recording the call recording is turned.

Using call forwarding

Call forwarding is a network function, you can send an incoming call to the specified number.

14

1 In standby mode, open the application list, and then select System Settings → call voice calls Settings → → call forwarding.

2 Select a different situation.

3 Enter the call forwarding destination number and select Start.

#### Set Call Waiting

Call waiting is a network feature, when you are on the phone to remind a call is coming. This feature is only available for voice calls.

In standby mode, open the application list, and then select System Settings → Call settings → other settings → Call waiting.

View the call records

You can view the call records by type filtering.

1 In standby mode, select Phone → phone records.

2 Press All display missed phone, received calls, dialed calls. Click to show telephone calls, click on display missed calls, click the Show to answer the phone.

#### Information

Learn how to create and send text messages (SMS) or multimedia message (MMS), and view or manage the sending or receiving information.

#### Send SMS

1 In standby mode, select Messages → Create message

2 Add the recipient.

Manually enter the phone number, use a semicolon or a comma between multiple numbers.

Click on the right side of the villain icon to select a phone number from the list.

3 Enter the text wishes to insert a smiley, press [ ] → insert smiley face.

4 Select Send to send the message.

#### Send MMS

1 In standby mode, select Messages → Create message

2 Add the recipient.

Manually enter a phone number or e-mail address, use a semicolon or a comma between multiple numbers or addresses.

Select the phone number or e-mail address can be selected from the list.

Enter the e-mail address, phone information converted to MMS.

3 Press [ ] → Add subject, and then add the message subject.

4 Select Click to enter the information, and then enter the message text.

To insert a smiley, press [ ] → Insert smiley face.

5 Additional can select a file from the file list can also create a new photo, video or voice.

6 Select Send to send the information.

. View SMS or MMS

1 In standby mode, select information.

As messenger, the information will be grouped by contacts for information

2 Select a contact.

3 for multimedia information, select a message to view details.

#### Camera

Learn how to shoot and view photos and video. Can take a maximum resolution of 5 million pixels photo different, depending on the shooting scene or shooting conditions, storage capacity may vary.

. Taking pictures

1 In standby mode, open the application list, and then select the camera to turn on the camera.

2 Of the lens at the subject and make the necessary adjustments.

16

The camera interface custom settings from left to right as follows:

1 focal length can be adjusted 1X-6X.

2 flash mode can be turned on automatically flash or turn the flash on or off the flash has been.

3 white balance settings to balance the color.

4 GPS location setting GPS location on or off.

5 camera parameters can be set camera mode, high-speed continuous shooting, ISO sensitivity, self-timer, focus mode and other functions

6 framing parameters can set the focus mode, exposure value, viewfinder mode, the picture size and function

3 Click the camera button to take pictures.

The photo will be automatically saved, view photos click on the picture box on the right to view.

To view more photos, scroll left or right.

To send the photo to others, select Share.

To set the photo as wallpaper or a contact caller display images set to select more →

To delete a photo, select Delete.

#### Radio

Learn how to listen to music and news on the FM radio. To listen to the FM radio, you must connect the headset (the headset functions as the radio antenna).

A headset into the phone.

2 In standby mode, open the application list, and then select the radio.

First open the FM radio, the phone will start automatically FM.

Automatic FM only positioning radio signal is strong enough.

3 Click [→] search, search and save radio channels available.

4 click access to search the list of available stations.

Add to Favorites bar, the player interface click Add to

selected.

Set a new alarm

1 In standby mode, open the application list, and then select Clock → Alarm.

2 Select Create alarm or press [ ] has the following options:

Add the alarm clock: set the alarm time point "set" enabled alarm clock, point to repeat a specific day of the week to set the alarm clock, point "Ringtones" set alarm tone, point "vibrating alarm clock starts with vibration point" label " Add alarm prompt.

Time and date

In standby mode, open the application list, and then select the clock → Date and time.

Auto: The time will be provided by the network, the network provides the time make sure that open WIFI or data connection.

Format: 24-hour format is selected will be displayed, cancel the 12-hour format.

Canceled automatically after set time select time zone and set the time can be set.

Calculator

1 In standby mode, open the application list, and then select the "calculator".

2 Use the calculator displays the corresponding key, basic arithmetic.

Press [ ] to enter the "high-level panel" can open a scientific calculator.

#### Network

Network service requires a data connection. Contact service provider to select the best data plan.

Browser

Learn how to access your favorite pages and add it to your bookmarks.

If access to the network or to download media, may

18

have other costs. For more information, contact your service provider.

Available icons may vary with the region or ISP.

Navigate a web page

1 In standby mode, open the application list, and then select the browser enter the URL.

For access to a specific page, select the URL input field, enter the web address (URL), and then choose.

#### E-mail

Into the list of applications to open e-mail, enter your e-mail address and mailbox password, click Next to create the account name and the name, point to the completion of your mailbox to receive messages.

The inbox list [ ] following options:

1 Refresh Refresh your inbox.

Write write new messages.

3 folder to view the Inbox and Drafts.

4 account to view the current account, the length can delete the account by account.

5 account settings to set up your account name, signature, and receive messages frequency.

Delete, press [ ] to open an e-mail forwarding, reply, mark as unread.

Connectivity

#### The Bluetooth

Bluetooth is a short-range wireless communications technology, information can be exchanged within a distance of about 10 m, without the need to use a physical connection. Do not need to use Bluetooth to send information to the connected equipment line. Even if the equipment is located in a different room, as long as does not exceed the scope of Bluetooth receiver away from each other, they can exchange information.

1 In standby mode, open the application list, and then select System Settings → Wireless and network → Bluetooth settings.

19

15

17

2 Select Bluetooth Open Scan for devices.

Find the device and click pair connections, mutual transmission data after the connection is successful, if stereo headphones, stereo headphones available to answer the phone, listen to multimedia playback of sound files.

Some devices, especially the headset or car kit, may have a fixed Bluetooth PIN (0000). If you want to pair with a PIN code, you must enter the PIN code.

. WIFI

Learn how to use the phone's Wi-Fi function

Start WIFI function

In standby mode, open the application list, and then select System Settings → Wireless and network → WIFI settings.

Find and connect WIFI

1 In the standby mode, open the application list, and then select System Settings → Wireless and network → WIFI settings, the phone will automatically search for available WIFI.

2 In the Select Network WIFI network.

3 Enter the network password (if necessary).

4 Select the connection.

Troubleshooting

When you open or use the phone, the phone prompts you to enter one of the following codes:

Code	Try to use this method to solve the problem
Phone lock	If you start the phone lock feature, you must enter the password you set for the phone
PIN code	Use the phone for the first time or enable the mentioned PIN code provided with the SIM or USIM card, you must enter the

20

	PIN code. Use the Lock SIM card menu change function is disabled
PUK code	If the SIM or USIM card is blocked, usually due to enter the wrong PIN code several times. To unlock, you must enter the PUK code provided by the service provider
PIN2 code	When access need to enter PIN2 code menu, you must enter the PIN2 code provided with the SIM or USIM card

Phone displays network or service error message

When you are located in places with weak signals or poor reception, you may lose reception. Go elsewhere and try again.

If you do not make a reservation, some of the options can not be used. Please contact your service provider to find out more details.

Touch screen response is slow or incorrect

If the phone has a touch screen and touch screen response is incorrect, please try the following:

Remove the touch screen protective film. The protective film may prevent the phone recognition input, touch screen phones we do not recommend the use of protective foil.

Click on the touch screen to make sure that your fingers dry and clean.

Restart your phone to clear any temporary software bugs.

Make sure that the mobile phone software has been upgraded to the latest version.

21

If the touch screen by scraping or damage, turn it over to a local service center.

Care and maintenance

Battery Maintenance

• The phone is based on a rechargeable battery as a power source. . Please charge the battery when the power is weak. To preserve battery life, the best before charging the battery runs out.

• When the battery charger is not in use, place it with the power supply source separation. Do not connect the charger and the battery more than a week or more, excessive charging will shorten battery life.

• Temperature affects the limits of the battery can be charged. Before charging, the battery may need to cool or warm her. • Keep the battery in its original purpose, to avoid short-circuit the battery. Will cause a short circuit when the conductive material directly connected to the battery positive and negative.

• Do not use a damaged battery.

• The battery on the arctic or extreme heat will result in shorter battery life, the battery exposed to cold or hot phone features may lead to not function properly, even when the battery is fully charged.

• Do not expose the battery to fire! Treatment of waste batteries in accordance with local laws and regulations.

Phone maintenance

The following suggestions will help you take care of your mobile phone:

• mobile phone with all accessories away from the place where children can touch.

• Please keep the body dry and liquid metal circuit will cause corrosion.

• Keep the body away from the high-temperature, high temperatures will shorten the life of electronic instruments, the plastic melt and damage the battery.

• Do not attempt to open the cabinet or phone

22

force anywhere, where phone use is prohibited or may cause interference or danger, must be shut down.

• Use of any radio transmitting equipment, including cellular phones, may interfere with inadequately protected medical devices. If you have any questions in this regard, consult to the doctor or medical device manufacturers.

• Your phone may interfere with medical electronic devices such as hearing aids and pacemakers. Please comply with the recommendations provided by the doctor or medical device manufacturers.

• could cause an explosion anywhere, such as gas stations, chemical plants, etc., it is recommended that users turn off the phone.

• provisions to comply with the restrictions on the use of wireless devices.

24

disintegration, non-professional demolition may cause body damage.

• Do not use strong acid or strong alkaline detergent to clean the body.

• Use only original mobile phone accessories. Violation of these will void the warranty.

Safety Precautions

To protect you and others from harm or to protect your phone from damage, please read the following information before using your mobile phone.

Use your phone, you must comply with the safety regulations enacted to protect users and their environment.

Traffic Safety

• Unless there is an emergency situation, if not installed to ensure the security and freedom of movement of the hands-free device, while driving Do not use the phone, set the car to a safe place and then use the phone to make sure you focus all attention on driving. Please comply with the relevant laws and regulations.

• there is not enough protection cases, some electronic systems in the car may be affected by the impact of radio waves transmitted from your phone.

• It is recommended that you only use the phone in the car external antenna.

• Only a qualified technician to install your phone in your car.

The safety of aircraft

Please turn off your mobile phone before boarding an aircraft, because it affects the operation of the aircraft and the entire cellular network. The use of mobile phones on aircraft is illegal violation of these safety regulations will be prosecuted or denial of service caused by the GSM network.

Environmental Safety

• Remember to comply with the special regulations in

23