# Catalogue

	instruction	
German	instruction	10
French	instruction	
Italian i	nstruction	
Spanish	imstruction	37
Russian	instruction	46
Chinese	imstruction	55




Water leakage caused by wrong operation and LCD willful damage are not within the some of free warranty.

Failure to follow these safety instructions could result in some unnecessary injuries or damage to Runbo phone .Please read all the safety information carefully below before using Runbo phone

- Please do not use mobile phone while you are driving .
- Do not switch the device on when wireless phone use is prohibited or when it may cause interference or danger.
- Please obey the rules in the hospital ,
  In hospital turning off the phone when it is forbidden
  near some medical instruments
- please turn off your phone when you are

  On a plane on a plane because all the wireless devices
  can interfere with the plane.
- Gas station do not use the device near the gasoline station area
- Qualified Only professional repairman can open repairing and repair the device
- Accessories Only original spare parts and battery and battery can be used on this device

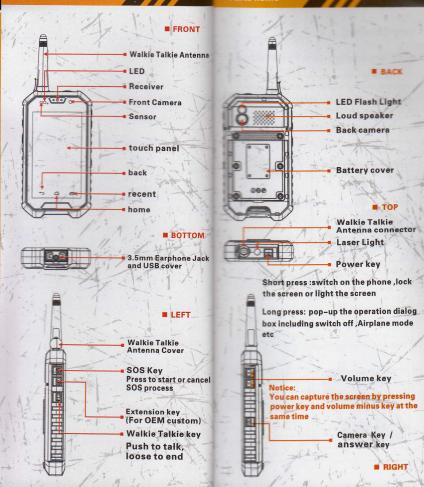

## **Geting started**



# Attention

 please do not overexert when twisting the screw to the battery cover. Or it may cause a:the device housing or battery cover broken b:the screw itself broken

2:do not use over designated standard screw driver

(Artificial damage is not within the scope of free warranty)



Guide for closing battery cover properly

1:For lock or unlock the battery cover, tighten the 1,2,3,4,5,6 six screws equally, firstly all apply 30%, then 60%, last 100%.

2:make sure the orange part and black part as shown in picture two in same level, Make sure the 3,4,5,6 black area in same level with housing.



11

# 1

# Attention

To inset the SIM card smoothly, press the block as shown in orange.



## SIM card installation

1:Open the battery cover. 2:Take out the battery.

#### Install Walkie Talkie Antenna

Does the Walkie Talkie Antenna cover

Does the antenna towards to the connector and



Tips: It is waterproof even the Walkie Talkie Antenna cover is open



To avoid wrong operation, do not open walkie talkie application program before installing the walkie talkie antenna.

## How to lock the USB cover correctly and properly



Firstly press the 1 and 2 spot at the same time which will make the yellow button move

into the proper position automatically. Similarly then press the 3 and 4 spot at the same time which which will make the other yellow button move into the proper position automatically.



Attention : after closing the USB cover, please

check the USB cover again to make sure the cover has been locked tightly by pulling the 5 and 6 spot.

#### Preparatory work before put it into water



Liquid

Crack

Dust

Hair

1:battery cover should be locked properly

2: Please make sure the space around the battery is clean not with any stuff inside, like A,B,C,D on the picture, so that the cover would be locked very precisely.

3:after taking the device out of water ,please use dry towel to dry the

4:make sure the battery cover is downward when you open it

5-Please make sure the space around the USB cover is clean not with any stuff inside , like A, B, C,D on the picture, so that the cover would be locked very precisely

6: After taking the device out of water, dry the speaker and microphone and receiver naturally, do not use the drier.

### Waintainance:



Do not use drier

when the seawater and then let it dry

## Prohibition:

- to not use device under hot spring or hot water
- 200 not open the battery cover when the device
- 3:Do not use chemical material to clean the device.















# How to use walkie talkie correctly. (install the walkie talkie antenna before using)

1:SQ:Suggest to set SQ as 1

2:make same setting for country, channel, ctcss between different devices.

3: UHF:400-480mhz or VHF:136-174mhz

4:use standard SMA connector, easy to expand

5:Support 38 levels of CTCSS

6:Walkie talkie signal will become weak under the condition of battery capacity shortage.

7:Support different frequency and CTCSS.

### Times 1:

DPS untenna is on the left side of device (see red urms as shown in Picture 1), when using GPS function the GPS antenna should keep upward and mu block (as shown in Picture 2)



Tilips 2:

The camera key can pick up phone call after setting ■ "Semings—Accessilibity—CameraKey responds coll "



Questions and answers about Runbo phone

Sow to restart when the phone crashes?

A When the device is crash , press the "Power key" and keep 10 seconds to restart the device, no need to poen the battery cover and take out the battery

Can the walkie talkie work if the antenna is mot installed?

4. No It doesn't work without antenna.