

 
TVI7 Android TV Box

User Manual

Thanks very much for choosing our Android TV Box. In order to make it more convenient for you to use proficiently, we provide you with a user manual. Please read it carefully before using and proper keep it for reference.


1. OUTLOOK DESCRIPTION

Front View

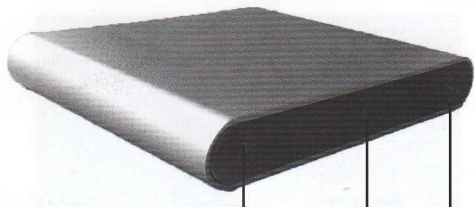

Infrared Camera LED

 Back View



Switch Power TF Card AV HDMI Network Port USB

2. USING USB INTERFACE

- ①. Using USB mouse ,keyboard
Getting the USB mouse or keyboard insert into the USB interface directly and then it could be used.
- ②. Using wireless mouse , keyboard
Get the wireless mouse or keyboard receiver insert into the USB interface directly and then it could be used.
★Before purchase or use ,make sure the device supports this type of wireless mouse or key board.
- ③. Please insert the U disk into device before using the device.
- ④. Using of TF card.
The device can support 32GB memory card.
Put memory card into card slot. When the device is prepared, there are list, you can visit all kinds of files in TF card by choosing diffident way to open.
- ⑤. HDMI interface
Connect the TV with device by HDMI cable.
- ⑥. "Ethernet" port
The device can connect the Internet by the cable which output from router

3.Startup

A. Power on the device

Press on the switch behind the device for 3 seconds, and when the light of the power led turn red-green to green, the device is working. And the system enter to the interface as followed:



When the system first time power on, it can scan the media library by default. So the machine may work slowly. Please pay more patience

 
Enter to "Application"



B. SEETING


WIFI

Press ok to choose your WIFI network and enter with your password.

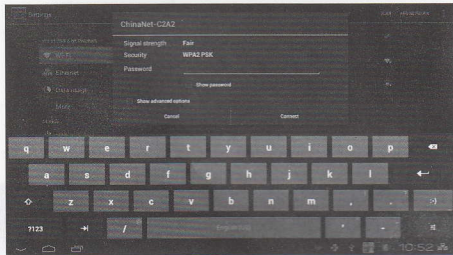


Ethernet

 After insert the cable connector which output from router and enter to "Ethernet" in the upper right corner. You can find IP address and other information in the "Ethernet" interface.

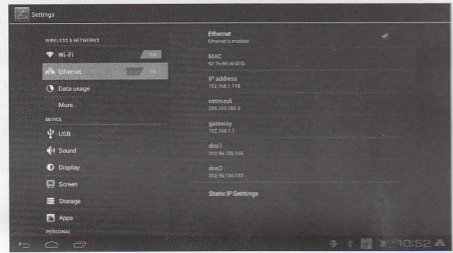

Sound

 
Move to "Sound", press to device volume setting interface.

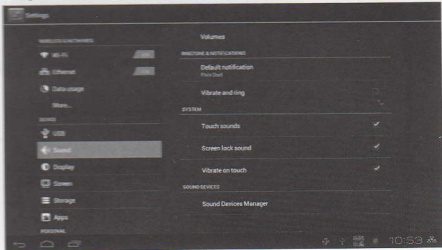

Display & Screen


Move to "Screen", press to enter system setting interface

 You can choose to amplify or narrow the size of screen, TV output module (HDMI or AV)

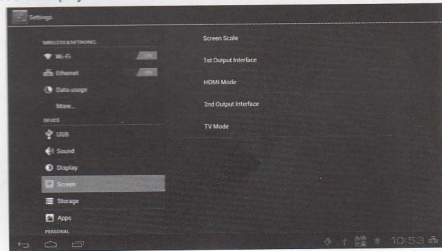


Storage

 Move to "Storage", press to enter system storage interface. You can read the internal storage and external device storage from here.

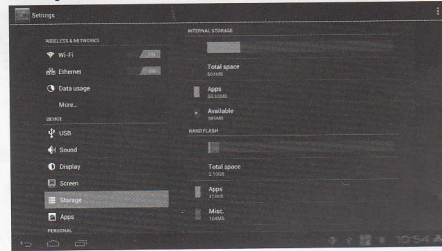

Apps

 Move to "Apps", press to enter into system apps working interface. You can find the apps working situation from here.

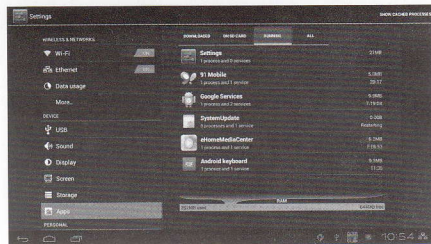


Security

Move to "Security", press enter to system security menu. There are 3 functions including Passwords, Device administration and Credential storage settings.




Language & Input

 Move to "Language input", press to enter into Language and input setting. There are many countries languages to choose. You can set keyboard and inputs, method, text-to-speech output speed and mouse speed.

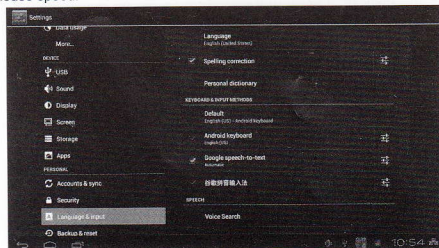


Backup & Reset

 Move to "Backup & Reset", press to enter into factory data rest. You can erase all media Box.

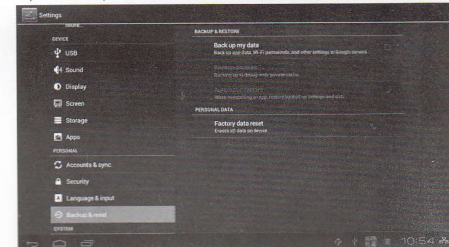


Date & time

 Move to "Date & Time", press to enter date and time settings. You can change the time format and date format here. You can choose automatic function for the date and time setting.

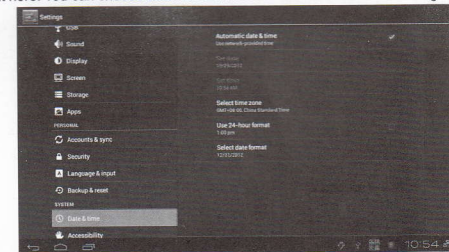

The installation and management of the application software (APK Files)

 After insert U disk or hard mobile disk, you enter to "APK Installer" interface of application. And you can install the software. In "Management" interface, you can manage all software which had installed before.

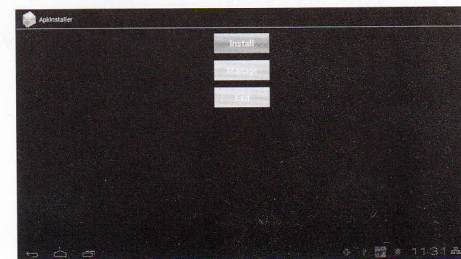

Browser

Move to "Browser", press to enter webpage browsing interface in the main interface. Please make sure the network links up is correct. And clicking on login and you can visit various websites and watch some online movies.



TVI7 Performance Parameters		
Basic parameters	CPU	RK3066 (ARM Cortex A9 /double core)
	Nominal frequency	1.6GHz
	3D Graphics acceleration	Mali 400 Quad
	System Memory	1G (DDR3)
	Flash	The largest in support of 32GB
Network communications	System version	Android 4.0.4
	Storage	Support Micro SD (TF) card, and largest in support of 32GB
	WIFI	support 802.11b/g/n
	Network interface	Support cable network
Video	3G	Support external USB 3G module
	Video Format	Support H.264, VP8, RV, WMV, AVS, H.263, MPEG4 and so on.
	HD video	Support 1080P, 1280×720 resolution
	Camera	300,000 pixel camera preamplifier. And support USB camera
Audio	Video Input	HDMI output, CVBS output
	Audio format	Support MKV, AVI, RM, RMVB, MP4, MOV, VOB, DAT, FLV, 3GP and other formats.
Function parameters	Picture format	support
	Electronic reading	support
	OTG	support
Interface	USB interface	USB HOST, USB DEVICE
	Infrared interface	Support infrared Remote Control
	Video interface	HDMI interface, CVBS (AV)
Other parameters	Size	120*96*18mm
	Weight	170g
	Power	100~220V AC input , 5DC output 2A

Troubleshooting

Warning

Under no circumstance should you try to repair the TV Box by yourself, as this will invalidate the warranty. Do not open the TV Box as there is a risk of electric shock. If a fault occurs, first check with points listed below before taking the TV Box for repair. If you are unable to remedy a problem by following hints, consult your dealer for help.

Problem	Solution
No power	<ol style="list-style-type: none"> 1. Check if the power adaptor is properly connected to the power and the TV Box. 2. Press the power on the remote controller to turn on the power.
No picture	<ol style="list-style-type: none"> 1. Check if the TV is switched on. 2. Insert cable again.
No sound or distorted sound	<ol style="list-style-type: none"> 1. Adjust the volume. 2. Check that the speakers are connected correctly.
No audio or digital output	<ol style="list-style-type: none"> 1. Check the digital connections. 2. Check if your amplifier is set correctly
The player does not respond to the Remote Control	<ol style="list-style-type: none"> 1. Aim the remote control directly at the sensor on the front of the TV Box. 2. Reduce the distance to the TV Box. 3. Replace the batteries in the remote control.
Player does not respond to some operation commands during playback	<ol style="list-style-type: none"> 1. Operation may not be permitted .Refer to the user manual. 2. Possibility of system halted ,reinsert with power adaptor to restart
No sound during movies playback	<ol style="list-style-type: none"> 1. The audio codec may not be supported by the TV Box. You can change to the supported audio on playing menu. 2. Check the volume.
The contents of the USB cannot be read	<ol style="list-style-type: none"> 1. The USB format is not compatible with the Box. 2. If one of the USB cannot be read ,Please turn off the TV Box for 30 seconds and restart the TV screen
Slow operation of the USB	Big file size or high resolution USB takes longer time to read and display on the TV screen.
No sound with HDMI connection	<ol style="list-style-type: none"> 1. Check the connection between the TV and the HDMI jack of Box. 2. Check your TV system setup. 3. Check the volume.
The TV screen is blank and the player LED is blinking	<ol style="list-style-type: none"> 1. Turn off your TV Box and wait 30 seconds. Turn it on again. 2. If under HDMI status , check if HDMI connection is correct or change another HDMI cable, set the output resolution of this TV Box into 720p