ULTROSONIC-IONIC REPAIRING INSTRUMENT

Operation Manual

Thank you for selecting our product.
Please carefully read the operation manual before use for correct operation.
Please take good care of it after reading.
This beauty instrument is based on the treatment for healthy skin with the purpose of beauty care, it is not allowed to use or sell the product for the

purpose of therapy.

Contents

Specification

Power Supply: 3 pcs AAA normal or recharge batteries

Spec. : (Body) $L16 \times W4 \times H3.5cm$

Weight: (Body) 77.4g Frequency of Ultrasonic: 3±5% M Hz

Safety Cautions

- The product is the beauty care instrument for healthy skin, please do not use it for other purposes except beauty care.
- OPlease follow the use frequency and operation manual, please shorten the use time for use for the first time and allergic skin.
- OPlease stop using if the user feels uncomfortable.

Users and parts which are not allowed to use the instrument

Eyeballs;

Users with fracture repair surgery, face-lifting, metal, silica gel and plastic implanted in face:

Hot and inflammatory parts caused by intensive sunlight;

Dermatitis caused by cosmetic;

Acne and inflammatory parts;

Itching or hot spots;

Spots caused by physical irritation;

Users with angiotelectasis caused by long time use of steroid, hormone and liver dysfunction;

Plastic parts;

Users with metal in body after therapy;

Users with heart disease (particularly for users with heart pacemaker);

Other parts which are not designated in the Operation Manual.



Cautions on Operation and Storage

Do not put it on the washstand and other places which may easily suffer from water:

Do not operate with wet hand;

Cut off power supply before storage;

 
Keep it out of reach of children, do not use it for young persons.

★Please perform skin allergy test before use it for the first time



Simple Method for Skin Allergy Test:

- 1. Cleanse the wrist:
- 2. Extend the Special Essence onto skin for 48 hours, keep it dry naturally (skin shall not contact water, do not rinse off the Essence), immediately stop test when skin feels uncomfortable;
 - doctor when skin becomes allergic.







Instrument Body

Face Electrode

Cosmetic Cotton Cover


Cosmetic Cotton Open Button

Operation Panel

Hand Electrode

Parts Introduction

Introduction To Names On Operation Panel

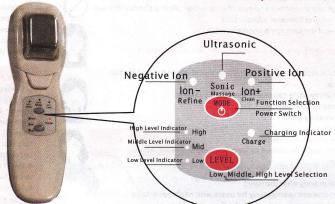

How to hold hand electrode?

For normal way, you should
Tightly hold the handle of the
Beauty instrument, and which shall only
be operated by yourself.





How to power machine and recharge machine.



Machine can be powered by 3 pcs normal AAA bettery



Machine can be powered by 3 pcs recharge AAA bettery with next two recharge solution: Recharge with your computor USB source by connecting machine with computor with USB line.



Recharge with the adaptor by insert adaptor plug into wall socket.



Deep Cleansing

1. Makeup Removing



Remove ornaments

Assure to remove earring and ear stud, rings, necklace and watch.

Operation instruction

I. Wet the cosmetic cotton with cleaning toner or distilled water (make the face and cosmetic cotton damp)

- II. Fix the cosmetic cotton on the massage tip
- III. Start the instrument, select lon+
- IV. Select High/low Level:

 
Please select LOW when use for the first time, and then select Middle or High after skin has adapted to it

 
V. Treatment Method

Attach the electrode Pad onto skin, or tightly hold the handle, attach the massage tip onto face, move it once every 10-30s, the moving direction is shown in the right diagram.

VI. After Treatment

Open the cosmetic cotton cover, remove the cosmetic cotton and clean the massage tip







Induct-in

For the desired part on the face, conduct with a proper amount of essence (for example: essence with spots removing or wrinkles removing functions) to increase the concentration and improve the absorption of essence.

1. Wet the massage tip with essence



a. Clamp the cosmetic cotton



b. Drop essence onto cosmetic cotton - thoroughly wet it



c. Finish

2. Start the instrument, select lon-

3. Select High/low Level:

Please select LOW when use for the first time, and then select Middle or High after skin has adapted it

4. Treatment Method

a. Extend essence onto desired part, attach the massage tip on the part, and keep it onto skin for 20s or longer b. Move it once every 5s for other parts (after hearing the prompt sound)



5. After Treatment

After use, Open the cosmetic cotton cover, remove the cosmetic cotton and clean the massage tip

 
Ultrasonic and lonic work together

Massage the entire face with ultrasonic and Ionic together.lonic can induct-in nutrition and 3 million times/second ultrasonic can stimulate and adjust the cell membrane, improve the permeability of epidermis, accelerate metabolism and promote skin to absorb essences.

1.Extend gel onto the massage tip and desired part ---(because ultrasonic can't pass in the air, therefore, gel is necessary between the massage tip and skin to 3. Select High/low Level: conduct ultrasonic into skin)




Use more essence if the massage tip is not lubricant enough



The massage tip shall tightly attach onto skin

2. Start the instrument, select Sonic and lon-(two indicators light on)

 Please select LOW when use for the first time, and then select Middle or High after skin has adapted to it



4. Treatment Method

"Slim Face":



operate from mouth to eyes

"Lift Corner of Mouth":



operate upwards surrounding the corner of mouth

Remove Dark Circle, Pouch, Face Lymph Detoxification

- Operate from inner canthus to temple
- Operate from edge of face to skin behind ear
- From skin behind ear to collarbone part
- From collarbone part to armpit
- It is better to repeat for 20 times

"Firm Double Chin":



operate from chin to ear, from chin to corner of mouth upwards

T-zone:



wing and nose bridge upwards and downwards for 1-2 minutes

_ 9 _





Product Model Purchased On Purchased At Distributors The warranty period of this product is 1 year

- 1. Please use the product according to the operation manual, faults within the warranty period enjoys free repair. (Please provide the product and the warranty card for free repair service)
- 2. We provide repair service with certain charge if one of the followings occur even within the warranty period.
- (1) Fault and damage caused by incorrect use;
- (2) Fault and damage caused by unauthorized repair or reconstruction;
- (3) Fault and damage caused by transportation and falling down after purchasing the product;
- (4) Fault and damage caused by fire, earthquake, flood, lightning strike and other force majeure.
- 3. Please carefully keep the warranty card since it shall not be reissued.