 


# Digital Waterproof Music Player

## User's Manual

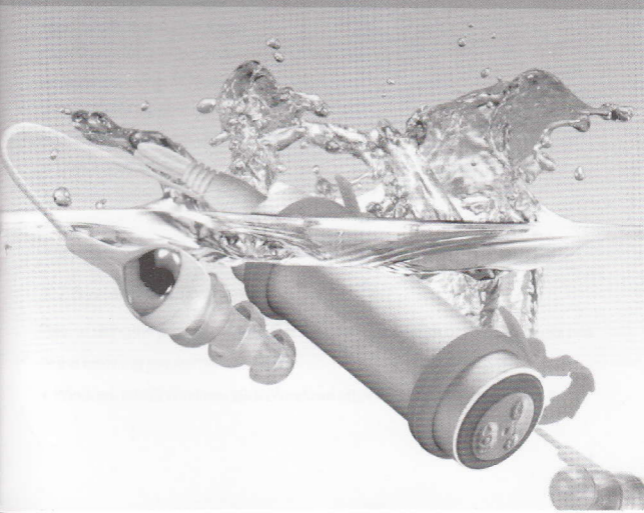

## 1 Product Introduction

### 1.1 Package Contents

#### Standard Swimmer Package

Confirm your package include all as following:

- Digital Swimmer MP3 player
- Waterproof earphones
- USB cable (for track download and recharge)
- User's Manual
- Silicone sleeve
- Arm Band
- Drying cloth

### 1.2 System Requirements

 
Prior to using the product, confirm that the operation system of your PC meets one of the following requirements:

- Windows 98SE/Windows 2000/Windows ME/Windows XP or Mac OS 8.6





### 1.3 General Specifications

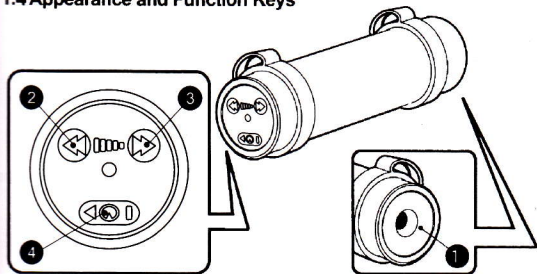- Waterproofing: International Standard IPX8
- MP3/WMA supported
- Battery life: Playing continuously for 5-6 hours (depending on user's operation habits)
- Firmware updating, file transmission and storage, and battery recharge via USB
- Operation temperature under water: 0°C~+50°C; humidity: 20% ~100%
- Dimensions: 60mm (length) x 21mm (width) x21mm (height)
- Body net weight: 25g

### 1.4 Appearance and Function Keys





No.	Name	Function Description
1	Earphone Plug (USB Port/Charger Socket)	<ul style="list-style-type: none"> <li>• For connecting of earphones to the player.</li> <li>• For extended line connecting to the player.</li> <li>• For USB connecting to the player and PC.</li> <li>• For connection to the optional USB charger to recharge the built-in battery.</li> </ul>
2	Volume Up Selecting a Track (Forwards)	<ul style="list-style-type: none"> <li>• Press this button to increase the volume.</li> <li>• Press this button to skip to the next track.</li> </ul>
3	Volume Down Selecting a Track (Backwards)	<ul style="list-style-type: none"> <li>• Press this button to reduce the volume.</li> <li>• Press this button to skip to the previous track.</li> </ul>
4	Power	<ul style="list-style-type: none"> <li>• Power on/off; play start/pause.</li> </ul>

5	FM Mode	<ul style="list-style-type: none"> <li>• When play music pause,press the  button, The light fast flash then into FM mode,The light on and stop.</li> <li>• Hold the  button for 3s into the search FM signal and save it. The light keep on and no flash.</li> <li>• When search finish.Press the  button to choose the FM channel.</li> <li>• Press pause,Then press  button to exit FM mode</li> </ul>
6	LED Indicator	<ul style="list-style-type: none"> <li>• Power on/Play: Hold the button for 3s to ture on the player.The power light on,If have music files in the player memory,Then will be automatic into player mode,The light on and flash</li> <li>• Pause:Press the button when in playing,Then pause play.The light keep on and no flash.</li> <li>• Power off: Hold the button for 3s to ture off the player.The power light fast flash then power off.</li> <li>• Recharge:Use the USB cable to contact the player to Notebook or PC usb,The light on and flash during charge.About 2h later the charge finish.</li> <li>• Contact to USB: Use the USB cable to contact the player to Notebook or PC usb,The light on and flash,You can up/download the files for the player memory.</li> </ul>

## 2. Operational Instructions

### 2.1. Copy MP3 Files from PC to the MP3 Player

- Connect the player to the USB port of your PC using the attached USB cable.
- A " " icon appears at the right bottom of the Tool Bar. A "Removable Disk" icon also appears in "My Computer".
- Use the File Manager function to copy MP3 files to the player.
- Then double-click the " " icon at the right bottom of the Tool Bar to disable the "Removable Disk". When the "This Disk Has Been Disabled Successfully" dialog box appears, disconnect the player from the USB port.

### 2.2 Recharge the Battery

There are two ways to recharge the battery:

 
- To recharge the battery via USB port of your PC or NB, simply connect the player using the USB cable to your PC or NB. Only 1.5 hours are required to fully recharge the battery.
  - To recharge the battery using the USB charger (optional), simply connect the player to the charger using the USB cable, then connect the charger to the power supply.
- \* Note: When disconnected from the USB port after recharging or file transmission, the player switches off automatically.

## 2.3 Operation in Water (Swimming Mode)

- Lock the player to the swimming goggles with the attached lock ring and fix the earphones behind your ears with the clip.
- Press and hold the "⏻" for 3-4 seconds to turn on the player (The LED indicator comes on ) and enter playback mode.
- Wipe the player dry with the attached Drying cloth as soon as you leave the water.

## 2.4 Special Features (Optional)

In the Sports Extra Accessory Package, a thermal sensor ( $\pm 1\sim 3^{\circ}\text{C}$ ) is available for the lock ring of the swimming goggles. It provides water temperature indications for users swimming in water environments at different temperatures. The meter of the sensor is shown below:

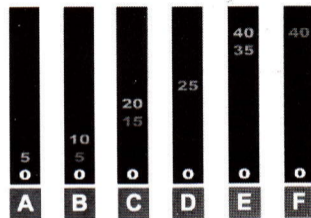

\*You may refer to the above meter and compare it with the temperatures below when wearing the goggles with the thermal sensor and swimming in water environments at different temperatures:

- A. About  $5^{\circ}\text{C}$ / ice water pool of sauna
- B.  $8\sim 14^{\circ}\text{C}$ / cold water pool of sauna
- C.  $17\sim 21^{\circ}\text{C}$ / normal swimming pool
- D.  $25\sim 28^{\circ}\text{C}$ / tepid swimming pool
- E.  $36\sim 40^{\circ}\text{C}$ / hot bath
- F.  $40\sim 43^{\circ}\text{C}$ / hot spring=hot water pool of sauna

### 3. How to Wear the Player

#### 3.1 Swimming

Before swimming, wear the player according to steps below to ensure the waterproof protection:

 
- Be sure to use the waterproof earphones.

Step 1 as illustrated below:



- Take the earphone plug into the earphone socket on the player.


Step 2:





3. As shown in the following figures, lock the MP3 player to the band of the swimming goggles with the lock ring and pull it tightly. Adjust the clip of the earphones and clip it at a proper position on the band of the swimming goggles. (For swimming).

Steps 3~4 as illustrated below:

 Step 3:

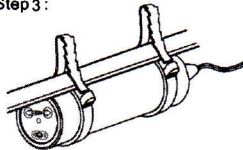

  Step 4:

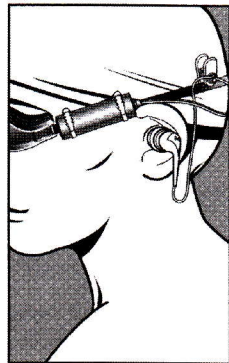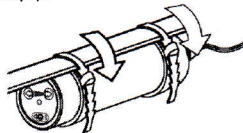

#### 4. Operating Environments

The player can function appropriately in the following environments:

- Swimming/Hot spring/Sauna/Spa/surfing/snorkeling/windsurfing and other water activities
- Normal environment

#### 5. Troubleshooting

This section provides significant information to help you solve common problems you might encounter when using the product. If you encounter any problems that are not listed below, contact your dealer for professional help.

##### 5.1 I can't turn on the MP3 player

- It possibly results from power shortage of the battery. Connect to your PC for recharging using the USB cable.

##### 5.2 After I turn on the MP3 player, it shuts down again in no time.

- It possibly results from low charge of the battery. Connect to your PC or the optional USB charger for recharging using the USB cable.

##### 5.3 I can't use the USB cable or charger to recharge my player

- Be sure that you are using the USB cable attached in the package for recharging.
- Connect the player to your PC using the USB cable and check that the operating system is picking up the MP3 player.

- Unplug the USB and plug it in again. Press the ● button at the same time to reset the settings to default before you start the recharging.

##### 5.4 There is no sound after the player is turned on.

- Be sure that the earphones are properly plugged into the earphone socket. If you are using the waterproof earphones, be sure to screw them tightly into the earphone socket.
- The volume might be too low. Use Volume Up Vol+ button to increase the volume.

##### 5.5 Abnormality occurs during the operation..

- If there is still no sound during operation of the player with the earphones plugged in the right position and the LED indicator flashing normally press the ● buttons at the same time and restart the player.
- If the LED indicator stays on but the player does not work, press the ● buttons at the same time and restart the player to reset the settings to default.
- ★ Note: The files stored in the player will not be lost due to the reset.

##### 5.6 I can't connect my MP3 player to PC

- Be sure that you have connected the player to your PC appropriately using the USB cable.
- If you are using Windows 98, go to our website and download the MP3 player driver for Windows 98. Make sure that the driver is installed appropriately.