

Tablet Computer

User Manual

Version 1.0

M-322

Chapter 2 Basic Operations

I. Charging Method and Battery Management

Please make sure the battery has been fully charged before using your device. The battery will reach the best condition after fully charging/discharging for two or three times.
Charge the battery: connect one end of the charger to this device and the other end to power supply.

II. Turning Your Device On and Off

- 1. Turn on your device: long press power button until startup interface appears. It might take few seconds due to initialization.
- 2. Turn off your device: long press power button until the dialogue appears. Click "turn off".

Note: In case your device is turned off by force, it will scan and repair the disk after rebooting, which may take few minutes.

III. Standby and Unlocking Your Device

- 1. Standby: your device will go into standby status in case of no operation within a certain period of time, which can be preset by the user. The touch screen is locked in standby status.
- 2. Lock your device: press power button so that your device will go into standby status to avoid unintended operation and save power.
- 3. Unlock your device: in standby status, press power button to unlock your device. Tap and hold icon [] and drag the light ring to [] so that the screen is unlocked.

IV. Reset

In case your device crashes or fails to start up due to improper operation or other

Dear Customers

Thanks for choosing our product.
In order to have good user experience, please read this manual carefully and completely before using. In case of any query on our product, please email to us (SL@link-create.com.cn) , Thanks for your cooperation.
This manual is protected by copyright. It is not allowed to copy or reproduce all or part of information provided herein without prior written consent of our company.
Our company reserves the right of final interpretation of this manual.

Cautions

This device is liable to break, therefore, please protect it from falling down or being pressed.
Please avoid water or rain when using this device.
Please backup important data on your PC to avoid accidental loss due to unintended operation. This device can be used as hard drive. Please be reminded to import/export files according to standard procedures, and our company shall not be responsible for any loss or missing of the data in the device due to improper operation.

Please use charger or other accessories as designated by the maker to avoid fire disaster. Any problem due to the use of undesignated charger or accessories will be out of our warranty and may cause accident.
In case of any query on the use of this device, please contact local distributor or directly contact our customer service center for help. The performance and functions of this device shall be subject to change without prior notice.
Reminder: please reboot this device after installing SIM card.

reasons, press reset button to reboot your device.

V. Icons and Operating Instructions

There are five home screens as default. You may slide left or right to switch among home screens.

1. Icons

- []: Google search. []: voice search.
- []: view applications or widgets.
- []: back to previous interface. []: back to home screen.
- []: view recently used applications. []: set current interface.

2. Customize Home Screens

Delete a shortcut icon: tap and hold a shortcut icon until it wiggles. Drag it to "X" to delete it.
Add icons: on the home screen, click [] to view all applications and widgets. Tap and hold an application or widget, and it will be added on home screen. You may drag it to anywhere on the home screen.
Create a folder: on the home screen, tap and hold an application, and then drag it to overlap another one to create a folder.
Change wallpaper: tap and hold blank area on home screen→ select wallpaper source, and then set a picture as wallpaper.

3. Notification Center

You may view new messages or system status (such as USB connection, memory card inserted, etc.) at notification center.
Notification center: there is a status-bar on the top of the screen, and notification icon appears on the left side of status bar. Pull down notification bar to view notifications.
Quick setting shortcuts: commonly used shortcuts for quick setting can be found

Functions

Operating system: Android 4.2 with better expansibility.
Processor: ARM Cortex-A7 dual core; main frequency: 1.2GHz.
Touch screen: 7" capacitive screen supporting 5 touch points and enabling excellent touch experience.
3D technology: high-performance 2D/3D graphic processor supporting Flash 11.1.
Camera: front & rear camera for taking snapshots and making video calls.
3G network (GSM+WCDMA) for phone conversation and web browsing; dual SIM card standby.
Bluetooth for wireless transmission at a short distance.
GPS and navigation map for easy transportation.
Network supported: Wi-Fi & 3G.
OTG: USB 2.0 port for connecting PC U disk and flash drive.

Technical Parameters

Display	7" screen; resolution: 1024*600
Operating system	Android 4.2
Camera	0.3 mega pixel (front)+2.0 mega pixel (rear)
Bluetooth, GPS, FM radio	Supported
Gravity sensor	Support G-sensor
Audio format	MP3, MP2, WAV, APE, AAC, etc.
Video format	H.264, XVID/DIVX, MPEG 4, SP/H. 263, ASP, VP8, etc. (1080P)
Image format	JPG, JPEG, GIF, BMP & PNG (still picture)
External memory card	32GB at maximum
Battery	3.7V 2500mAh

at notification center. Pull down notification bar to view quick setting shortcuts.

Turn off notification center: slide upward or click [] to turn off notification center.

VI. Screen Shot

You may take screen shots according to the following procedures.

- 1) Turn on your device and go into the interface where you would like to take screen shots. Press "volume -" and "power" button at the same time to take screen shots.
- 2) At notification center, click []→ "screen shots" to view them.

VII. Input Methods

- 1. Tap input field and edit menu pops up.
- 2. Pull down notification bar→ click keypad icon on status bar and select input method. You may click again to change input method.

Note: You may preset desired input methods by clicking "settings"→ "languages and input methods" and tick options of input methods.

VIII. SD Card

You may install SD card to save data. Please install SD card according to standard procedures.

Tips


- 1. Please do not hot plug SD card to avoid loss of important data.
- 2. Please select FAT32 when formatting memory card on PC.

Uninstall SD card:

Click [] on home screen→ settings→ storage, select "uninstall SD card".

Chapter 1 Get to Know Your Device

I. Device Layout

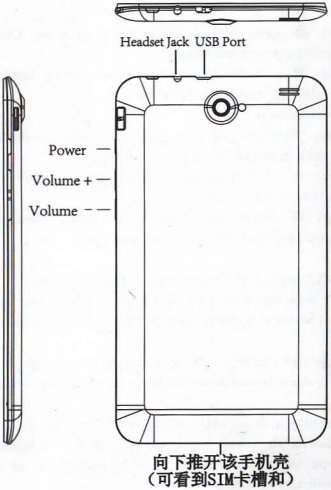

Please slightly press card tray so that it pops up. Take SD card out of the tray.

IX. PC Connections

You may connect your device to PC via USB cable.

- 1. Connect one end of USB cable came with this device to this device, and connect the other end to PC. When "USB connected" appears on screen, click "open USB storage device" on PC to access files saved on your device.
- 2. Please do not change the name of any sub-directories, otherwise, it might cause failure to access files.
- 3. Please make sure your device has enough power when connecting to PC, otherwise, your device cannot be found on PC.

Note: 1) When connecting to PC, please make sure USB debugging function is disabled, otherwise, it might cause failure to access files.
2) Before plugging USB cable out of PC, please make sure they have been disconnected.

Chapter 3 Basic Settings

Click [] on home screen→ settings, and there are many options, such as wireless and network, device, user, account and system.

I. Wireless and Network

Include: SIM card management, WLAN, Bluetooth, data usage, etc.

1. WLAN

Wi-Fi connection: you may use your device's wireless networking capabilities to connect to any wireless local area network for browsing web or downloading data.

- 1) Click "Wi-Fi" and slide the bar to enable Wi-Fi so that available wireless networks will be listed out.

- 2) Select one of them for connection. For encrypted network, password is required.

Tips

- 1) Click →press Wi-Fi protection button on router. Click “+” to manually add a wireless network.
- 2) Click → “scan” to search available wireless network. Click →advanced to set wireless networks.

2. Bluetooth connection

- 1) Click “Bluetooth” and slide the bar to enable Bluetooth so that available Bluetooth devices will be listed out.
- 2) Select one of them for pairing. Confirmation from the other party might be required to complete pairing.
- 3) Click →rename your device, check timeout setting, view files received and check Bluetooth advanced settings.

Tips

- 1) Click “search” to start search available Bluetooth devices.
- 2) The connecting method provided herein is for reference only, which shall be subject to change due to different model of Bluetooth device.

3. Mobile network connection: this device has 3G module built in; therefore, the user is able to browse the web wherever and whenever possible.

- 1) Turn off your device and install 3G card of China Unicom.
- 2) Select mobile network setting and manually turn on built-in module power and data transmission. When 3G icon appears on status bar, mobile network is connected.

Tips: Wi-Fi and mobile network should be used alternately.

7

II. Device

Items included: profiles, display, storage, battery & applications.

1. Profiles: standard, mute, meeting & outdoors.
2. Display: can be customized.
3. Storage: show used and available spaces of your device and SD card.
4. Battery: show battery level.
5. Applications: downloaded, in SD card, running and all. You may manage all applications in your device (please install SD card to view applications saved in SD card).

III. User

1. Location access authority: allow other persons to find your location or not.
2. Security: screen protection, password, device management and evidence storage.
3. Languages and input methods: languages, keypad and input methods, voice and mouse/touchpad.
4. Backup and reset: backup and restore system data; in case of critical error or missing password, the user may restore factory settings. It is suggested to backup important data in advance.

IV. Account

1. Create an account or management account.

V. System

1. Date and time: you may select “auto set” to use date and time searched on line, or manually set date, time, time zone, etc.
2. Turn on/off your device by alarm: set the time to turn on or turn off your device.

8

Fast backward/fast forward	/
Play list	
Loop playback/shuffle play	/
More options	

2. Create a play list

Click “music” icon→ file, long press the file you want to add to play list→ setup menu pops up, and select “add to play list”. Click the new play list, enter a name and click OK to save it.

Tips: you may click back key to return to home screen, while the music is playing backstage.

VIII. Camera

Click “camera” icon to take photos or start video recording.

1. Photo Mode

This device supports photo mode (as default) and video mode. Click to switch to video mode. Click to switch between front and rear camera.

2. Video Mode

In photo mode, click to take photos.

In video mode, click to start video recording, click it again to stop.

3. Camera setting: click to set up.

IX. Gallery

1. View all photos;
2. Scan all photo files in given application interface.

3. Auxiliary functions: regarding service and system.
4. For developers: desktop backup password, unlocked screen, SD card read-write protection, debugging, input & monitoring.
5. About your device: you may view status of your device and other information related to your device.

Chapter 4 Main Applications

Click and switch among home screens to view all applications. All applications mentioned below belong to ordinary version and are for reference only. Some of them may require network connection.

I. File Management

1. Open file manager: click “file management” to management files saved in SD card or in the device.

Icons	Remarks
	View files saved in the device/SD card/ external storage device
	Back to file management
	Create a folder
	Search a file
	More setting options

2. Install APK applications

Open file manager and select an APK application so that the setup dialogue box appears. Click “install”.

II. Dialing

Click telephone icon on home screen and three options appear, i.e. dial, call history and contacts.

1. Make a call: click numeric keys to dial a phone number and then click .

9

2. to make a call. You may also select a phone number from the contacts or call history to make a call.
3. Create a contact: click “contacts” and select →create a contact, enter personal information of such contact and click “done” to save it.

4. During phone conversation:

Click to end or cancel a call.

Click to use dial pad, and the current call will be put on hold when dialing a new phone number.

Other icons:

- : enable numeric keypad.
- : turn on/off loudspeaker.
- : mute microphone during phone conversation.
- : hold a call.
- : conference call.
- : more setting

options.

Note: please turn off your device before installing SIM card.

III. SMS

Click SMS icon on home screen.

1. Click →recipient or enter the phone number of recipient, click “edit”→type a message→ to send the message.
2. When writing a message, you may click to add picture, video, audio and sound recording or click to add theme, insert emoticon, quit or select other settings. (MMS will be created after adding a theme.)

IV. Contacts

Click “contacts” icon on home screen.

1. Create a contact: click and enter personal information of such contact. Click “done” to save it.
2. More setting options: click to select other settings.

10

V. Browser

1. Open web pages: click browser icon and enter web site in address field. Click .

2. Browse web pages: use your finger to slide on the screen to browse web pages.

3. Zoom in/out: tap the screen with two fingers, spread or pinch them to zoom in or out.

Note: the operating method depends on input methods and virtual keypad.

VI. Video Player

1. Click “MX video player” icon →video files→select a file you want to play→play. In play status, click the touch screen and the control bar appears.

Operations	Keys
Play/pause	
Previous/next	/
Lock/unlock	/
Display mode	
Decode mode	
Setup menu	

VII. Music

1. Play music: click “music” icon and view music files. These files are listed by artist, album, song, play list or playing. Select a file you want to play.

Operations	Keys
Play/pause	
Previous/next	/

11

12