

User Manual

User Manual.....	- 1 -
1 Basic introduction.....	- 3 -
2 Main function	- 3 -
3 Menu interface.....	- 3 -
3.1 Message and status icon	- 4 -
3.2 Check message	- 4 -
4 SIM Card.....	- 5 -
5 battery - 5 -	
5.1 Use charger charging	- 5 -
5.2 Notice items before using charger	- 5 -
6 Gravity sensor.....	- 5 -
7 Memory card.....	- 6 -
8 Power on.....	- 6 -
9 Input information	- 6 -
10 Phone call.....	- 7 -
10.1 Call out.....	- 7 -
10.2 Answering the telephone	- 7 -
10.3 End call.....	- 8 -
10.4 New contacts	- 8 -
11 E-MAIL.....	- 8 -
11.1 login E-mail.....	- 8 -
11.2 Add email accounts.....	- 9 -
11.3 Delete email accounts.....	- 9 -
12 Memory card.....	- 9 -
12.1 Local memory setting.....	- 10 -
12.2 Copying files to the memory card	- 10 -
12.3 Delete files on memory card	- 10 -
12.4 Check space of memory	- 10 -
13 Recorder	- 11 -
13.1 Recording operation	- 11 -
13.2 Look record files	- 11 -
13.3 Delete record files	- 11 -

14 Music - 12 -	
14.1 Access music files and play.....	- 12 -
14.2 Add new songs to playlist.....	- 12 -
14.3 Delete playlist.....	- 13 -
15 Setting.....	- 13 -
15.1 WIFI Setting.....	- 13 -
15.2 Ethernet setting.....	- 13 -
16 Cameras and video cameras	- 13 -
16.1 taking photographs	- 14 -
16.2 Make a movie	- 14 -
17 Ultra clear player.....	- 14 -
17.1 Video play.....	- 14 -
17.2 Check pictures.....	- 15 -
18 G-mail.....	- 15 -
18.1 Read the new information	- 15 -
18.2 Write Message	- 16 -
19 Instant message.....	- 16 -
19.1 Visit Google Talk.....	- 16 -
20 Web review.....	- 16 -
20.1 Into menu.....	- 16 -
20.2 Change your home page.....	- 17 -
20.3 Visit web.....	- 17 -
21 Android electronic market.....	- 17 -
21.1 Browse.....	- 17 -
21.2 installation	- 18 -
22 Take good care of the machine	- 19 -
22.1 Safety warning.....	- 19 -
23 The machine accessories.....	- 19 -

User Manual

1 Basic introduction

Home screen will stretch out of the screen width, but to provide more space new graphic, small tools etc. His fingers on the table around fast sliding, can jump to extend home screen response part.

2 Main function

Volume control key	To press the "+" increase the volume, press the "-" to reduce the volume (until mute), no phone voice control system
Switch machine key	Long press: boot/open include shutdown system menu In short: put screen lock screen, allows into sleep mode
Return key	Return to a procedure or previous operation interface
Homekey	In any interface, Click this button to quickly return to the main menu interface,
Search key	Click the button enter search interface, can be related search operation;

3 Menu interface

The main menu interface will be displayed on the all applications, click on the application icon will activate the corresponding application, long according to application icon will be the main menu interface application shortcut added to the standby interface.















3.1 Message and status icon

Status bar is located in the bottom of the screen. Tip the upcoming calendar things, or alarm clock, status bar on the left will show home button icon. Status bar to the right of the return key, the Home key, recent task key, menu button, time, and the battery power icon.

3.2 Check message

When in the status bar prompting information, can through the hold column frame and on the screen with your fingers sliding to open notice list.

Click on a notice to the content of the corresponding option

	mail		Back to the home page
	The new voice mail		Upload/download in
	Pending event		Download completed
	Alarm clock		Wi-FiServices have connection, have open network can be used
	Play music in		SD Card the space is insufficient
	Data synchronization in		Cell changes mark
	Charging in		
	more		

4 SIM Card

SIM card with mobile network function, if the equipment no SIM card will not be able to call, installation steps SIM card

As follows:

1. Take off your SIM card;
2. The SIM card into the SIM card slot machine right in.

5 battery

5.1 Use charger charging

Will charge line small end of the mini USB port to insert the equipment at the bottom of the USB interface, will charge the other end of the line inserted on computer for charging or charger is inserted into the device directly at the bottom of the charging interface for charging.

5.2 Please pay attention to the following questions before charging

- 1 Equipment first kaifeng, low battery;
- 2 Shutdown charging, appear charging animation, full of the show when the full picture;

6 Gravity sensor

Gravity sensor is a new type of sensor technology, in the machine in any case the screen will automatically turn, play games can replace the up and down or so, when you encounter the machine or by hand to move the machine, the equipment will be issued vibration or ringtone for equipment off to lost perception and so on.

Setting procedure is as follows:

1. According to the main screen Menu button, click on the "system Settings";
2. Click the "show";
3. Select the "automatic rotary screen", namely set success.

7 Memory card

Equipment use MicroSD memory card and built-in storage, can store multimedia files, such as music, ringtones, wallpaper, and video, etc.

Built-in memory in the machine Settings "memory". Built-in storage is equipment with memory, there is no memory card also have memory space, like the machine itself when the factory took a small hard disk.

The outer memory installation steps are as follows:


1. Take off your SD card;
2. The SD card is inserted into the machine of the bottom of SD card slots in.


8 Power on

Long hold switch machine key 3 seconds to boot device

9 Input information

Start-up procedure or select need to enter text or number field, can appear the screen keyboard. There are two kinds of screen keyboard configuration available: Android keyboard, Google pinyin input

In the Android keyboard input, long press  Can open menu, in the Google pinyin input


method, long press  Open menu, the menu select want to use the keyboard and

configuration options.

10 Phone call

10.1 Call out

Make a phone call several ways:

- **dialing:** Input telephone number and press "call button";
- **call records:** In the record list any choose to dial;
- **address book:** Click on a contact can call after;
- **search contacts:** Click on the  Find contact number to call;

10.2 Answering the telephone

Call in the finger from left to right sliding green button can answer the call

10.3 End call

Call in the finger from right to left sliding red button resisted calls; Phone calls from right to left fingers sliding red button to end the call.

10.4 New contacts

1. Click "dialing" icon;
2. Click "address book" label;
3. Press the "Menu" button;
4. Click "new contact";
5. Input contact information;
6. Click "finish"

11 E-MAIL

This machine can receive from POP3 or IMAP E-mail account information. Must be able to support as many as five E-mail account.

11.1 login E-mail

1. In the menu interface find and click on the Email icon,
 2. In the pop-up Settings wizard page input corresponding information click on the "next";
 3. Select "pop3 account type";
 4. Safety type choice "SSL/TLS, click next
- In the outgoing server Settings interface, will port into "25" click next into the next page surface, until finish.

11.2 Add email accounts

1. Login Email, click on the "menu button", click "Settings"
2. Click on the screen upper right add "account" into the new interface,

In the pop-up Settings wizard page input corresponding information until completion.

The application can automatically set some ordinary mail server. Before enter the inbox, set sent mail shows name, upon completion of the above steps, click "next" into the inbox.

If the account is not automatic Settings, according to clew input mail server address, protocol and other account information. After verifying the account set up later, click "next" into the inbox.

11.3 Delete email accounts

Delete has set up good POP3 or IMAP email accounts;

1. Enter the email, click on the "menu button";
2. Click "Settings";
3. Click "delete account";
4. Click "ok".

12 Memory card

Memory card store music and pictures and other documents, the use of camera and download information from the network when they need to insert the memory card in advance.

12.1 Local memory setting

In the transport documents before, just put the equipment through the USB cable and computer connection, enable "USB debugging", they can't directly access through the pictures or music, want to visit pictures or music, need to disconnect USB cable

12.2 Copying files to the memory card

1. Use USB cable to the machine and computer connection;
2. Click "status bar";
3. Click "USB has connection";
4. Click "open USB storage devices"

In the computer find and open the "my computer", and click "removable disk" into, can be in memory card and computer between copy file. Folder to a photo album form appeared in the pictures folder.

12.3 Delete files on memory card



1. Find you want to delete the file;
2. Long click "file name";
3. Click "delete"

12.4 Check space of memory

1. In the main screen, click on the "menu button";
2. Click "Settings";
3. Click "save"..

13 Recorder

13.1 Recording operation

1. In the main interface click "recorder" icon;
2. Click on  the button to recording;
3. Click on  Key end recording.

13.2 Look record files

Recording view path has two kinds:

1. Through the file manager path view
 - 1) in the main interface click "file manager" icon to view;
 - 2) click contains "recording" documents;;
- 2) in the pop-up "choose file type" interface can choose operation
2. Through the music path view
 - 1) in the main window click on the music icon click the play list after
 - 2) click "my recording" into my recording interface view

13.3 Delete record files

1. Find you want to delete the file;
2. Long click "file name";
3. Click "delete".

14 Music

Music is divided into four categories: artist, album, songs and play list. Press the corresponding icon into the corresponding classification check list. For example, select the "artist" category, can see from A to Z order artist name list. If you chose an artist, then presents the artist album and the album's songs list.

This machine can play the music file format:

- *MP3
- *M4A(iTunes AAC, DRM-free)
- *AMR
- *MIDI
- *WAV
- *OGG Vorbis

14.1 Access music files and play

1. Into the main interface, click on the "music" icon;
2. Click "songs", "the artist", "album" or "playlist" one of them to further choose songs;
3. Click "songs" play.

14.2 Add new songs to playlist

1. Enter the music player, click to add songs;
2. Click "menu button";
3. Click "add to playlist";
4. Click "new playlist";
5. Enter the name of the playlist;
6. Click "save";

14.3 Delete playlist

1. Enter the playlist, long press to delete the playlist;
2. Click "delete".

15 Setting

15.1 WIFI Setting

WI - FI network access operation steps are as follows::

1. In the main window, click "Settings"
2. Will WIFI open;
3. Click to connection WI - FI network;
4. If you need, in the pop-up dialog box password and click "connect".

15.2 Ethernet setting


In the use of Ethernet before equipment use adapter connected to the network terminal, WI - FI closed. Ethernet setting operation steps are as follows:

1. Enter the "Settings" click "more"
2. Click "Ethernet";
3. Check the box "use of Ethernet";
4. Then click save.



16 Cameras and video cameras

This equipment has the photographic function, can shoot photos and video.

16.1 taking photographs

1. In the main window click on the "camera" icon;
2. Click  to photograph.

16.2 Make a movie

1. In the interface click "camera" icon;
2. Select camera;
3. Click  to shoot the film;
4. Click  stop filming.

17 Ultra clear player

Ultra clear player can play video and see the picture, in the main interface click "ultra clear player" icon into

17.1 Video play

In the main screen, click on the ultra clear player icon, click again to watch the video, then starts to play the film.

Function of keys

"▶/||": play or pause current movie

◀/▶: shot press to play the last /next movie, long press for fast rewind / forward;

◀/▶/▶: press it to volume up or down

"↶" key: short press it to return to the upper interface

17.2 Check pictures

Enter the ultra clear player interface, click to see pictures can (when the memory card store more files, may need some time to load picture)

18 G-mail

In accordance with the theme of Gmail email classification. Check mail choose corresponding theme, the most recent information dialog appears at the bottom. Not the number of reading information will be displayed in the title bar, unread mail to overstriking format display. If for some information added mark, mark appear in time above a colored rectangle box.



18.1 Read the new information

You can through the Gmail account to collect mail.

For the first time on G E-mail account and password when need to fill out, (if there is no need to apply for a GMAIL account), then login simply click on GMAIL icon to.

1. Into the main interface, click on the "Gmail";
2. In an email inbox click read.

18.2 Write Message


1. Enter the G E-mail mailbox;
2. Click ;
3. In the bar enter the recipient's E-mail address;
4. Input theme and information content;
5. If you want to add attachments, click  select add attachments for;
6. Write after the completion of the click "send".

19 Instant message

19.1 Visit Google Talk

If registered G E-mail account, can use Google Talk to friends instant messaging.

Open the Google Talk:

1. Into the main interface, click on "Google Talk";
2. Click "Talk" enable;
3. Click on  in the popup dialog input corresponding information until complete (the other is Gmail account);
4. Success can be added after the chat.

20 Web review

20.1 Into menu

1. In the main screen, click on the "application";

2. Click "browser".

20.2 Change your home page

1. According to enter the browser "Menu button";
2. Click "more";
3. Click "Settings";
4. Click "Settings page";
5. Input the website, and click "ok".

20.3 Visit web

1. According to enter the browser "Menu button";
2. Click on the "web site input field";
3. Input the website;
4. Click on the "go to".

21 Android electronic market

Electronic market has gathered a large number of free software, free from download interesting games and some useful software.

21.1 Browse

Can use the Android electronic market browse, search and download is suitable for the Android mobile equipment related products, if you want to visit the electronic market in the specific service, need to provide relevant information

Access operation:

1. In the main screen, click on the "application";

2. Click on the "electronic market" into;
3. His fingers on the table to the left, you can choose to sliding interface "hot free", "hot free product" and "rise fastest" options for operation, on the table to the right, you can choose to sliding interface "category" option for operation.

Note: in child category of all projects in a TAB chart shows out. Through the popular classification of the project, from the most popular items in not too popular project an arrangement, and through the date, the classification of the project from the latest to a old project arrangement out.

21.2 installation

1. Enter the market;
2. Browse and choose to setup project;
3. Click "download";

* in choosing "download", click "accept download" the project immediately began to download.

4. Download after completion of the click "start" to enter the game.

Important: if a software for access or control the machine function, continue to before, the system will appear a screen, "the software will visit what program", at this time to make a decision. Be sure to read carefully! Beware of can visit many functions or a large number of data of software! When you click on the screen "confirm" button, for the move by the consequences of responsible for!!

"Electronic market" all the support software by developers, developers can provide information on each software details page to find.

22 Take good care of the machine

This machine is a complicated electronic equipment, and even can be used as a PC. These tips can help prolong the machine service life.

* The best equipment in a safe place, away from the water to protect the machine and accessories;

* Use only the original factory production of accessories. Without permission of the parts is likely to damage the unit, shorten the life;

* Avoid any pressure from high, slide, etc., don't forced to run the machine.

22.1 Safety warning

If you are a wear a cardiac pacemaker or hearing aid user, please go to the doctor advice, to ensure the safe use of the machine. If you have cellular radio frequency and any other electronic equipment will influence each other and so on questions, please ask equipment manufacturers, the radio frequency will affect the performance of the equipment.

23 The machine accessories

A charger, a fashionable portable shell or other interesting add-in. Please contact mobile phone manufacturers to buy to enjoy more perfect service