


# POVOS® 奔腾

PR5021/PR5022/PR5023

Hot air styler

卷发造型器




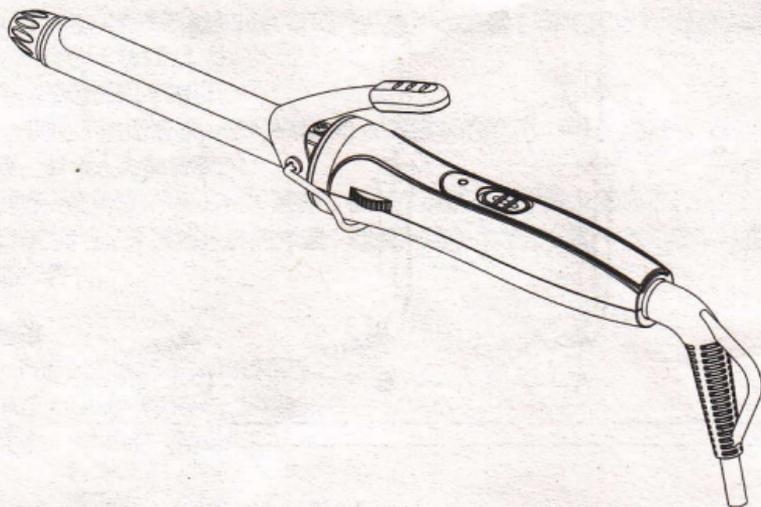


Operating instructions

使用说明书

Before operating this unit, please read the instructions completely and save them.

在使用前，请仔细阅读此说明书并妥善保管。

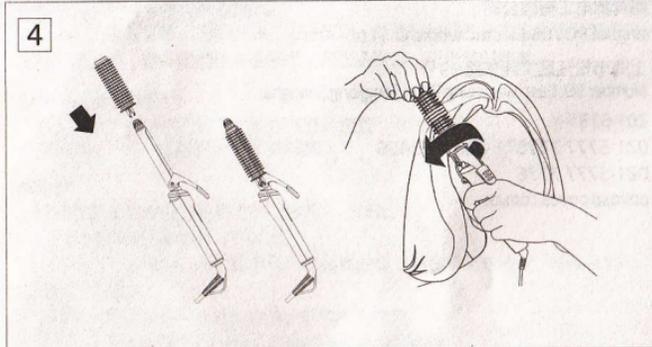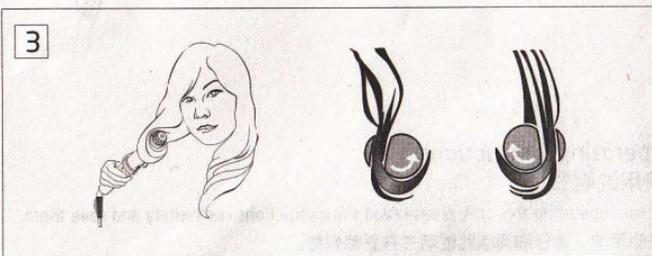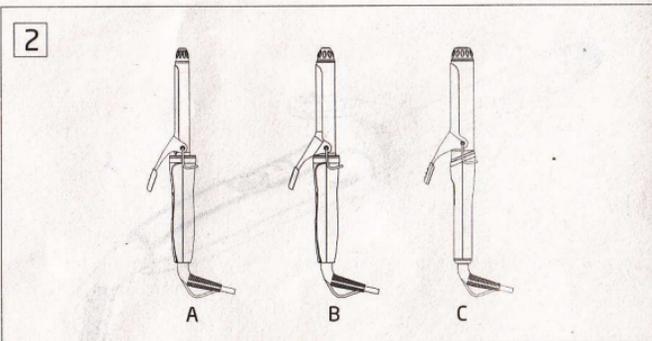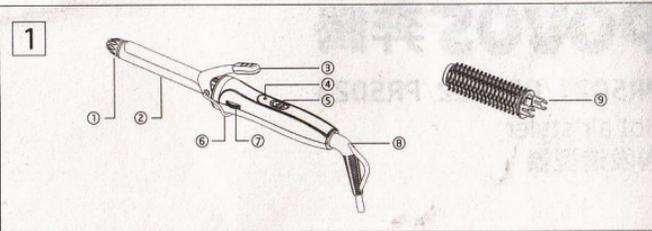

Thank you purchasing the POVOS hot air styler. Our products are designed to meet the highest standards of quality, functionality and design. We hope you enjoy your new POVOS hot air styler. Before operating this unit, please read these instruction completely, please keep the manual for handy reference.

**Parts identification (see fig.1)**

- |                  |                     |                               |
|------------------|---------------------|-------------------------------|
| ① Cool tip       | ② Tong with clamp   | ③ Tong opener                 |
| ④ Light          | ⑤ Switch            | ⑥ Stand                       |
| ⑦ Adjusting knob | ⑧ Swivel power cord | ⑨ Slide-on brush(PR5021 only) |

**Before use**

- Hot air styler is suitable for mains voltage 220V-240V~ 50Hz.
  - Hot air styler switch in "O" status. Through different models of choice, you can adjust the hair curling you professional, personalized service. (see fig.2)
- A PR5021 (Tong with clamp diameter 19mm); suitable for creating small hair styling.  
 B PR5022 (Tong with clamp diameter 25mm); suitable for creating moderate hair styling.  
 C PR5023 (Tong with clamp diameter 32mm); suitable for creating large hair styling.

**How to use (see fig.3)**

- Take out the protective cap, and connect the plug to a power supply socket.

- Switch hot air styler on by pushing the switch to " — ", The working indicator is light, hot air styler heats up.
- After approximately 120 seconds, the minimum styling temperature is reached and you can start using the appliance.

- Section your hair off. Starting at the hair tips, clamp a section of hair (strand of 3-4 cm max.) with the tong.
- Gently wind the strand up to the roots. Allow the strand to remain curled up for a couple of seconds before unwinding it. For best results, slightly press the tong opener in order to smoothly release the strand. For better handling, you may hold the cool tip with your other hand.
- You can even straighten a strand that already has been curled by clamping the strand at the roots again and then letting the appliance glide slowly and carefully along the strand towards the hair tips.

**Important:** To get professional styling results, it is essential to prepare your hair for curling. Dry your hair properly with a hair dryer and comb or brush it so that it is untangled and smooth.

**Adjustment knob function**

- The open after the curl modelling through promoting adjustment knob, can regulate the rollers temperature.
- Adjust knob all 7 archives, temperature in 120 °C-200 °C between, you can according to their own needs to adjust temperature.

**Styling with the slide-on brush (PR5021 only see fig.4):**

- Slide the brush onto the barrel of the appliance.
- Take out the protective cap, and connect the plug to a power supply socket.
- Switch hot air styler on by pushing the switch to " — ", The working indicator is light, hot air styler heats up.
- Take a lock of hair and wind it round the brush. Make sure the end of the lock is wound in the required direction.
  - Do not make the locks too thick.
  - Do not wind a lock of hair more than twice round the brush.
  - When unwinding a lock of hair, make sure that you hold the brush away from the underlying hair.
- Keep the brush in your hair for approximately 15 seconds.
- Remove the brush from the hair by unwinding the lock of hair.

**After use:**

- Hot air styler switch in "O" status. Switch off the Hot air styler and unplug it.
- Place it on a heat-resistant surface until it cools down.

- Clean the hair straightener plates by dry cloth.
- Keep it in a safe and dry place , free of dust.You can also hang it with the hanging loop.

#### Caution

- Always ensure the voltage to be used corresponds to the voltage stated on the unit.
- Always switch the Hot air styler off before putting it down , even if it is only just for a moment.
- As Hot air styler reach high temperatures, keep them out of the reach of children during heat-up , use and cool-down to avoid burnings.
- Do not unplug by pulling on the cord. Always grasp the plug and unplug it from the outlet.
- Do not use the dryer near gas or other inflammable materials ( such as benzene,paint thinner,sprays,etc. ).
- Avoid touching the hot parts of the straightener.
- When hot , do not place on surfaces that are not heat-resistant.
- There is electric components inside the handle , so when you use it please draw straight the handle parts and make sure the appliance can not toucher when shower or SPA.
- The hot air styler is not recommended to use in bathroom. When used in a bath-room unplug the appliance after use since the proximity of water presents a risk even when the hair straightening irons is switched off. For additional protection , we advise you to install a residual not current device ( RCD ) with a rated residual current not exceeding 30A in the electrical circuit supplying the bathroom. Ask your installer for advice.
- Do not wind the mains cord round the hot air styler.If the mains cord is damaged, you must have it replaced by POVOS, a service centre authorised by POVOS so on in order to avoid a hazard.
- Do not use the hot air styler irons with wet hands or in the bath or shower.
- This hot air styler is not intended for use by children or persons with reduced physical , sensory or mental capabilities, or lack of experience and knowledge , unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Only use the hot air styler on dry hair. Do not use the straightener on artificial hair.
- Don not apply any accessories that is not offered by POVOS onto this appliance.



**WARNING:Do not use this appliance near bathtubs, showers,basins or other vessels containing water.**

#### Guarantee & service

- We grant two years guarantee on the product commencing on the date.
- Within the guarantee period we will correct,free of charge,any defects in materials or workmanship , either by repairing or replacing the complete appliance as we may choose.
- To obtain service within the guarantee period,hand in or send the complete appliance with your sales receipt to an authoriaed POVOS Customer Service Centre.  
This guarantee does not cover:  
(1)Damage due to improper use.  
(2)Normal wear or use as well as defects that have a negligible effect on the value or operation of the appliance.  
(3)The guarantee becomes void if repairs are undertaken by unauthorized persons and if original POVOS parts are not used.

#### Technical specifications

Model NO :PR5021/PR5022/PR5023

Power source :220V-240V- 50Hz

Rated power :PR5021 20W

PR5022 30W

PR5023 40W

This product is intended for household use only.

The unit is applied to the Chinese standard GB4706.1,GB4706.15,GB4343.1 and GB17625.1