

Rechargeable Spotlight With Electronic Mosquito Killer

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed. To reduce the risk of fire, electrical shock or injury, please read and understand all instructions before using the spotlight.

WARNING

- Close supervision is necessary when any appliance is used by or near children. Do not allow to be used as a toy.
- To protect against risk of electrical shock, do not put unit or charger in water or other liquid.
- Do not put this unit in a fire or near any flammable object as this may cause explosion.
- Do not operate any appliance with damaged cord or charger or after this appliance malfunctions, is dropped into water or is damaged in any manner. Return the appliance to any authorized service facility.
- Do not abuse the cord. Never carry the charger by the cord or yank to disconnect from an outlet; instead grasp the charger and pull to disconnect. Keep cord away from heated surfaces. Do not pull cord around sharp edges or corners.
- Do not allow the cord to hang over the edge of a table or counter or touch hot surfaces. The unit should be placed or mounted away from sinks and hot surfaces.
- Do not use an extension cord. Plug the charger directly into an electrical outlet.
- Do not use excessive force on the product as it may cause permanent damage to the unit.
- Use the charger only in a standard electrical outlet.
- Do not attempt to use the charger with any other product; do not attempt to charge this product with any other charger. Use only the charger supplied by manufacturer to recharge.
- Unplug the charger from outlet before any routine cleaning or maintenance.
- Always keep the lantern fully charged when not in use. Fully recharged, the battery can be stored for up to 3 months without recharging. Storage of the lantern for more than 6 months without recharging can damage the battery.
- It is important to recharge the lantern as soon as possible after each usage.
- Do not shine directly into eyes.
- The sealed battery in this must be recycled or disposed of properly.
- The car plug adaptor is suitable For 12V USE ONLY.
- Do not TOUCH inside the high voltage net.

PRODUCT FEATURES

- 5W LED spotlight, with 2 brightness modes
- Built-in 360° mosquito killer devices
- No use of polluting chemicals
- Equipped with rechargeable Li-ion battery
- Dual rechargeable, either AC/DC charger or
- 12V DC car plug charger
- Over-charge/ Over-discharge/ Short circuit protection
- Battery service time around 7 hours for high brightness; 22 hours at standard brightness; 8 hours at standard brightness; mosquito killer devices.

OPERATION

- Push the handle button and turn the handle to upper or lower position. Upper pistol profile for pin pointing long range objects, lower lantern profile for searching around.
- Charge the battery prior to initial use. (see RECHARGING THE BATTERY)
- Turn the lantern ON and OFF by the switch on the main body. ON → Standard brightness mode → High brightness mode → mosquito killer devices → OFF

RECHARGING THE BATTERY

- Before recharging the battery, turn the function switch to off position.
- Before using the spotlight for the first time, charge the battery for 11 ~ 13 continuous hours using the AC battery charger.
- Plug the AC charger unit into any electrical outlet, and plug the other end of cord adapter to the DC jack of the spotlight. The Red LED lights on to indicate the charger is working. When the battery is fully charged, green LED will illuminate, the time required to fully charge the battery is around 11 ~ 13 hours.
- Plug the car plug charger unit into the cigarette lighter socket on your car, and plug the other end of cord adapter to the DC jack of the handle of spotlight. The Red LED lights on to indicate the charger is working. When the battery is fully charged, green LED will illuminate, the time required to fully charge the battery is around 21 ~ 23 hours.
- It is important to recharge the spotlight as soon as possible after each usage.
- Do not completely discharge battery before recharging. Deep discharge will decrease battery life.
- To ensure the battery will not be fully exhausted when the lantern is not in use or in storage, recharge the battery every 3 months.
- If operating time decreases significantly, a replacement battery is recommended. To replace or obtain a new battery, contact your local Authorized Service Center.

NOTE

- To assure product SAFETY and RELIABILITY, repairs, maintenance and adjustment should be performed by authorized service centers or other qualified service organizations, always using identical replacement parts.
- Make sure the spotlight is completely dry before using it.

MAINTENANCE

Use only mild soap and damp cloth to clean the lantern. Never let any liquid get inside the lantern; never immerse any part of the spotlight into a liquid.

