

NOAIN

----- Exciting wait for your opening -----

User Manual

CONTENT

1 SAFETY.....	2
2 ABOUT YOUR DEVICE.....	4
3 GETTING STARTED.....	7
4 CALL FUNCTIONS.....	10
5 TEXT ENTRY.....	12
6 MENU OPERATION.....	13
7 MENU FUNCTIONS.....	14
8 CARE AND MAINTENANCE... 	20

1 Safety

Read these concise guidelines. Not following them may be dangerous or illegal.

ROAD SAFETY

Always keep your hands free to operate the vehicle while driving. Park your vehicle safely before using your device.

SWITCH OFF OR USE FLIGHT MODE IN AIRCRAFT

Wireless devices can cause interference in aircraft. Using them in aircraft is both dangerous and illegal. Switch off your device or switch to flight mode before on board.

SWITCH OFF IN HOSPITALS

Follow relevant regulations or rules. Switch your device off near medical equipment.

SWITCH OFF WHEN REFUELING

Switch off your device at a refueling point or near fuels or chemicals.

SWITCH OFF NEAR BLASTING

Don't use your device where blasting is in progress. Observe restrictions, and follow any regulations or rules.

INTERFERENCE

All wireless phones may be susceptible to interference, which could affect the performance.

USE PROPERLY

Use in the normal position explained in the

product documentation. Don't touch the antenna unnecessarily.

ACCESSORIES AND BATTERIES

Use only the approved accessories and batteries. Do not connect to incompatible products.

EMERGENCY CALLS

Ensure the phone is switched on and in service. Enter the emergency number, and then press the talk key. Give your location. Do not end the call without permission.

2 About your device

2.1 Appearance



2.2 Keys instruction

Keys	Descriptions
Direction key	Up/down/left/right key. It has different functions in different menus. Center key means OK.
Talk key	Press it to make a call or answer a call; At the standby mode, press it to access Call log.
Left soft key	It depends on the display text above it.
Right soft key	It depends on the display text above it.
End key	Press it to end the current call; Return from any menu to standby mode; Long press to power your device on or off;
Number keys	To input numbers, letters and special characters.
* key	In Edit Interface, press it to enter a list of symbols
# key	Long press it to switch between the current profile and the meeting profile

2.3 Icons

Icons	Descriptions
	Show the SIM1's current network signal level.
	Show the SIM2's current network signal level.
	Show the power level of Battery.
	You have unread SMS in SIM1.
	You have unread SMS in SIM2.
	You have missed calls.
	Alarm is set on.
	The headset is plugged in.
	In Profiles, Alert type is set as Ring only.
	In Profiles, Alert type is set as Silent.
	In Profiles, Alert type is set as Vibrate only.
	Bluetooth is powered on.
	The keypad is locked.

3 Getting started

3.1 Battery

Please use the approved batteries, and only use the battery charger approved by the device producer to charge your battery.

Install & remove battery

Remove: (1) Remove the back cover of the device;

(2) Uplift the battery from its slot and take it out.

Install: (1) Match the metal contacts of battery separately with the battery compartment metal contacts, and put the battery base into the slot; (2) Push the back cover to lock the cover into its place.

Charging

Connect the charger to a power supply, and then plug in the charger pin to the charger jack on the top.

Charger animation will be displayed if the device is powered off. When it is powered on, the power status icon at the top right corner of the screen will blink circularly.

Disconnect the charger from handset and power supply when battery is full.

Note:

1 During charging, don't remove or move the battery to prevent the battery circuit from burning out.

2 During charging, it is normal that the phone and charger will become heated.

3 If the battery is completely empty, it may take a period of time before the charging icon appears on the screen.

3.2 SIM card installation

Keep the metallic face of a SIM card downward, and slide it gently to the position of SIM Card.

To remove a SIM card, please power off your device first, remove the battery and slide the card out gently.

3.3 Memory card installation

Keep the metallic face of a memory card downward, and put it gently to the position of Memory card, and lock the cover.

To remove Memory card, please remove the battery first, open the cover and get the memory card out gently.

3.4 Headset

Insert the headset into the headset jack on the bottom side of the device if required.

3.5 File manager

File manager is used to manage the phone and the memory cards respectively.

1. Connect to a computer

The USB function of the device is available, no matter the device is powered on or off.

While the device is powered off, it will start charging and open File manager after the USB cable is plugged in. When the device is powered on, it will enter the "USB Config" interface automatically after the USB cable is plugged in. In the interface, select "Mass storage" to start File manager. If your memory cards are inserted, the computer will pop up removal disks, respectively representing your device and memory cards.

After you enter, you will find some preset files or folders. For the sake of normal use, please put related files into relevant directories, that is, videos into Videos, photos into Photos, records into Audio and Bluetooth received into Received. After the operation is completed, if you want to exit, click the USB icon on the lower right side of the PC desktop, select to stop the USB devices, and remove them after the pop-up warning "USB devices can be removed now" appears.

2. Format

If you format Phone or Memory card, all files in it will be deleted. You can format Phone or Memory card in two ways:

Use the phone to format directly.

Steps: Select File manager > Memory card/Phone > Format.

Use PC to format

To better complete the formatting, please follow

the following steps:

- (1) Right click My computer to select Manage > Storage > Disk management;
- (2) Right click the disk of a memory card, and select Format.
- (3) In Allocation Unit Size, select Default and then confirm.

3.6 Power on and off

Press and hold the End key to switch your device on/off.

If SIM lock or Phone lock is activated, please enter the password as required.

4 Call functions

4.1 Make a call

When the sign of a network operator appears on the idle screen, you can make or answer calls.

Make a domestic call

Enter a phone number, including the area code if you are calling a fixed phone number (excluding local numbers). Press Talk key to make a call via your desired SIM card.

Make an extension call

When making an extension call, you can press

* key to switch until the extension prefix "P" appears. After a switchboard number is dialed, the device will pause automatically for a few seconds then dial your desired extension number. Input the following one by one: Area code – Switchboard number – P – Extension number. Then press Talk key to make a call via your selected SIM card.

Make an international call

Enter the country code, the area code and the phone number. Press Talk key to make a call via your selected SIM card. "+" is required when you enter the country code. You can press * key to switch until + appears.

Make a call from Phonebook

Access Contact menu to select a contact, and press Talk key to make a call via your selected SIM card.

Redial a call by Call log

Access Call log, scroll to a desired number or name, and press Talk key to make a call via your selected SIM card.

4.2 Answer a call

When there is an incoming call, there will be reminding information of the corresponding SIM card. The caller's name or number will appear in the screen if you have activated the Caller ID Display service. At this time, you can press Talk key to answer it.

If an incoming call arrives during your operation in sub window, a new window will pop up to inform you and your operation will be interrupted. If you miss it, when you return to the standby screen, you will be reminded that there is a missed call of SIM 1 or SIM 2.

4.3 Call options

During a call, you can press the left soft key to enter Call options. The options differ according to your call status. Here below are a few of them: Hold single call, End single call, New call, Phonebook, Call history, Messages, Sound recorder, Mute, DTMF, Volume.

5 Text entry

During use, you will be required to input texts time and time again. You can input texts, letters, numbers or symbols (including punctuations).

5.1 Switch input methods

In any Text Editor, press # key to switch input methods.

5.2 English input method

Switch to ABC or abc input method. Following the sequence of letters on a key, you can press

the key once to insert the first letter on the key, twice for the second letter, etc., until the highlight is on your desired letter. Then release the key to input it.

5.3 Input punctuations and symbols

No matter what input method you are using, press * key to display a list of punctuations and symbols for you to select.

5.4 Input numbers

Switch to Numeric input method. Directly press the number keys to input numbers

6 Menu operation

6.1 Access menus

You can press the left soft key or short press OK key to view menus of all levels.

6.2 Access shortcuts

At the standby mode, press direction key to enter the shortcuts list that you set in phone setting.

7 Menu functions

7.1 Contacts

After you enter contacts, you can select a number to View; Send text messages, call, Edit, Delete, Copy, and Add to Blacklist, Phonebook settings

Note:

1. Files in File manager can be set as ring tone only after they are sent to Ring tone list.
2. When you are copying entries from Phone to SIM1/SIM2 only the names and numbers of entries will be copied

7.2 Settings

Enter this menu, but related set of commonly used menu Settings. Such as mobile phone Settings, security Settings, etc. Enter the mobile phone under the Settings menu for the time and date; standby menu display-related setting, language, input method, etc. Factory default password is 1122

7.3 Web service

Can view the insert SIM card into the menu SIM card toolbox and use the browser to surf the web.

7.4 SOS

Set up the emergency number and help text messages, when you accident, standby

interface, long press the center key, mobile phone will turn automatically dial the emergency number for you and send text messages, when you set a distress call from you emergency contact, each other tight at the bell will stop after pick up the phone.

7.5 Call log

You can view the missed call, dial the telephone, has to answer the phone and other related records; Into the phone Settings can be set up call waiting, call forwarding, call restriction function, and can be on the blacklist, automatic redial, talk time tips, response patterns of use and Settings.

7.6 Tools

7.6.1 Bluetooth

The device supports Bluetooth. You can establish connections between the device and other devices (Bluetooth headset, PC or handheld Bluetooth device etc.) to realize voice calls, data exchange, data synchronization etc. Settings are as follows:

- Power: Activate or deactivate Bluetooth.
- Visibility: Set whether Bluetooth of the device can be found or not.
- My device: Display the current or once connected device, and inquiry new ones.
- Search audio device: Search for a Bluetooth

headset and pair it.

—My name: Display online Bluetooth devices

7.6.2 Calendar

Select a calendar can enter the month calendar interface. Left key options for review, jump to the specified date, and switch to today, such as the week view and lunar operations.

7.6.3 Calculator

The device can be used as a calculator to do some simple arithmetic work.

7.6.4 Torch

Enter Torch > on to activate Torch. The torch on top of the device will be turned on for illumination.

Enter Torch > off to activate Torch. The torch on top of the device will be turned off for illumination.

7.6.5 Alarm

Enter the alarm interface, a total of five alarms, default values are set to close. Choose one of the alarm clocks, can undertake relevant Settings.

7.7 Message

7.7.1 Write message

Access this menu to edit and send SMS. When you are writing a message, you can insert template, number or name. After a message is completed, you can select to send from or save to SIM 1 / SIM 2.

7.7.2 Inbox

View all received SMS messages.

When there is a new message in SIM1 or SIM2, the device will play the preset message tone and the corresponding unread message icon will appear on top of the screen. You can tap and view the new message, or enter Inbox to read it.

After the message is read, you can press Options to View, Forward, Delete, and Advanced.

7.7.3 Drafts

In Drafts, you can view the saved SMS messages. You can select one to Send, Edit or Delete.

7.7.4 Outbox

In Outbox, you can view the uncompleted saved sent SMS messages. You can select one to Resend, Edit or Delete.

7.7.5 Sent messages

In Outbox, you can view the saved sent SMS messages. You can select one to Resend, Edit or Delete.

7.7.6 Message settings

Text message:

Access this menu to configure the following settings of SIM 1 or SIM 2: Profile settings, Common settings, Memory Status and Preferred Storage, SMS blacklist: You can set its Status and Blacklist number here. If the

status is set on, messages from numbers in the list will be blocked. If the status is set off, all the messages will be received normally.

Multimedia message:

Access this menu to configure the following settings: Compose, Send, Retrieve, Filter and Sever profile.

7.8 Media

7.8.1 Camera

Enter the camera and press the OK key to take photographs. Left function key to enter the details list, can be set up respectively for photo albums, camera, photographs, white balance, contextual model, storage location and restore the default values, and so on.

7.8.2 Photos

In Album, you can operate on a photo: View, Image information, Browse style, Send, Use as, Rename, Delete. Whether your operation can be done successfully is subject to such factors as the screen size etc.

In addition, when viewing a photo, you can press the left key and right key in the next photo.

7.8.3 Music

Music played into the interface. Press the function key into the list, select a music, press the function key options, select play, detailed information, update playlists, Settings, and so

on. This function allows you to easily change like listening to music.

7.8.4 VTR

Into the video, press the OK key and right function keys to stop keep in videos.

7.8.5 Movie

Into the video player, select a video file, press the function key to choose options that can be played, send, rename, delete, delete all files and operations such as sorting way.

7.8.6 Recorder

Into the audio interface, the left key options: a new recording, lists, and set up three sub menu. Select list a recording file, the left key options, can play, add, rename, delete, used and send operation.

7.8.7 EBook

This menu provides you with e-book reading, you can download the TXT documents e-book reading for entertainment.

7.8.8 FM

Into the radio interface, press the button to play or stop playback, press the left and right navigation key select radio frequency, press the function key options for the following: the channel list, manual input, automatic search and Settings.

7.8.9 File

Enter this menu can be opened, a new folder, rename, formatting, and so on.

8 Care and maintenance

Your device is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you protect your warranty coverage and enjoy your device for many years.

Do not use or store the device in dusty, dirty areas.

Do not store the device in hot/cold areas.

Do not contact the device by wet hands while charging. The electric current may strike and damage it.

Do not attempt to open the device other than as instructed in this guide.

Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.

Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device.

Do not paint the device.

If any device is not working properly, take it to the nearest authorized service facility for service.