# Content

- 1. PREFACE
- 2. WARNINGS
- 3. GETTING STARTED
- 4. YOUR PHONE
- 5. File Manager
- 6. PHONE BOOK
- 7. CALL CENTER
- 8. MESŞAGING
- 9. MULTIMIDIA
- 10. ORGANIZER
- 11. SETTING

#### 1. PREFACE

Thank you for purchasing this cellular phone. To guarantee your cellular phone works properly, please follow the instructions in this manual to prevent any possible incidents or malfunctions. Follow all safety warnings to avoid injury or property damage.

## 2. WARNINGS

Not following these simple guidelines may be dangerous or illegal. Read the complete user guide for further information.

## 2.1 TURN ON SAFELY

Do not turn on the phone when wireless phone is prohibited or when it may cause interference or danger.

# 2.2 ROAD SAFETY

Obey all road safety laws. Always use both of your hands to operate the vehicle while driving.

#### 2.3 INTERFERENCE

All wireless phones may be sensitive to interference, which may affect performance.

#### 2.4 TURN OFF IN HOSPITALS

Follow all restrictions. Turn off the phone near medical equipment.

#### 2.5 TURN OFF ON AIRCRAFTS

Follow all restrictions. Wireless devices can cause interference on aircrafts.

#### 2.6 TURN OFF WHEN REFUELING

Do not use the phone at/near refueling stations. Do not use near fuel or chemicals.

#### 2.7 ENHANCEMENTS AND BATTERIES

Use only appropriate enhancements and batteries. Do not connect incompatible products.

#### 2.8 WATER-RESISTANCE

Your phone is not water-resistant. Keep it dry.

#### 2.9 BACKUP COPIES

Remember to make back-up copies or keep a written record of all important information stored in your phone.

## 2.9.1 CONNECTING TO OTHER DEVICES

When connecting to any external device, read its user guide for detailed safety instructions. Do not connect with incompatible products.

#### 3. GETTING STARTED

#### 3.1 SIM Card Installation

When you subscribe to a cellular network, you will receive a plug-in SIM card complete with your subscription details, such as your PIN, and available optional services.

Caution: Do not bend or scratch your SIM card. Avoid exposing your SIM card to static electricity, water, or dirt.

Tips: Face the gold color contact point of SIM card towards the cell phone and push the SIM card into the slot.

## 3.2 Battery Installation

Caution: Install according to the illustration above to avoid breaking the battery connectors.

## 3.3 Charging the Battery

Insert the charger; the flash symbol on the charger plug must face upwards.

Connect the charger to a standard wall outlet and the battery power icon in the up-right corner of the screen will start scrolling. When the battery bar stops scrolling, the battery charge is complete. Press the two sides of the charger plug and disconnect the charger from the phone.

#### 3.4 T-flash Card

Insert the T-Flash card into phone. This will expand the Flash memory of the phone. Tap Multimedia menu, you can browse MP3, MP4, picture, etc.

## 3.5 USB Cable

You can transfer and store files, such as MP3, MP4 and pictures from PC, through USB cable, to the U-disk in phone or identified SD card that is inserted.

## 4. YOUR PHONE

#### 4.1 Making a Call

In standby mode, press left softkeys to input phone number to dial phone number. When you finish inputting phone number, press the dial key, SIM2 key to make a call. If you're making a long distance call, add the area code preceding the telephone number. During a call, you can press navigation keys to adjust volume. Press left soft key to access Options.

#### 11. SETTING

11.1 Dual SIM settings In the submenu, you can select Dual SIM open, Only SIM1 open, Only SIM2 open or Flight mode.

11.2 Phone settings Enter the "Phone settings" submenu.

Here you can make the following settings.

11.3 Time and Date This menu includes options for setting the time and the date.

Set time zone there are many international city for select. Set time/date setup the clock and date of the phone.

Set format setup the time to 12-hour or 24-hour format.

11.4 Language Setup the phone language. It contains a number of national language.

## 12. EXTRA

## 12.1 Bluetooth

You can connect your phone to the compatible device through Bluetooth wireless technology; the longest distance is 10 meters. Because it is through radio waves to communicate, so your phone and other Bluetooth devices are not required to keep face to face. but it may interfered by the wall and other electronic equipment. In some areas, it may be limit to use the Bluetooth wireless technology, please consult local department or network service provider.

Notice: use the Bluetooth wireless function and running other applications in the background, these features may faster consume the battery voltage, and short the battery life.

Please refer to the actual phone.

operation.

8.3 Drafts The drafts box storage the SMS which not yet ready to send, you can revise and send again.

8.4 Outbox Enter into the Outbox to view the message which you save in the phone (SIM card1/ SIM card 2/ Phone), also included failed to sent messages.

8.5 Templates Press "OK" key to enter into the template list, you can edit, delete or create new message while you selected the template.

## 8.6 SMS settings To set parameters of SMS

8.7 MMS (MMS) Multimedia messaging services, the most outstanding feature is that it can support multimedia message functions. It can send text, sound, picture message etc.

#### 9. MULTIMEDIA

Press center key to main menu. You can see some icons, and you can press the icon, enter the menu.

9.1 Camera: Press camera icon in the main menu select the function. The photo can be previewed in the screen; press OK key to shoot and right soft key to back, left soft key to access Ontions. Use navigation keys, you can choose and enter the functions list on screen

9.2 FM Radio Enter FM radio (insert earphone). Press left/right key to change frequency, press side key to adjust volume. Press the left soft key to access Options.

#### 10. ORGANIZER

10.1 Calendar Enter into the calendar menu, to see the schedule, new issues, skip to the specified date, to view a week and the operation of Lunar New year.

Notice: Lunar will not display while setting the phone language to English.

10.2 Alarm The phone can setup 3 alarm clocks (still effective while the phone is switch off), the default settings is off. Select anyone of the alarm clock, press ok key to select edit to setup.

10.3 World clock Enter into the world time menu; the screen will display the world time zone map, View current time of corresponding zone of various countries in the world through left right key.

# 4.2 Emergency Service

You can dial an emergency call without the SIM card. Contact your service provider to get the emergency call number.

## 4.3 Answering a Call

When you receive a call, the phone will ring or vibrate and will display an incoming call indicator. Press the dial key, key to answer. Press left soft key to access options.

## 4.4 Rejecting/Ending a Call

Press end key to reject an incoming call or end current call.

# 4.5 Keypad Definition

- · CENTER key: To enter main menu
- · Dial key: Dial the number or answer calls
- End key: Cancel or reject calls; by long pressing can turn on/off the phone

## 5. FILE MANAGER

Enter this menu; you can check the files store on T-flash card. Press left soft key, you can do options.

#### 6. PHONE BOOK

You can store contacts' personal information and numbers while also search for previously stored contacts. Press left soft key to access Options.

## 7. CALL CENTER

In the call history menu, you can check dialed calls, received calls, missed calls, rejected calls, delete all, check call time and call cost

## 8. MESSAGING

8.1 Write message Please setup the correct message center number before creates the message.

Enter into the create message sub-menu to create the message, press "confirm" key to enter into the "Options" menu. You can access the Send to, Insert template, Insert number, Insert name, Insert bookmark, Save to Drafts, Input method, Add Input Method on the text editing and set operations.

8.2 Inbox Enter into the inbox sub-menu to check the received message in the SIM card 1, SIM card 2.Press "OK" key to enter into the menu. The information you can Reply, Call sender, Forward, Delete, Delete all, Use number, Advanced, Edit options