

atongm

H3

Warnings

Not following these simple guidelines may be dangerous or illegal. Read the complete user guide for further information.

TURN ON SAFELY

Do not turn on the phone when wireless phone is prohibited or when it may cause interference or danger.

ROAD SAFETY

Obey all road safety laws. Always use both of your hands to operate the vehicle while driving.

INTERFERENCE

All wireless phones may be sensitive to interference, which may affect performance.

TURN OFF IN HOSPITALS

Follow all restrictions. Turn off the phone near medical equipment.

TURN OFF ON AIRCRAFTS

Follow all restrictions. Wireless devices can cause interference on aircrafts.

TURN OFF WHEN REFUELING

Do not use the phone at/near refueling stations. Do not use near fuel or chemicals.

USE SENSIBLY

Only qualified personnel may install or repair this product.

ENHANCEMENTS AND BATTERIES

Use only appropriate enhancements and batteries. Do not connect incompatible products.

WATER-RESISTANCE

Your phone is not water-resistant. Keep it dry.

BACKUP COPIES

Remember to make back-up copies or keep a written record of all important information stored in your phone.

CONNECTING TO OTHER DEVICES

When connecting to any external device, read its user guide for detailed safety instructions.

Do not connect with incompatible products.

Content

Keypad Descriptions.....	5
Start to Use.....	5
Charge the Battery.....	6
Use Touch Screen.....	6
Make a Call.....	7
Answer a Call.....	7
Emergency Service.....	7
Display the Keyboard.....	8
Choose an Input Method.....	8
1. Browser.....	8
2. Calculator.....	8
3. Calendar.....	8
4. Camera.....	8

5. Clock.....	9
6. Email.....	9
7. FM Radio.....	9
8. Messaging.....	10
9. Music.....	10
10. People.....	10
11. Settings.....	11
12. Sound Recorder.....	12
13. Video Player.....	13
Widgets.....	13
Accessories.....	13
Care and Maintenance.....	13

Keypad Descriptions

Key	Description
PowerKey	Long press the key to turn on the phone. In the power on status, press the key to lock keypad and screen; long press the key to show phone options.
Option Key	Press the key to enter option menu.
Home Key	Press the key to return to standby mode. Long press the key to show recent list.
Back Key	In the menu mode, press the key to go back to upper menu.
Volume Keys	To adjust incoming call ringtone volume. During a call, playing music, video, or listening to radio, press the keys to adjust volume.

Start to Use

Install Memory Card, SIM Card and Battery

When you apply for a network, you will get a plug-in SIM card. SIM (Subscriber Identity Module) card that contains phone number, service projects and can be used to store phone numbers and personal information.

Attention: Do not bend or scratch SIM card, do not let it contact with static electricity, dust or water.

Keep all SIM cards where children cannot reach or touch. Note: Keep the SIM card chip contacts face downward. Make the SIM card fits card slot.

Remove Memory Card, SIM Card and Battery

Note: If the phone is turned on, long press Power Key about 10 seconds until it tips phone options and select Power off and then press OK to turn off the phone. Then, remove SIM card and memory card.

Do not plug or remove memory card in boot state, otherwise it will cause damage to the file system.

Charge the Battery

1. Plug one end of the charger into phone.
2. Connect another end of the charger to the socket.
3. Start charging. It can be charged whether power on or power off.
 - In power on state, when the battery icon on screen start rolling means it is been charged. When the icon is full and stop rolling means charge is completed.
 - In power off state, the battery icon on screen start rolling means it is been charged. When the icon is full and stop rolling means charge is completed.
4. Unplug the charger from the socket.
5. Disconnect the charger and phone.

Use Touch Screen

Press: Use finger to press the desired option to confirm selection or start an application.

Long press: Long press the screen in current operation interface, icon, or input area; you can open the option menu in current interface.

Slide: Slide the finger on screen horizontally or vertically. For example, slide the screen in standby mode or main menu horizontally to change menu page.

Drag: Use finger to long press desired item, drag it to anywhere on screen. For example, you can drag the icon in main menu to standby screen.

Make a Call

1. In standby mode or in main menu, press the dial icon to enter dial panel, press numbers on screen to enter phone number.
2. Press dial icon at bottom and select SIM card to dial the number.
3. Press end icon to cancel the call.



You need to unlock the phone if the keypad and screen is locked.
You can make calls through call log, contacts, and messages.
During a call, press Volume Keys to adjust the volume.
Your phone supports intelligent dial. When input numbers, the phone will search the corresponding contact in phonebook or call log.

Answer a Call

When there is an incoming call, you can:

- Drag the icon toward right to answer the call.
- Drag the icon toward left to decline the call.
- Drag the icon upward to reject the call with SMS.

Emergency Service

You can call emergency service number directly without SIM card. Different networks using different emergency numbers, please query your network operator.

Display the Keyboard

To enter text, use the onscreen keyboard. Some applications open the keyboard automatically. In others, touch a text field to open the keyboard. Press Back Key to hide the keyboard.

Choose an Input Method

Your phone has the built-in input method. In edit mode, flick down notification bar and press Choose input method to change input method.

1. Browser

You can use your phone to access Wireless Application Protocol (WAP) sites and use WAP-based services. To browse WAP pages, you must subscribe to the data service from your service provider and configure your phone's relevant settings.

Select the website list on screen or input URL in address bar to visit.

2. Calculator

The calculator can execute simple calculations. Slide the screen toward left or right, you can change the calculator in Basic panel and Advanced panel.

3. Calendar

In the calendar, you can check schedules for current month. It has alarm for the date with schedule. Select one date to check all schedules for that day, or you can edit or delete the schedules.

4. Camera

By using the camera application, you can take photos or records for around people or events anytime. Press the Camera icon in main menu to enter. Press the shoot icon or record icon to take photos or records.

Press the icons on screen or Option Key to set parameters of the camera or recorder.

5.Clock

In the clock interface, you can check time and date. Press the alarm icon, you can add new alarm clock or turn on/off existed alarm clocks.

In the clock interface, you can also press the icons to enter more options.

6.Email

You can use Email to send and receive emails.

Setup Email Account

According to the tips on screen to input email address and password, and press Next. You can press Manual setup to setup server information manually.

Check Emails

In the Inbox, select the email you want to check to enter. Press the icons at bottom to delete, reply, add to favorite.

Compose and Send Email

In the Inbox, press new mail icon to create new email. Input receiver email address, subject, and content, and then press send icon to send the email.

Delete Accounts

In the Inbox, press Option Key to select Settings. Select the account you want to delete and then select Remove account in the option list. Press OK to confirm and delete the account.

7.FM Radio

Select FM Radio in the main menu and plug earphone to enter. Press Power icon to turn on/off the radio. Press setting icon and select Search, the phone will search available channels and save in the list. Press the icons on screen to operate the FM radio.

8.Messaging

Select Messaging in the main menu or standby mode to enter. Select new message icon at left down corner to create new SMS or MMS and send.

1. Enter receiver's number or add number from contacts.
2. Press "Type text message" to input message content.
3. If you want to send picture or video file, press + to add pictures, videos and audio. The message will shift to multimedia message automatically.
4. Press send icon and select SIM card to send the message.

9.Music

Select Music in main menu. Press Artists, Albums, Songs, and Playlists at the top of screen to change category. Select one audio file to play the music. Press the icons on screen to operate the audio player.

10.People

In the People, press search icon to search contact, press add new icon to add new contact. Press Option Key to enter:

Delete Contact

Select one or more contacts, then press OK to delete all selected contacts.

Contacts to Display

Select All contacts, contacts on SIM card, Phone, or Customize the contacts to display.

Import/Export

Copy the contacts from SIM cards, phone, phone storage or SD card, and then select location to copy.

Accounts

Select whether to Auto-sync app data.

Settings

To set display options of Sort list by, or View contact names as.

Share Visible Contacts

Select one or more contacts, press OK and then share the selected contacts via Bluetooth, Email, etc.

Memory Query

To check the memory of phone and SIM cards.

Join Contacts

You can use this function to join same contacts.

11.Settings

Wireless & Networks

In this menu, you can select and set SIM management, WLAN, Bluetooth, Data usage, under More... - Airplane mode, VPN, Tethering & portable hotspot, Mobile networks, and USB Internet.

WLAN

You can connect to a wireless LAN (WLAN), use it to access and download with high speed.

In Menu/Settings/WIRELESS & NETWORKS, slide the icon beside WLAN toward right to turn on WLAN. Press WLAN to check available WLAN networks. Select one open network, you can access to the network directly. If the network you selected is encrypted, you need to input password.

Bluetooth

The phone supports Bluetooth. It can exchange information between devices including mobile phones wirelessly. Through Bluetooth, you can sync phone and computer, exchange data with other Bluetooth devices, and can connect to Bluetooth earphone. In Menu/Settings/WIRELESS & NETWORKS, slide the icon beside Bluetooth toward right to turn on Bluetooth and set. Before transmit data, you may need to match with other Bluetooth devices.

Device

In this menu, you can set audio profiles and display, check storage and battery, and manage apps.

Personal

Location Access

Select whether to access to my location, or whether to use WLAN & mobile network location.

Security

You can select SCREEN SECURITY, SIM CARD LOCK, PASSWORDS, DEVICE ADMINISTRATION, and CREDENTIAL STORAGE in this menu.

Language & Input

Select and set Language, keyboard & input methods, speech, and mouse/trackpad.

Reset

In this menu, select Factory data reset and then select Reset phone to clear all data in the phone memory. Select DRM reset to delete all DRM licenses.

Accounts

Add Account

To add new account of Corporate, or Email.

System

Date & Time

Set time and date for the phone.

Scheduled Power On & Off

Set time to power on/off the phone automatically.

Developer Options

Use this function to do USB debugging, set stay awake, etc.

Accessibility

To set accessibility functions for the phone.

About Phone

To check status, legal information, etc.

12.Sound Recorder

The phone support sound record function, recorded files will be saved with different quality. You can send a recorded file via Bluetooth, message or email.

13.Video Player

You can use Video player to view or manage videos.

Widgets

In the widgets list, you can select desired widget to add to idle screen.

Care and Maintenance

Battery Care

- Your device is powered by a rechargeable battery. When the power is weak, please charge the battery. In order to extend the lifespan of the battery, use all the battery's power before recharging.
- Unplug the charger from the electrical plug and the device when not in use. Do not leave the battery connected to a charger more than a week. Overcharging may shorten its lifespan.
- Extreme temperatures can affect the ability of your battery to charge. Battery needs the fit temperature. If the surrounding temperature is over 40°C, the battery cannot be charged.
- Use the battery only for its intended purpose. Never use any charger or battery that is damaged. Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object such as a coin, clip, or pen causes direct connection of the positive (+) and negative (-) terminals of the battery. (These look like metal strips on the battery.) Short-circuiting the terminals may damage the battery or the connecting object.
- Leaving the battery in hot or cold places, such as in a closed car in summer or a freezer in winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 59°F and 77°F (15°C and 25°C). A hot or cold battery may not function temporarily, even when the battery is fully charged.

- Battery performance is particularly limited in temperatures below freezing.
- Do not dispose of batteries in a fire! Dispose of batteries according to local regulations. Please recycle when possible. Cellphones are not considered household waste.

Mobile phone maintenance

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will corrode electronic circuits. If your device does get wet, remove the battery and allow the device to dry completely before replacing it.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not store the device in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the device in cold areas. When the device returns to its normal temperature, moisture can form inside the device and damage electronic circuit boards.
- Do not attempt to open the device other than as instructed in this guide.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device.
- Do not paint the device. Paint can clog the moving parts and prevent proper operation.
- Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the device and may violate regulations.

governing radio devices.

All of the above suggestions apply to your device, battery, charger, or any enhancement.

If any device is not working properly, take it to the nearest authorized service facility for service.

Caution: The manufacturer assumes no responsibility for the consequences of the users does not comply with the above suggestions or misuse of the phone.

All the configurations mentioned in this user manual are only for referring. They may vary from your phone. Please take your actual phone as the standard.