

PILLOW TFT LCD COLOR MONITOR



Operating Instructions

Before operating this set, Please read these instructions completely

TFT-LCD MONITOR USER MANUAL

Function keys


Appearance and function



- 1.AV1/AV2 push button
- 2.Select the HORIZONTAL item
- 3.Menu button
- 4.Volume-
- 5.Volume+
- 6.Power ON/OFF
- 7.Infrared receiver

Remote Control

Refer to the diagram of cover

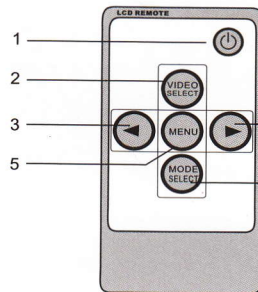

Introduction of function keys:

- 1: POWER ON/OFF
- 2: VIDEO SELECT
- 3: ANALOG DECREASE
- 4: ANALOG INCREASE
- 5: MENU(Brightness,color,contrast)Button
- 6: MODE:Selecting results of display

Main Function

Screen dimensions:7 inch

Resolution:800*480*RGB

System:PAL&NTSC Auto switch

Power:DC12V

Consumption:3W


Video:Two way Video input

Rear watching:imeage can be changed left and right

Operate mode:the key operation and remote control

Cable Line

Installation and Connection:

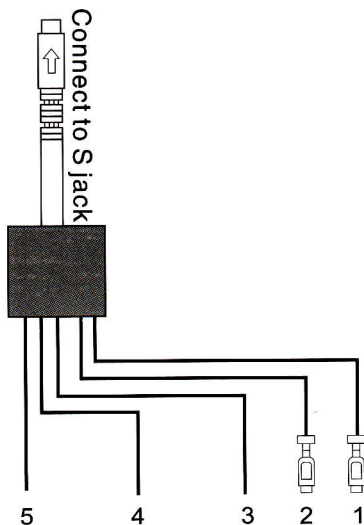

- 1: Av1 Input (Yellow)
- 2: Av2 Input (Yellow)
- 3: Green cable connected to reverse indicator
- 4: Black cable connected to ground of power supply
- 5: Red wire connected to anode of 12V power supply