

CAR REAR-VIEW TFT LCD MONITOR

USER'S MANUAL

650H



1 2 3 4 5 6 7

1. Remote Window
2. Analog decrease
3. Menu
4. Power on/off
5. Shift between AV1/AV2 video
6. Analog increase
7. LED indicator

705H



1
2
3
4
5
6

1. Remote Window
2. Analog increase
3. Menu
4. Analog decrease
5. Shift between AV1/AV2 video
6. Power on/off

700H



1
2

1. Remote Window
2. Power on/off

701H




1
2
3
4
5
6


1. Analog increase
2. Menu
3. Analog decrease
4. Shift between AV1/AV2 video
5. Power on/off
6. Remote Window

Please read this Manual thoroughly before using this product and keep it well for future reference.

OPERATIONS OF REMOTE CONTROLLER

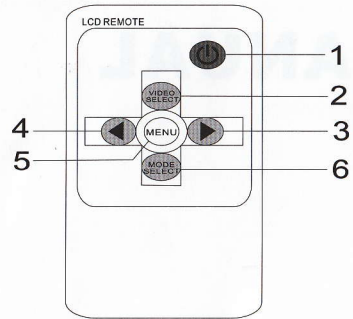


- 1、 Power on/off
- 2、 shift between AV1/AV2 video
- 3、 to increase brightness, contrast ,color ,etc .
- 4、 to decrease brightness, contrast ,color ,etc .
- 5、 menu options
- 6、 mode select

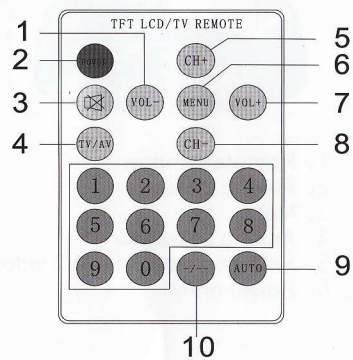


- 1、 Volume down
- 2、 Power on/off
- 3、 Mute
- 4、 AV/TV
- 5、 Channel up
- 6、 Menu
- 7、 Volume up
- 8、 Channel down
- 9、 Auto choosing
- 10、 Channel choosing

Only TV optional


CONNECTION OF CAMERA

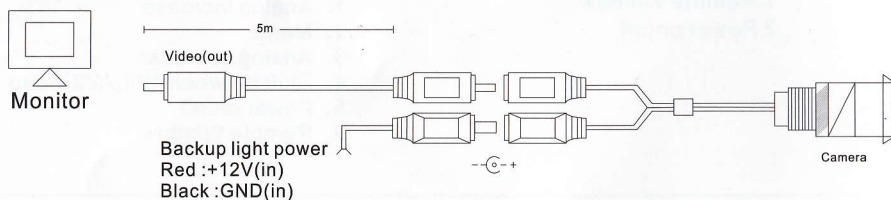

CONNECTION AND INSTALLATION

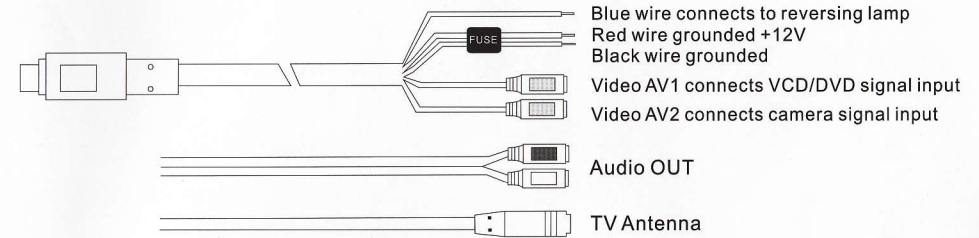

Only TV optional

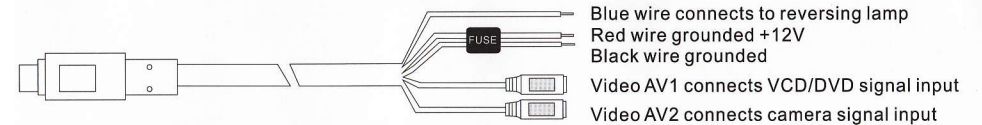

Only AV optional

SPECIFICATION

Display:6inch/7inch
 Power Consumption:6W/7W
 Power: DC 12V
 TV System: NTSC/ PAL
 Definition: 480(W)*RGB*234(H)
 Video Input: Dual Video Inputs .Blue Screen when no signal input.

V2 Working on reversing Condition(V2 Will be switched automatically from VCD/DVD when reversing gear is used, and return to VCD/DVD after parking).

This product will turn on itself automatically during parking and turn off after parking.