

■ **Before Start**

**1. Using T-Flash Card**

You can use T-Flash card to enlarge your phone's memory capacity. The memory card slot is back in the phone.

**2. Batteries**

Batteries have been charged to 50% full. It can be used after unpack. The first three times batteries must be totally discharged before charging. It will help to prolong the batteries lifespan and working quality

**3. Power on or off**

Power on: hold the End key to turn on the phone. If necessary, enter the PIN and phone password then press OK key.

Power off: hold the End key to turn off the phone.

■ **Basic functions**

**1. Making a call**

When cellular network service provider shows on the screen, you can receive or make a call through network. The received signal strength is shown on the up left corner of the screen (maximum 4 lines—best

signal condition).

**2. Answering a call**

To answer a call, press the **Send key**.

To reject a call, press the **End key** or **Right soft key**.

To adjust the volume of ringing tone, press "+" and "-" key.

If any key to answer is switched on, you can press any key to answer it (except End key, Right soft key). Otherwise press Send key or Left soft key and select Answer to answer the call. If the ear phone is connected, you can answer a call though ear phone.

**3. Emergency call**

If you are in the area covered by network service, you would be able to make Emergency call. If the cellular network service does not cover that area, ONLY EMERGENCY shows on the screen. That means you are not in the service area of the network only the EMERGENCY call can be connected. If you are in area covered by network service, the Emergency call can be made without inserting SIM card.

**4. During a call**

During the call, you can press Right soft key to switch between hand-free mode and normal mode. Press

Left soft key to get into option menu. The option menu is similar with Function menu. It is only possible to get into option menu during a call. The functions such as on hold, forward or making a multiparty call need network support. Please contact your network service provider for detail.

■ **Function Menu**

■ **Messaging:**

You can send SMS or MMS with others. SMS, MMS, Broadcast message and Voicemail server.

■ **Phonebook**

You can save name, mobile phone number, caller picture, caller video, caller ringtone and caller group by Phone book function. From Main Menu, select Phonebook to get into phonebook options.

■ **Calendar**

You can see the date, from calendar option, you can add your personal events and query the date you want.

■ **Services:**

Internet service

### ■ **Multimedia**

TV player, TV recorder, Camera, Image viewer, Video recorder, Video player, Audio player, Sound recorder and FM radio.

### ■ **Alarm**

The mobile phone support setting 5 alarms with you need.

### ■ **Camera**

From this menu, you can take photos with different settings.

### ■ **Call center:**

Your mobile phone can save each 20 records for miss calls, received calls, and dialed calls. Through this menu you can search for all history records.

Call history and Call settings

### ■ **Tasks:**

You can add your tasks.

On the date you setting, it will remind you what you should do.

### ■ **Audio player**

You can listen to the music such as MP3, and so on. Which is saved in the phone or memory card?

### ■ **File manager:**

Manage the files saved in memory card and phone.

### ■ **Extra**

Calculator and E-book reader..

### ■ **Fun & Games:**

The mobile phone support Java function; Java and Java Setting; Free games with phone..

### ■ **Organizer:**

Calendar, Tasks, Alarm and World clock..

### ■ **Calculator**

You can do some simple calculate if you need.

### ■ **User profiles**

You can select different mode, and can define your own modes. The phone provides many modes to choose.

### ■ **Bluetooth**

In this menu, you can select power on/power off Bluetooth, and search for Hand-devices, connection establishment and transfer the data or files.

### ■ **Settings**

This menu includes many personal setting to the phone.

Quad SIM switch, Dual SIM settings, Phone

settings, Network settings, Security settings, Call settings, Restore factory settings and Sound effects..

### ■ **Input method instruction**

**You can change the input method by pressing “alt” key.**

#### **General operation for English input**

1. To enter the letter.
2. Then, enter the next letter.
3. Press [space] to insert a space.
4. Press the Navigation keys to move the cursor.
5. Press del key to delete characters one by one. Hold it to clear the display

#### **General operation for Number input:**

Number mode enables you to enter numbers. Press the keys corresponding to the digits you want.