ZOPO

Smart phone Quick Guide


www.zopomobile.cn


More information

You can search our mobile phone models and feature In our website, and can select more accessory for your zopo phones.


www.zopomobile.cn

Parts description and preparation

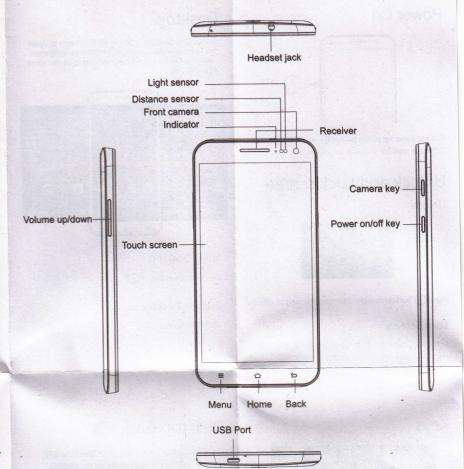

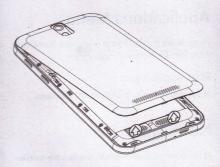

Open the notch on the lid, Then pull lightly along the lid cracks.

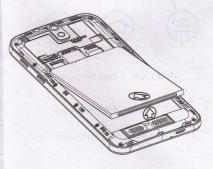


Notice: In accordance with the instructions, you should be prompted to insert, remove the batteries to avoid unnecessary damage to the body or battery.

Plug the battery

Keep battery metal contacts and fuselage battery contactor alignment, then gently press down to push the battery into the phone smoothly.

asic Function

 ower On



eep press the power button 0, until screen turn on.

nlock and Lock screen

llock



ss button quickly, and drag the ring to unlock.

ck Screen

ss the power key () in any interface, then the bile phone will enter standby model.

Shortcuts

Desktop

Unlock the desktop, you can click the icon to open the corresponding application Change wallpaper, open the file. Also can slide the desktop to get more applications.



Enter Desktop

Desktop enter key

Browse Desktop

Slide the screen

More Basic Function

Dial

Press , through to search contacts or enter the phone number then press to dial out.If want to delete the number, please press

Call ends ·

Press during the calling.

Incoming call

When have call coming, slide the ring to to receive.



eys



Menu Key: Enter for fast setting

Home Key: Enter to desktop

Home Key: turn back to last menu

Desktop Gadgets

Desktop Gadgets is a shortcut to enter the APP. You can use it directly at desktop, eg: desktop weather gadgets can let you know the weather information anytime.

Applications Menu

ou can enter the application menu from home key.

After unlock the screen, press

Start Applications

At application menu, touch the APP you want.

Notification Bar

At top of home /main menu, it displays the mobile phone signal. Battery power , new message and other notice.

Checking the notice

One finger pull down from the top of notification bar.

Quick menu

Use 2 finger to pull down from the top of notification bar. You can turn on/off fast for WLAN,Blutooth,GPS and etc function.

Message

Sent message

1.Press enter the message menu

2.Press to create new message

4.Press • to senting text or inserting pictures,

3.Press to add one or more contacts.

face.video.etc

5.Press > to sending when finish edit.

Phones Setting

1.Find in application menu. Touch it enter the setting menu.

2.Touch menu key under the home menu, enter the System settings.

3.Enter quick menu,touch (enter system setting.