

ITE GRAND'S LITE

ZTE Grand S Lite Quick Start Guide

LEGAL INFORMATION

Copyright © 2014 ZTE CORPORATION.

All rights reserved.

No part of this publication may be quoted, reproduced, translated or used in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

ZTE Corporation reserves the right to make modifications on print errors or update specifications in this guide without prior notice.

We offer self-service for our smart terminal

device users. Please visit ZTE official website (at www.ztedevice.com) for more information on self-service and supported product models. Information on the website takes precedence.

Visit http://www.ztedevice.com to download the user manual. Just click Support > Manuals from the home page and then select your location, product type, and name to search for related support information.

Disclaimer

ZTE Corporation expressly disclaims any liability for faults and damages caused by unauthorized modifications of the software.

Product Safety Information


A	Do not use while re-fuelling.	
	Do not use hand-held while driving.	


	I
Ó	This device may produce a bright or flashing light.
A	For body-worn operation maintain a separation of 15 mm.
A	Do not dispose of it in a fire.
	Small parts may cause a choking hazard.
A	Avoid contact with magnetic media.
	This device may produce a loud sound.
19	To prevent possible hearing damage, do not listen at high volume levels for long periods.
	Avoid Extreme Temperatures.
	Keep away from pacemakers and other personal medical devices.
A	Avoid any contact with liquid, keep it dry.
	Switch off when instructed in hospitals and medical facilities.
A	Do not attempt to disassemble.
A	Switch off when instructed in aircrafts and airports.
A	Do not rely on this device for emergency communications.
•	

Switch off in explosive environments.

Only use approved accessories.

Getting to Know Your Phone

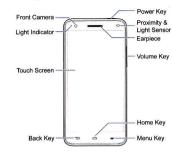

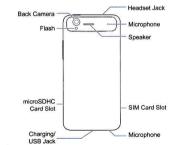

Power Key

- Press and hold to power on, select phone modes, turn on/off airplane mode, reboot, or power off.
- Press to turn off or on the screen display.

Home Key

- Touch to return to the home screen from any application or screen. Touch and hold to open Google search.

Touch to get the options for the current

Touch and hold to see recently used applications.

Back Key ouch to go to the previous screen.

olume Kev

Press or hold either end to turn the volume up or

Before Getting Started

Use an ejector to open the SIM card tray.



Place the SIM card into the SIM card tray and then slide it into the slot, as shown below.



3. Use the ejector to open the microSDHC card trav.



4. Place the microSDHC card into the microSDHC card tray and then slide it into the slot.



NOTE:

The microSDHC logo is a trademark of the SD-3C, LLC.

Charging the Battery

When you first get your new phone you might need to charge the battery.

WARNING! Use only ZTE-approved chargers and cables. The use of unapproved accessories could damage your phone or cause the battery to explode.

1. Connect the adapter to the charger lack.



- 2. Connect the charger to a standard AC wall outlet
- 3. Disconnect the charger when the battery is fully charged.

Powering On/Off

Make sure the SIM card is in your phone and the battery is charged. Press and hold the Power Key to turn on

your phone. To turn it off, press and hold the Power Key to open the options menu. Touch Power off and then touch OK.

CAUTION: Do not touch the Volume Key when powering on the phone.

NOTE:

If the phone freezes or takes too long to respond. try pressing and holding the Power Key for about 8 seconds to power off.

Waking Up Your Phone

Your phone automatically goes into sleep mode when it is not in use for some time. The display is turned off to save power and the keys are locked

to prevent accidental operations. You can wake up phone by turning on the display

and unlocking the keys. 1. Press the Power Key to turn the screen on.

2. Press and hold at the center of the

screen

NOTE:

If you have set an unlock pattern, PIN or password for your phone, you'll need to draw the pattern or enter the PIN/password to unlock.

Using the Touch Screen

Your phone's touch screen lets you control actions through a variety of touch gestures.

Touch

When you want to type using the onscreen keyboard, select items onscreen such as application and settings icons, or press onscreen buttons, simply touch them with vour finger.

Touch and Hold To open the available options for an item (for example, a message or link in a Web page), touch and hold the item.

Swipe or Slide To swipe or slide means to quickly drag your finger vertically or horizontally across the screen.

Drag

To drag, press and hold your finger with

your finger. While dragging, do not release your finger until you have reached the target position. Pinch

some pressure before you start to move

In some apps (such as Maps, Browser, and Gallery), you can zoom in and out by placing two fingers on the screen at once and pinching them together (to zoom out) or spreading them apart (to zoom in). Rotate the screen

For most screens, you can automatically change the screen orientation from portrait to landscape by turning the phone sideways.