



Release the battery cover

Unlock and take off the back cover, then open the seal cover.

Insert the SIM card

Insert SIM into the phone as shown (contacts face down).





Insert Micro-SD card

Slide the metal clasp left and it will hinge up from the left. Place SD card into position, then close the metal clasp, and slide right to lock in place.

Replace battery cover

Install the battery correctly then press the seal cover tightly. Finally fix the back cover and lock.





5 Charge for 4 hours

Please charge for 4 hours before initial use.

5 Voice control

Press navigation key UP and Down while talking

Keypad Description Speaker Torch Camera Loudspeaker OK/select Short cuts /navigation Left soft key. Right soft key End/power Answer-3DEF Torch **5** JKL 6_{MNO} **8**TUV 9 WX Keypad lock Silent Microphone-USB charge -/headphone

port