


KIDS PROJECTOR OPERATION MANUAL

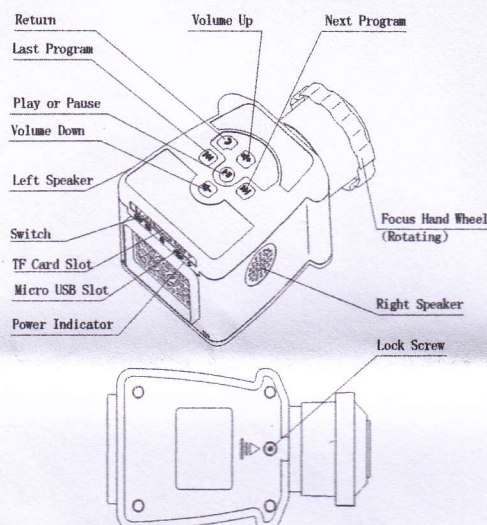

CAUTION

1. Please use certified AA batteries from formal manufacturers. When installing or uninstalling batteries, It should be operated by adults for less six ages children.
2. Take care for you devices and do not put it close to fire, water, any combustibile or chemicals. If you would not operate device for a long time, please take out batteries from it.
3. Please do not look at inner of the device through projection lens when turning on light.
4. Please do not touch the surface of projection lens. If the surface of lens stains, please clean it by soft cotton of silk, rather than by organic solvent.

ACCESSORIES

1. Micro USB cable
2. Operation manual paper
3. Bracket for table projecting (optional and need to be purchased)

EXTERNAL USB POWER SUPPLY

1. Connect computer with the device by Micro USB cable through micro USB slot, which will provide external power supply.
2. Connect adapter (5V 1000mA) with the device by Micro USB cable through micro USB slot, which can provide external power supply.
3. The specialized adapter (5V 1000mA) with micro USB pin could be also connected with device as external power supply of device.

ATTENTION

The device might be power off when turning up volume to the max meanwhile playing music by battery or external adapter. Probably the power volume of the battery or adapter do not enough, So suggesting you to exchange the battery or check the adapter, make sure that its current volume will not less than 1000mA.

INSTALLING BATTERIES

1. Open the battery cover by releasing the screw by means of cross screw driver of type Ph0/Ph1
2. Place the three AA batteries in order according to the mark inside battery box.
3. Check the battery's position and make sure that the polar of batteries is OK
4. Turn on the power switch and check if the led light source is bright, then assembly the battery cover and lock the screw.

PROJECTING OPERATION

1. Make sure the battery or USB power supply is ready.
2. Turn on the switch, so the led light source is bright, then, aiming the projection lens of device to the screen, rotating the focus hand wheel to get a clear image.

MUSIC PLAY

Under the main menu Press to play current music and once again to pause, Press to play the next one or press to play the previous one.

Volume adjusting— Press over one second to call out volume console , press once again to volume down or press to volume up.

Lyric, Press over three seconds to call out synchronous lyric meanwhile playing songs with LRC.



CARTOON PLAY

Under the main menu, Press to AMV interface, Press to play current cartoon and once again to pause, Press to play the next one or press to play the previous one, press over three seconds to return the main menu.




PHOTO PLAY

Under the main menu, Press to PHOTO interface, Press play current photo and once again to pause, Press to play the next one or press to play the previous one, press to return setup of photo interface, press to select the setup of photo play, press to enter the manual or automatic playing interface, press to choose manually or automatically playing, If choosing automatically play, press to switch to the setting of time interval, press or to add or reduce time, press return the previous menu. If choosing manually play, press to play the current photo , press or to play the next or previous photo, press over three seconds to return the main menu.



E-BOOK PLAY

Under the main menu, press to switch to the E-BOOK interface; press to play the current document, press or to page down or page up, you can select manually or automatically play as above the photo setting.

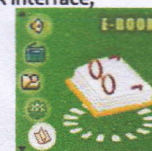

SETUP

Under the main menu, press to switch to the SETUP interface, press to enter the Setup ,press to select the screen setting, press into the black mode or exit interface. Press or to add or decrease last time of light source bright, press to return to the previous menu. Press to select language interface, press to enter the selection interface of twenty languages. Press to choose language and press over three seconds to return the main menu.



*** It always would be return the main menu under any play interface, if you press over three seconds.**

DOWNLOAD

Prod the switch to OFF , connect your device with computer by means of the micro USB cable through micro USB slot, then you can download interesting contents to the memory of device from computer.