

MINI PROJECTOR USER MANUAL

MINI PROJECTOR USER MANUAL NO.:2

3. Specification

Model	Mini projector	Image system	LCD
Native Resolution	800*480	Support Resolution	Max 1920*1080
Lamp	LED	Input voltage	110-240V
Language	English, 23 languages	Brightness	1200 lumen
Contrast	1,500:1	Lens	F=125
Image size	30-120inch	Projection distance	1.18-2.28m
Color	18000K	Projection mode	Front projection
Power waster	50W	Speaker	2.0W*1
Weight	1 KG	Size	210*145*80mm
Operation mode	Manual/Remote control	Working temp	-10~38°C
Output	Headphone	Input	HDMI/USB/VGA/AV

4. Multimedia support files

audio	MP3/WMA/ASF/OGG/AAC/WAV
image	JPEG/BMP/PNG
video	3GP(H263,MPEG4)/AVI(XVID,DIVX,H264)/MKV(XVID,H264,DIVX)/FLV(FLV1)/MOV(H264)/MP4(MPEG4,AVC)/MPG(MPEG1)/VOB(MPEG2)/MPG(MPG-PS)/RMVB(RV40)
file format	txt

⚠ Because of Dolby copyright issue, the projector do not support Dolby audio decoding.

MINI PROJECTOR USER MANUAL NO.:1

1. Remarks

 
- 1.0 Notice: please read the manual carefully before operating projector.
- 1.1 To ensure stable power supply, please use standard power cord which has ground wire.
- 1.2 Please use the power supply and cable indicated on the projector or the manual.
- 1.3 The projector should be kept away from cloth, sofa or any thing that may block the ventilation scoop. And keep way from flammable and explosion materials.
- 1.4 Please do not disassemble by yourself, otherwise we will not provide free warranty service.
- 1.5 To protect your eye, do not watch directly at the lens when projector working.
- 1.6 The projector should be kept way from water or water splash, and the product shall not be placed around the vases, cups and other liquids items.
- 1.7 To prevent electric shock, please don't put the projector under the rain or moisture.
- 1.8 We strongly suggest you power off projector when play it for 6 hours constantly one time.
- 1.9 Please use the original foam and other cushioning materials when transport projector.
- 2.0 If the projector does not work, please contact the retailer for help at first.

2. Accessories List

AV signal cable	1pc
Remote control	1pc
User Manual	1pc
Power cable	1pc


MINI PROJECTOR USER MANUAL NO.:3

5. Function structure diagram

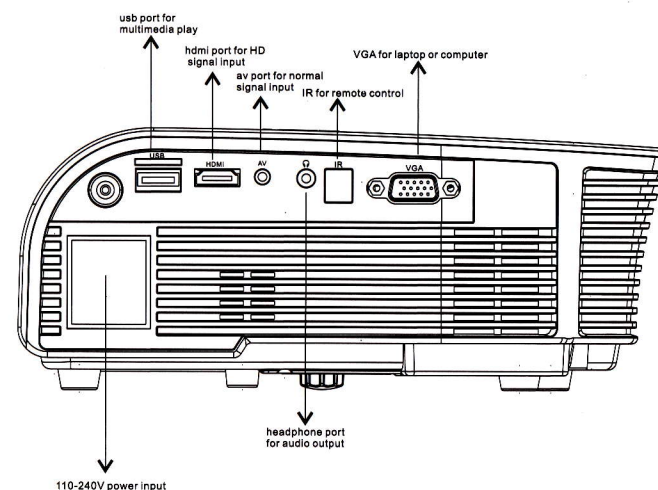


MINI PROJECTOR USER MANUAL NO.:4

 6.Button function

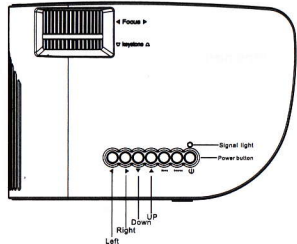

 Left: move left or volume down;
confirm the signal input source
Right: move right or volume up
Up: move up
Down: move down
Menu: operate multiple functions
Source: choose the input signal source
Power Button: power on or off

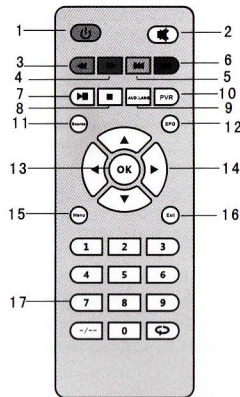

7.Function Operation

- 1.Power
- 2.Mute
- 3.Backward
- 4.Forward
- 5.Previous
- 6.Next
- 7.Play
- 8.Stop
- 9.Audio Language
(Only apply for European DVB-T)
- 10.Record digital TV channel and playback
(Only apply for European DVB-T)
- 11.Source
- 12.Electronic Menu
(Only apply for European DVB-T)
13. Confirm
14. Up/down/left/right
15. Menu
16. exit
17. numbers

MINI PROJECTOR USER MANUAL NO.:5

8.Function Operation

Power on/off

After the projector gets power through adapter, it goes into stand-by status.
Power on: Press the power button on the projector or remote control once, the projector starts working.
Power off: Press the power button on the projector or remote control once, the projector is off.

Focusing

Put the projector at a certain place within the proper distance where the projector lens perpendicular to the projection screen, then rotate the lens to make adjustment until the image is clear. During this step, you can broadcast a program or the menu image to support focus.

 
⚠ While using the projector, please connect the power adapter with the projector first, then connect the power adapter with the power.

⚠ For more product function and application, please consult with retailer.

Menu Operation


Signal Source Selection

Press "SOURCE" button on the remote control to get the source menu, repeat pressing "source" button to move the cursor to the input signal source you need, then press "OK" button to confirm.

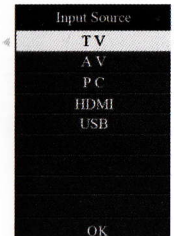

MINI PROJECTOR USER MANUAL NO.:6

 9.Menu Setting

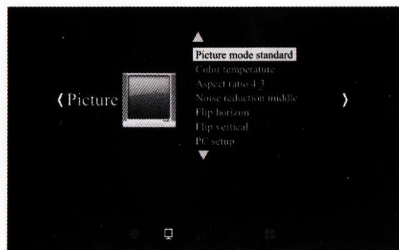

Press "MENU" key to enter the main menu, then press "◀▶", key to each sub-menu.

Press "▲/▼" key to select the sub-menu, then adjust the parameters as per your need, and press the "OK" key to confirm.

Function of Sub-menu

Image Sub-menu:

Available adjustment: picture mode, color temperature, aspect ratio, noise reduction, computer settings.

Sound Sub-menu:

Available adjustment: sound mode, balance, auto volume, surround sound, SPDIF mode, EQ.

Time Sub-menu

Available adjustment: clock, off time, on time, automatic shutdown time, auto sleep.

 
Setting Sub-menu

Available adjustment: OSD Language, restore factory setting, blending, OSD Duration, image flip, zoom.

MINI PROJECTOR USER MANUAL NO.:7

10.Multimedia Player

Insert the USB or SD first, and choose Multimedia from source menu, then the main interface shows as the picture below. Through this interface, you can choose the corresponding "pictures", "music", "video", "text" icon to play the file.
Remarks: You can only insert the USB or SD on at a time, or the projector can not recognize any of them.

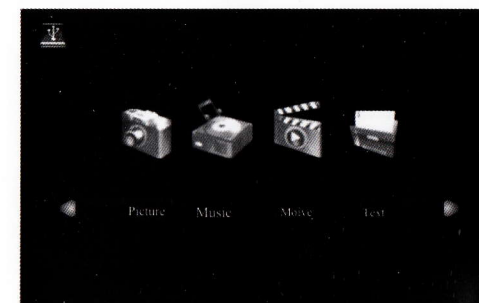

We offer 1 year warranty for the product.