

Overview.....	14
Install SIM card and Battery.....	15
Charging.....	17
Turn on/off.....	17
Screen lock.....	18
Setting.....	18
FM radio.....	20
Bluetooth.....	20
Projector setting.....	21
Phone use tips.....	22
Trouble shooting.....	24
Specification.....	27

Thanks for choosing our projector mobile phone, please read this user manual to get the basic functions and operations before starting using.

#### Declaration

This manual is just for the instruction of operating this device, not to state the configuration of this device, the device and accessories may be different in different places.

#### The meaning of icons in this manual



WARNING

Stand for warning.




CAUTION

Stand for caution.



Stand for special notice or prompt during using.

## ● Overview and Keys

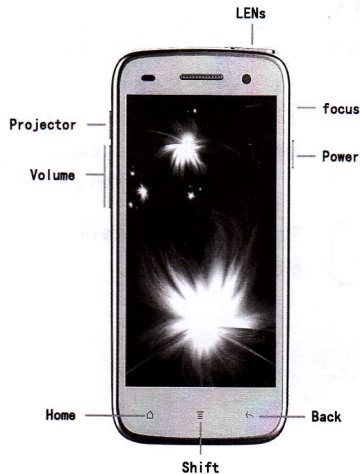

Power, To turn on/off, or screen lock/unlock  
Volume, Volume up/down

Projector, Long press (about 3 seconds) to  
turn on/off projector

Focus, Manual focus to make the screen clear

## ● Basic operation

### Install SIM card and battery



Please make sure the phone off before  
installing or taking out SIM card and  
battery.

Please don't try to open or fix the battery  
inside the phone, choose the battery according  
to the factory, the timing of battery is influenced  
by all kinds of reasons.



In order to avoid from burning, please notice the below,

Don't resolve, press, pierce the battery, don't short circuit or put in fire or water;

Don't expose in the temperature above 60 degrees centigrade (140 fahrenheit degrees)

Don't discard the battery.

(1) Turn off the phone, and open the bottom cover.

(2) Put the SIM card inside the SIM card slot according to the marked direction (make sure it put correctly).

Then put the battery in accordingly.

Some micro SD card may not compatible to this phone, please check before buying.

## Charging

---

Please use 5V power adapter

(3) The symbol of battery appears from 0% to 100% during charging, 100% means full charging.



***Try to use up the battery at the beginning when you use the phone, this improves the battery life and quality.***

Please recharging once the battery used up, over use will influence the battery life. It is normal the phone becomes a little bit hot during charging.

## Turn on/off

---

Make sure the battery well installed and enough battery left, and then long press

(about 3 seconds) the power key to turn on/off.

## **Screen lock/unlock**

---

### **1. Lock**

Press power key to lock, or the screen will be locked automatically once you set the time for screen lock.

### **2. Unlock**

Press power key and slide the arrow on the screen to unlock.

## **● Settings**

### **Flight mode**

---

Flight mode, stop all network functions, use the phone without network only.

## **WiFi**

---

ON/OFF, turn on/off WiFi.

WiFi notify, inform automatically when there is available network.

Add WiFi network, to add another WiFi manually.

## **Positioning**

---

Virtual network, positioning by wireless network or GPS satellite, turn A-GPS on for faster positioning.

## **SIM card management**

---

Set single or dual SIM card or master SIM card.

## **APP**

---

Manage APPs, to delete or move APP.

## **Storage**

---

Indicate the the capacity of the Micro-SD card, available space and uninstall the SD card.

## **FM Radio**

---

Put in earphone and go to FM radio to listen to radio broadcasting.

## ● **Bluetooth**

---

Used to connect two phones by bluetooth to transfer data, please make sure both bluetooth turned on before connecting.

## **Searching device**

---

Choose add new device to search bluetooth device and then connect, if there is password needed, please make sure to put the same password.

## **Searching headset device**

---

Connect to bluetooth earphone, make sure both devices are active.

## ● **Projector Setting**

---

Press the projector button about 3 seconds to turn on the projector, and the same press to turn off.

The projector can be also turned on from setting, under display in settings, goes to DMD settings and choose turn on.

Adjust the focus button manually to make projector screen clear once it is not clear.

## Phone use tips

---

1. Please keep it far from where children can touch;
2. Please keep it in dry condition, liquid may cause corrosion to the circuit.
3. Please keep it far from high temperature, which may shorten its lifetime;
4. Please don't try to disassemble it, non-professionals may cause damage to it.

5. Please don't clean it with high acid or alkaline liquid.



## ● Trouble shooting

Problems	Reasons
Can't turn on	Please check the battery to see if it is enough battery or well installed.
SIM card error	SIM card dirty, clean it and install again, SIM card broken, replace another one
Signal weak	Please make sure the signal nearby is strong enough.
	Check if there are too many people who are using phones at the same time during rush hour.
	Please check if it is too far from the signal station to receive signal. up and dial again.

Problems	Reasons
Echo or noise	Please check if it is because of the signal, try to hang up and dial again.
Outgoing calls limited	Please check if you hide the phone number, but the service provider does not support this service; or please check the signal is disturbed by other material; please check if you activated the function of outgoing calls prohibited.
Battery couldn't be charged	The battery may be used up too much, please connect to the power for a while to see if it can be charged again, and also confirm if the battery is in good condition.

Problems	Reasons
Internet can't be connected	Please check if the signal is strong enough or any disturbing around, please check if the SIM card is broken.
Standby time shortened	Standby time influenced by the setting of system, please turn off the phone once there is no signal. Or please change a new battery.

## ● Specification

CPU	1.2 G MHz dual processor
OS	Android4.1
Brightness	35lums
Camera	Front 1.3MP, rear 8.0MP
SIM card	Dual SIM card
Memory	RAM1G ROM4G
3G	WCDMA2100
Weight	165g
Dimensions	136.7x69.4x14.4mm