

# Digital Photo Frame

## Use Manual

### Main Features

Support JPG, BMP formats  
With calendar, clock, week display functions  
Multiple scenes picture slide show

### Operation instruction

#### 1, Battery and key-buttons

##### 1.1, Battery

When you first use the device, connect with the computer via a USB cable for charging, the first time for charging up to five hours, the standard charging time is three hours.

##### 1.2, Key-buttons

"■、M" menu button: longtime press for power on/off, shorttimepress for displaying the menu functions. (The following is intituled menu key).  
"4"Select: Move up browse or upward choice (The following is intituled UP key).  
"▶"Select: Move down browse or downward choice (The following is intituled DOWN key).

### 2, USE

#### Power on

Under the power off mode, longtime press the menu key until the screen displaying.

#### Power off

Under the picture browse or clock display mode, longtime press the menu key until there is no display to complete shutdown. The whole device stop working except the clock function, and at this time it is the best way to conserve electricity. When installed the sleep functions, it will be shutdown at the set time.

#### 2.2, Picture Browsing Mode

The picture browse mode by default after power on the device, under this mode you can browse pictures

#### 2.3, Time Display Mode

Under the picture mode press the menu key to enter into the main menu, select "Display Clock" option and choose "Digital Clock" for the calendar time display, select "AnalogClock" to stimulant time display. Press any button to go back to the picture browse mode at the time of displaying mode.

### 2.4, Connect with Computer

Connect DPF with the computer via USB cable, select "USB Connect" option under the menu mode, choose "Yes" when it displays "USB Connect", the computer screen will pop up download dialog box "DPFMate V3.7.6" automatically. According to figure 1 as below.



Figure1

#### 3.The Menu Items Specification

Under the Picture Browse Mode and Time Display Mode,shorttime press the menu key.

The pop-up menu as below, respective named:

- (1) USB Connect(connect with computer)
- (2) Clock(calendar,time setting)
- (3) Slide Show(picture browse time setting)
- (4) Auto ON/OFF(sleepy function setting)
- (5) Power Off(shutdown)
- (6) Backlight(brightness adjustment)
- (7) Delete(selete pictures)
- (8) Exit(exit from the menu)

Thereinto:

##### 3.1 USB Connect

Select "USB Connect" menu in the main menu, press the menu key to enter. There is "Yes, No" option, select "Yes" on the menu to enter into downloading the picture, select "No" is to cancel the picture download.

##### 3.2 Clock

Select "Clock" In the main menu to enter, there are options of "Display Clock, Calendar,

Analog Clock, Set Clock, Alarm Clock, Cancel", named :calendar&time display, perpetual calendar display, analog clock, calendar&time setting, alarm time setting and exit from the submenu.

### 3.2.1 Calendar, time display (display clock)

Select "Clock" in the main menu to enter. Press "Up" and "Down" to choose "display clock" of calendar or time display.

### 3.2.2 Perpetual calendar display

Select "Clock" in the main menu to enter. Press "Up" and "Down" to choose "display clock" of perpetual calendar display.

### 3.2.3 Analog clock display (analog clock)

Select "Clock" in the main menu to enter. Press "Up" and "Down" to choose "Analog Clock" of analog clock display.

### 3.2.4 Calendar, time display (Set Clock)

Select "Clock" in the main menu to enter. Press "Up" and "Down" to choose "Set Clock" of analog clock display.

### 3.2.5 Alarm time setting (Alarm Clock)

Select "Clock" in the main menu to enter. Press "Up" and "Down" to choose "Alarm Clock" of analog clock display.

### 3.2.6 Exit from the submenu(Cancel)

Select "Clock" in the main menu to enter. Press "Up" and "Down" to choose "Cancel" of quit the submenu.

### 3.3 Slide Show

Select "Slide Show" in the main menu and press menu to enter. There are 0-15 seconds different options for users to choose, 0 means to stop this function.

### 3.4 Auto ON/OFF

Select "Auto ON/OFF" in the main menu and press menu to enter. There are 0-30 minutes different options for users to choose, 0 means to stop this function.

### 3.5 Power off

Select "Power Off" menu in the main menu, press the menu to enter. There is "Yes, No" option, select "Yes" to shutdown, select "No" to cancel.

### 3.6 Backlight

Select mode "Backlight" menu in the main menu, press the menu to enter. There are 1-21 levels for users to adjust the screen brightness.

### 3.7 Delete

Select "Delete" menu in the main menu and press the menu button to enter. Press Up and Down to choose "Delete All". There are two options of "Yes, No", select "Yes" to delete all the browse pictures, select "No" to cancel the operation.

### 3.8 Exit

Select "Exit" menu in the main menu, press menu button to exit.

## 4, Picture Conversion and Download Instructions

Connect DPF and computer with a USB cable, press the menu button to enter. Select "USB Connect" and choose "Yes", the computer will pop-up download dialog box (Figure 1) automatically. CD-DISK is no need for this device. .

### 4.1 Download Dialog Box Specification

+	:Zoom out
-	:Zoom in
Clcan	:Select the whole picture
Rect	: Choose a part of picture
Rotatel	: Left rotate picture
RotateR	: Right rotate picture
ADD	: Add the picture to Downloads area
Setting	: Setting picture fonts and background colors
Save	: Add appended pictures store in the computer
Saveall	: Add all of appended pictures store in the computer
All	: To save and delete all appended pictures
Delete	: Delete appended pictures
Download	: Download the appended pictures to DPF
Exit	: Exit from picture download dialog

### 4.2 Download Pictures

Pitch on the picture and press **Add** to convert the picture to the download region. If the converted picture is not satisfied, press **Delete** to delete; press **Download** to download the pictures to DPF after converting the pictures.

## Others

- 1, Press "RESET" key which installed at the backside of DPF to reposition when the device can't work.
- 2, Open up the menu, if without any operations on the buttons in 10 seconds, it will withdraw from the menu automatically.
3. Choose language, right click on the mouse at the blank area, then pop-up dialog box to choose different languages. According to Figure 2 as below:



Figure 1