



# PORTABLE MULTIMEDIA DVD & LCD TV

## USER MANUAL



To customer:

Thanks for buying and choosing this branded Portable DVD, please check if all the accessories are complete when open carton. Please read this use manual carefully before connecting the parts and put through the power. For make well use of all the function of the unit.

### NOTICE ITEMS

- Please read this use manual carefully when using the unit first time.
- For the high voltage results danger, be sure not to maintain it personally, all the adjustment and maintain works done by special person.
- The adapter for the unit must match with the adapter on the sign of nameplate, and use the adapter.
- The power for the socket can't be over loading, and it should be put in the place which isn't easy trampled. Don't put goods on the power line.
- Don't put the unit near sofa and curtain, stuffiness and sun straight darkish places, and avoid the unit declining and striking.
- Take off the power line from the socket, then can clean it. Don't use the thinner and other cleanser just use soft cloth clean it ok.
- Don't use the broken, transmutative or paper sticking on the disc. Pick out the disc when you don't display.
- When lightning storm or don't use the unit, should take off the power from the power socket.




### APPEARANCE INSTRUCTION-1


DS78

- 1) TFTLCD
- 2) Speaker
- 3) Control panel
- 4) Interface jack
- 5) The power indicator light
- 6) Remote control receiver
- 7) The charging indicate light
- 8) DVD disc cover

 
Left flank jack:



Right flank jack:

 

- 1) CATV faucet
- 2) Power switch key
- 3) OFF/ON
- 4) Card insert
- 5) USB input jack
- 6) GAME handle
- 7) AV/Out output
- 8) AV/IN input
- 9) Earphone output

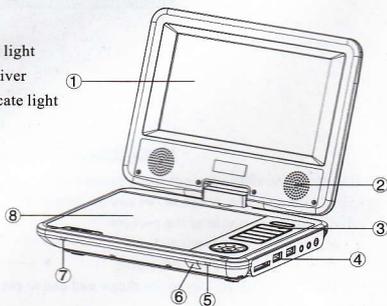


### APPEARANCE INSTRUCTION-2


DS958

- 1) TFTLCD
- 2) Speaker
- 3) Control panel
- 4) Interface jack
- 5) The power indicator light
- 6) Remote control receiver
- 7) The charging indicate light
- 8) DVD disc cover

 Left flank jack:



Right flank jack:

 

- 1) USB input jack
- 2) Card insert
- 3) Earphone output
- 4) AV/Out output
- 5) AV/IN input
- 6) OFF/ON
- 7) Power switch key
- 8) CATV faucet
- 9) GAME handle

### REVERSION FOR USUAL PROBLEM

1. TV no picture or sound?
    - Av adapter is not compatible;
    - Using the adapter is not allowed;
    - The power is off or the remote control is off
  2. TV no sound?
    - If the Volume is off
    - Audio system is not correct
  3. The TV is no TV picture?
    - Channel choice is correct
    - It's in other status and change it to TV status.
  4. TV picture is not clear and instable?
    - If the antenna is adjusted correctly
    - Maybe the signal from earth is too weak
  5. TV have picture shadow or snowflake interference?
    - Maybe it receive the echo signal from the tower.
    - Maybe it is interfered by the electric wave from bus, train, high voltage line and neon lights.
  6. TV no color?
    - If the chroma is right and the system is right
    - Signal is too weak and the vinish function works.
  7. Don't play disc?
    - Affirming disc if put on the salver accord ding to right way. (Label upwards)
    - If disc have smudge and nick, it must be clean and replace.
    - Take disc laying by one hour or so on electrify state if it dew.
    - Affirm if DVD on the playing Disc status, please press SD/DVD key, change to playing Disc status.
  8. Don't play U disc or CARD?
    - Affirm if on playing U DISC or CARD status, please press SD/DVD key, change to playing USB or CARD status.
    - Affirm if U DISC or CARD
- have content and format is correct or not.
- Affirm if the connection of U DISC or CARD is correct and have lax or ill connection phenomenon or not.
  - 9. Don't play game?
    - If enter into game status. (Operate according to page 14 in specification)
    - When playing single game, if the handle connect to the unit by interface jack GAME1.
    - If supporting the game in game disc, U DISC or CARD.
  - 10. Sound abnormity? Image glitter?
    - Please confirm if the battery is power off, and connect the A/C adapter of this unit
    - Qroblem result from AV file themselves.

### SPECIFICATION

- Model name: Portable multimedia DVD+TV player
- Supporting function: TV, AV, DVD, GAME, USB and CARD play
- Receiving channels: VHF-L 48.25MHz-161.25MHz  
VHF-H 160.25MHz-464.25MHz  
UHF 463.25MHz-863.25MHz
- Audio system:  D/K  B/G  M/N  L
- Input and output ports: Outer antenna: AV input/output; Power input; Earphone output; USB input; GAME input; CARD input
- Audio output: 1W(max)
- Speaker: 8Ω 1W two round
- Power supply: DC9.5V-13.5V
- Power consumption: 15W
- Dimension: mm
- Net weight: kg

### Attention

Some instruction items have ticket, which indicate the unit equips the function.

 
### THE INSTRUCTION OF CONTROL PANEL

POWER	Power switch key;
MENU	Press this button to enter or exit the DVD menu
MODE	Signal conversion key;(eg. from tv to dvd)
⏪ (CH+)	Skip front to one {chapter/title} for playing(Channel increase key;)
⏩ (CH-)	Skip backward to one {chapter/title} for playing(Channel degression key;)
VOL+/VOL-	Volume degression/increase key; (to adjust the selective item in menu)
STOP	Stop playing
SD/DVD	Press this button to choose DVD, USB or card playing
SETUP	Press this button can enter or exit the DVD menu
⏸	Pause or play
⏮/⏭/⏪/⏩	Menu choice or adjustment key
OK	Enter key(This button during playback with pause / play functions)
⏮/⏩	Speedy front/back key
OPEN	Open disc key
AUDIO	For registering multi-language DISC, press the button to choose language voice when playing

### CHARGE INDICATION OF LITHIUM BATTERY

#### Battery box charging indication:

- When power off, put the corresponded adapter insert to AC100-240V, the other connect to the unit, the lithium battery will startto Lithium battery can charging
- automatically, the charging indication is red.
- Finish the charging, charging indication become green.



### USE OF REMOTE CONTROL

- **POWER:** Press this button to open the TV, press the button again to close power supply.
- **Numeric key(0-9)and 10+ key:** When the channel or song count is 1 just need to press the homologous key, when the channel count is 2, should press 10+ key first, the screen display -- or --- then press the homologous key.
- **DISPLAY key:** Press this button can display or conceal the channel number.
- **SUBTIT key:** Press this button to choose language title need forregistering multi-language title disc at playing.
- **GOTO key:** Press this button to selecting time.
- **AUDIO key:** For registering multi-language DISC, press the button to choose language voice when playing.
- **MENU key:** Enter the menu
- **▲/▼/◀/▶ key:** Direction choice key
- **OK key:** Enter key
- **CH+/CH-(channel choice key):** Press the CH+ key, the channel count is changed increase by degrees.Press the CH- key the channel count is changed by degression.
- **VOL+/VOL-(volume adjustment key):** Press VOL+key, the volume changed increase by degrees; Press VOL-key, the volume changed by degression




- **RETURN key:** In TV status, press this button to return to the front channel; In DVD status, press this button to return to the menu playing.
- **INPUT key:** Press this button to switch one by one at TV/AV/DVD playing.
- **SD/DVD key:** Press this button to display DISC, SD/MMC or USB items.
- **SLOW key:** Press the button to circle as follows: {SF 1/2, SF 1/4, SF 1/6, SF 1/8, PLAY ▶} for putting up play.
- **ZOOM key:** Press the button to choose the key as following: {zoom 1, zoom 2, zoom 3, zoom: [off]} to repeat.
- **REPEAT key:** Press the button on PBC to circle: [OFF] state as follows: {repeat: [chapter], repeat: [title], repeat: [all], repeat: [off]} for putting up play.
- **A-B key:** Press the button to circle as follows: {repeat A-, repeat A-B, repeat: [off]} for choosed segment repeating play.
- **PBC key:** Press the button to switch in turn on PBC: [ON] or PBC: [OFF] state.
- **STOP key:** Press this button one time to enter to the status of allowing stop, press this button again to enter to the stopping status, and press ▶ key enter to gradation playing.
- **◀▶ key:** Press the button to skip font and backwards to one {chapter/title} for putting up play.
- **▶▶ key:** Press the button can circle as follows: {▶×2, ▶×4, ▶×8, ▶×16, play▶} for putting up play.
- **◀◀ key:** Press the button can circle as follows: {◀×2, ◀×4, ◀×8, ◀×16, play▶} for playing.
- **⏸ key:** Press the button to pause and play.
- **🔊 key:** Press this button the sound disappeared, press the button again or press the volume increase /depression key, the sound get right.

### Attention

- 1) If [🔊] show on the screen when practise, which indicate the practice is invalid.
- 2) Please make the remote level to the tv infrared receiver when practise.
- 3) Don't stress, decline, bemoist or disconnect the remote control.

### TV PLAYING

1. When power off, put the corresponded adapter insert to AC100-240V, the other connect to the TV faucet
2. Put through the connection-peg of TV set with the antenna faucet.
3. Put through the power and then press the INPUT key to enter the TV status.
4. Auto tuning (when it's a new place, please research the channel again before you watch TV.): Continually press the SETUP key to enter to [TV Page] menu, press CH+▲ or CH-▼ key to choose [auto search], the screen display as following.

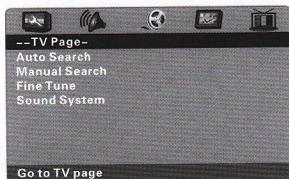

-4-

- Press "OK" key to enter the [auto search] and the screen display as following.
- When search out, the system can auto switch to the TV status, Press CH+▲ or CH-▼ key again to watch TV.

**Attention:** In the process of researching channels, you can press (STOP) key to interrupt tuning and return TV state.

### AV PLAYING

1. Put through the power, connect the AV connection line as following:
2. Press the INPUT key to go to the AV status.



### DVD AUDIO OUTPUT

1. Put through the power, connect the AV connection line as following:
2. Press the INPUT key to go to the DVD status.



### DVD PLAYING

1. Put through the power and put the DVD disc on tray
2. Press INPUT key switch to the DVD status, it can auto play.


### SETUP MENU

- Press SETUP key to enter into menu. (Note: System prior enter into the first main item.)
- Press ◀/▶ key to choose left / right each main item.
- After choosing the main item, press CH+▲/CH-▼ to enter and choose up/down sub-item of the optioned one.
- After choosing the sub-item needed to adjust, press ▶ key to enter into the next menu of this item.
- Press CH+▲/CH-▼ key to choose up/down each item of the outspread menu.
- After choosing the needed item, press the OK key is ok.
- Press ◀ key to return to the sub-item from the outspread menu, press CH+▲/CH-▼ key to return to the main item from the sub-item.
- Press SETUP key to exit menu directly.

**Note:** when you adjust data (Sharpness, Brightness and Contrast) of item "Picture Quality Setup" in page "Video Setup", it just can change picture effect of video output signal, which can not effect picture effect of this unit.

(Remark: Original code:0000)

Please take out u-disk while playing the page of ongned set-up is active

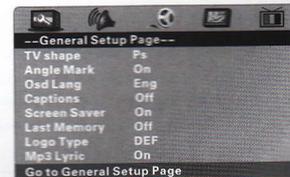

-5-

### CARD OR U DISC PLAYING

 
#### Description of Reading Card

Have the function of playing SD, MS, MMC and U disc. Include files:

- 1) DVD-AUDIO and DVD-VIDEO number format: Reduce number audio and number video (active picture).
- 2) Super VCD number format: MPEG2 reduce digital audio and digital video (active picture).
- 3) MPEG1 number format: MPEG1 reduce digital audio and video (active picture), as like CD2.0, VCD1.1, VCD1.0, DVCD.
- 4) Digital audio format: as like CD-DA, HDCD.
- 5) MP3/JPGE format: MP3 reduce audio and JPEG rest picture.
- 6) WMA: reduce digital audio.

#### Playing instruction:


1. Put through the power, connect well of SD, MMC, MS cards and U disc.
2. Press INPUT key switch to the DVD status, press SD/DVD key to display the switching menu. Press ▲/▼ to choose. display as following:



3. Press OK to confirm and it auto play.

4. Playing choice as following:

- When play the content of the memory card, the menu as following:

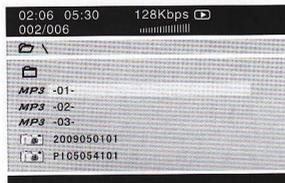


- Press CH+▲/CH-▼ key to choose up/down each folder.
- Press OK key to open the optioned folder and play automatically the content of each folder in sequence.
- Press CH+▲/CH-▼ key to choose up/down the item you want to play.
- Press OK key to affirm, then you can play the content of the optioned item.

When you want to choose picture (🖥) and video (📺) to play:

- Press CH+▲/CH-▼ key to choose the picture you want, show as follows:
- Then press the "OK" key for confiring, the pictures will slide display with full screen,
- Press the "STOP/RETURN" key return to the playing interface, Screen display as follow:

-6-

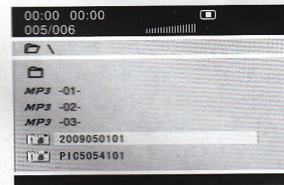


- Press OK key to affirm the optioned picture, then you can play on a full-screen.
- When playing picture, press ◀▶ key to choose front/back all the pictures; press ▲/▼/◀▶ to switch the display angle of the picture:  
 CH+▲ ————— turnover up/down; ◀ ————— clockwise rotation 90 degrees;  
 CH-▼ ————— turnover left/right; ▶ ————— counterclockwise rotation 90 degrees.
- Press STOP/RETURN key to the menu and end to play picture.

#### Attention:

- 1) When playing cards, only play the content you have stored, if no content, the corresponding item is not optional.
- 2) when play the songs that stored in the memory card, you can press the "voice +/-" button to adjust volumes.
- 3) the E-Book support the TXT formats.

### GAME OPERATION

#### 1. Game handle instruction:

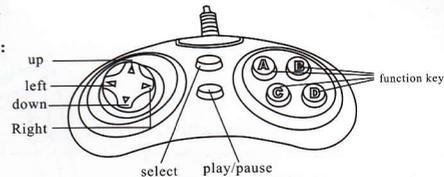

#### 2. Operation instruction:

- Connect power supply and game handle.
- Lay game disc or insert CARD or U disc with game content put through the power, press INPUT key to enter into DVD status, press SD/DVD key to choose DISC, CARD or USB playing, then press OK key to play the game.
- If there are several game page when playing game disc, press ◀▶ key on remote control to choose front/back each page, then press ▲/▼ (0-9 key, 10+) key to choose corresponding game and press OK to play the game..
- After entering into game, press SELECT key to choose single game or double game.
- Press START key to begin the game.
- Press ▲/▼/◀/▶ key to control the move direction. (Note: material function according to the content of the game.)
- Press ▲/🖥/📺 key to choose different function. (Note: material function according to the content of the game.)
- When playing the game, you can press START key to pause this game, repress this key to continue the game.
- Press MODE key and ▲ key at one time to end the game.

-7-