


fancy crystal watches

HOURS 小时

Example:
12:30

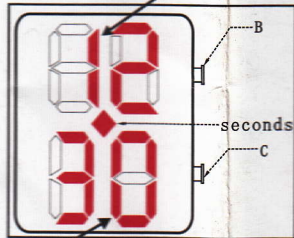


Minutes 分

Key: B ADJUST (View the current date second, adjust the date) —B: 时间调整键

Key: C Mode (switch key, can switch to hour, minute, month, day year and hr) —C: 功能转换键

Four kinds features:
chronograph, time, date, year,
A: time ways: minutes and hours
B: 12H/24H conversion
C: 2 button operation,
low power
D: month, hour, minute, stopwatch
display, year from 2000 to 2049

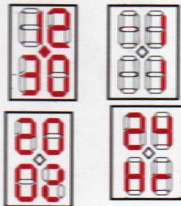

电池: 1粒CR2025进口电池, 当显示的LED灯变暗时, 要更换新电池。

读时间: 按动B键, 显示当前时间-小时和分钟。

利用时间调整模式设置正确的小时和分钟

时间设置: 按动B键开机状态模式下, 按下C键可以自到小时开始闪动, 按B键进行调整, 继续按C键调整分钟, 日期, 年和时制等功能, 完成后, 停止三秒退出

Battery: 1CR2025 battery imported from japan, when the display LED lights dimmed, we should replace the new battery.

Reading Time: Pressing the B button to display the current time-hours and minutes. Time adjustment mode is set to use the correct hours and minutes.

Time setting: press B Key switched mode, press the C Key to start from to, hour flashing on B Key to adjust to continue to press C Key to adjust the minutes, date, time system Deng years and feature complete, stop three seconds out.